



AUGER HOUSING/IMPELLER

#	Part #	Description
4	191079	Pulley, impeller
5	188909	Bearing assembly, flange
6	155377	Nut, hex flange 5/16-18
7	180355	Bolt, flat head, carriage 5/16-18 x 5/8
8	STD533106	Bolt, carriage 5/16-18 x 5/8
9	163183	Bolt, hex head
10	404930X615	Housing, auger
11	404933X479	Bar, scraper
12	178675X008	Bracket, corner discharge
13	175322	Base, discharge chute
14	STD551131	Washer, lock 5/16
15	19111507	Washer, flat
16	74940516	Screw, hex head 5/16-18 x 3/4
17	405637	Grease fitting
18	179582	Screw, hex head 5/16 x 1
19	73800400	Nut, hex lock 1/4-20
20	155377	Nut, hex lock 5/16-18
21	401347	Washer, flat 5/16
22	178777X479	Skid plate, rh
23	179246	Washer, nylon, friction
24	128636	Nut, wing
25	72270506	Bolt, carriage 5/16-18 x 3/4
26	174658	Bearing, auger
27	174697	Washer, thrust, 1"
28	192090	Bolt, shear
29	174762X479	Skid plate, lh
30	405973X479	Auger assembly, rh
31	405972X479	Auger assembly, lh
32	407768	O-ring
33	407769	Bushing, flange 3/4
34	174681	Washer, thrust 3/4
35	174684	Bearing, thrust 3/4
36	407757	Shaft, impeller
37	174683	Washer, thrust 5/8
38	407758	Bushing, flange 5/8
39	407767	Screw, hex head 5/16-18 x 3/4
40	407760	Plug, case
41	407761	Housing, gearbox, rh
42	407770	Seal, oil
43	407762	Bushing, flange, 1"
44	189282	Key, square 1/4 x 1/4 x 7/8
45	174659	Gear, worm
46	407764	Shaft, auger
47	407765	Housing, gearbox, lh
48	175321X479	Impeller assembly
49	74780426	Screw, hex head 1/4-20 x 1-5/8
50	175311	Gasket, gearbox
51	7836M	Pin, roll 3/16 x 1-1/8
54	198709	Stop
55	198638	Spacer
56	180684	Multi-wrench
57	196710	Gearbox assembly
58	411939	Plug, bearing hole
Not In Die	415535	Repair parts manual, english
Not In Die	415534	Operator's manual, scandinavian
Not In Die	415533	Operator's manual, european

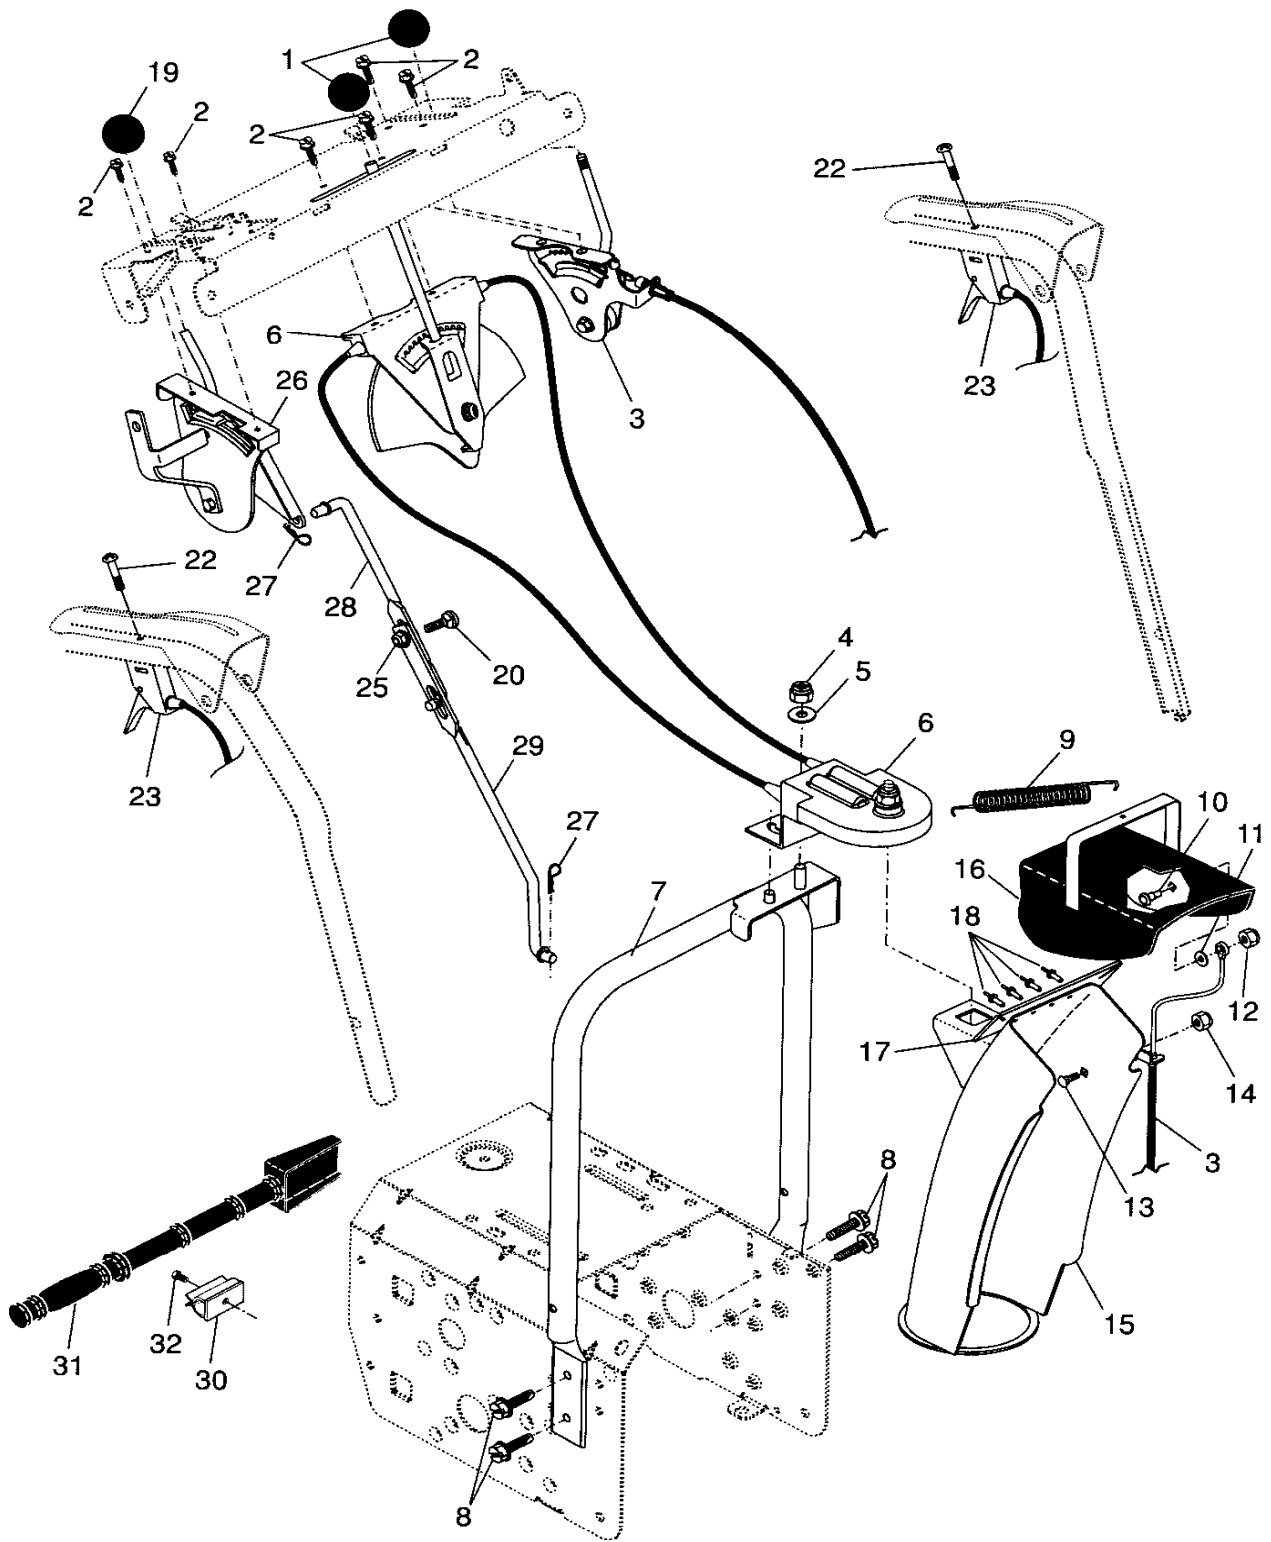


CONTROL PANEL/DISCHARGE CHUTE

#	Part #	Description
1	414280	Knob, lever
2	17501010	Screw #10-24 x 5/8
3	198475	Control assembly, deflector
4	STD541437	Nut, lock 3/8-16
5	STD551037	Washer, flat 3/8
6	404974	Control assembly, chute rotater
7	405784X479	Support, pivot
8	150078	Screw, hex head 5/16-18 x 3/4
9	184505	Spring, deflector
10	179829	Bolt, shoulder
11	179246	Washer, nylon, friction
12	171730	Nut, lock 1/4-20
13	STD533106	Bolt, carriage 5/16-18 x 5/8
14	166785	Nut, lock 5/16-18
15	404770X615	Chute assembly
16	178633X615	Deflector assembly
17	179145	Seal, deflector
18	128415	Rivet, blind
19	414281	Knob, speed control lever
20	72270506	Bolt, carriage 5/16-18 x 3/4
22	74041024	Screw #10-24 x 1-1/2
23	188303	Control assembly, power steering
25	155377	Nut, lock 5/16-18
26	198474	Lever assembly, speed control
27	169675	Retainer, hairpin
28	180445	Rod, upper, speed control
29	187716	Rod, lower speed control
30	405400	Clip, clean-out tool
31	192199	Tool, clean-out
32	194189	Screw
Not In Dis	415535	Repair parts manual, english
Not In Dis	415534	Operator's manual, scandinavian
Not In Dis	415533	Operator's manual, european

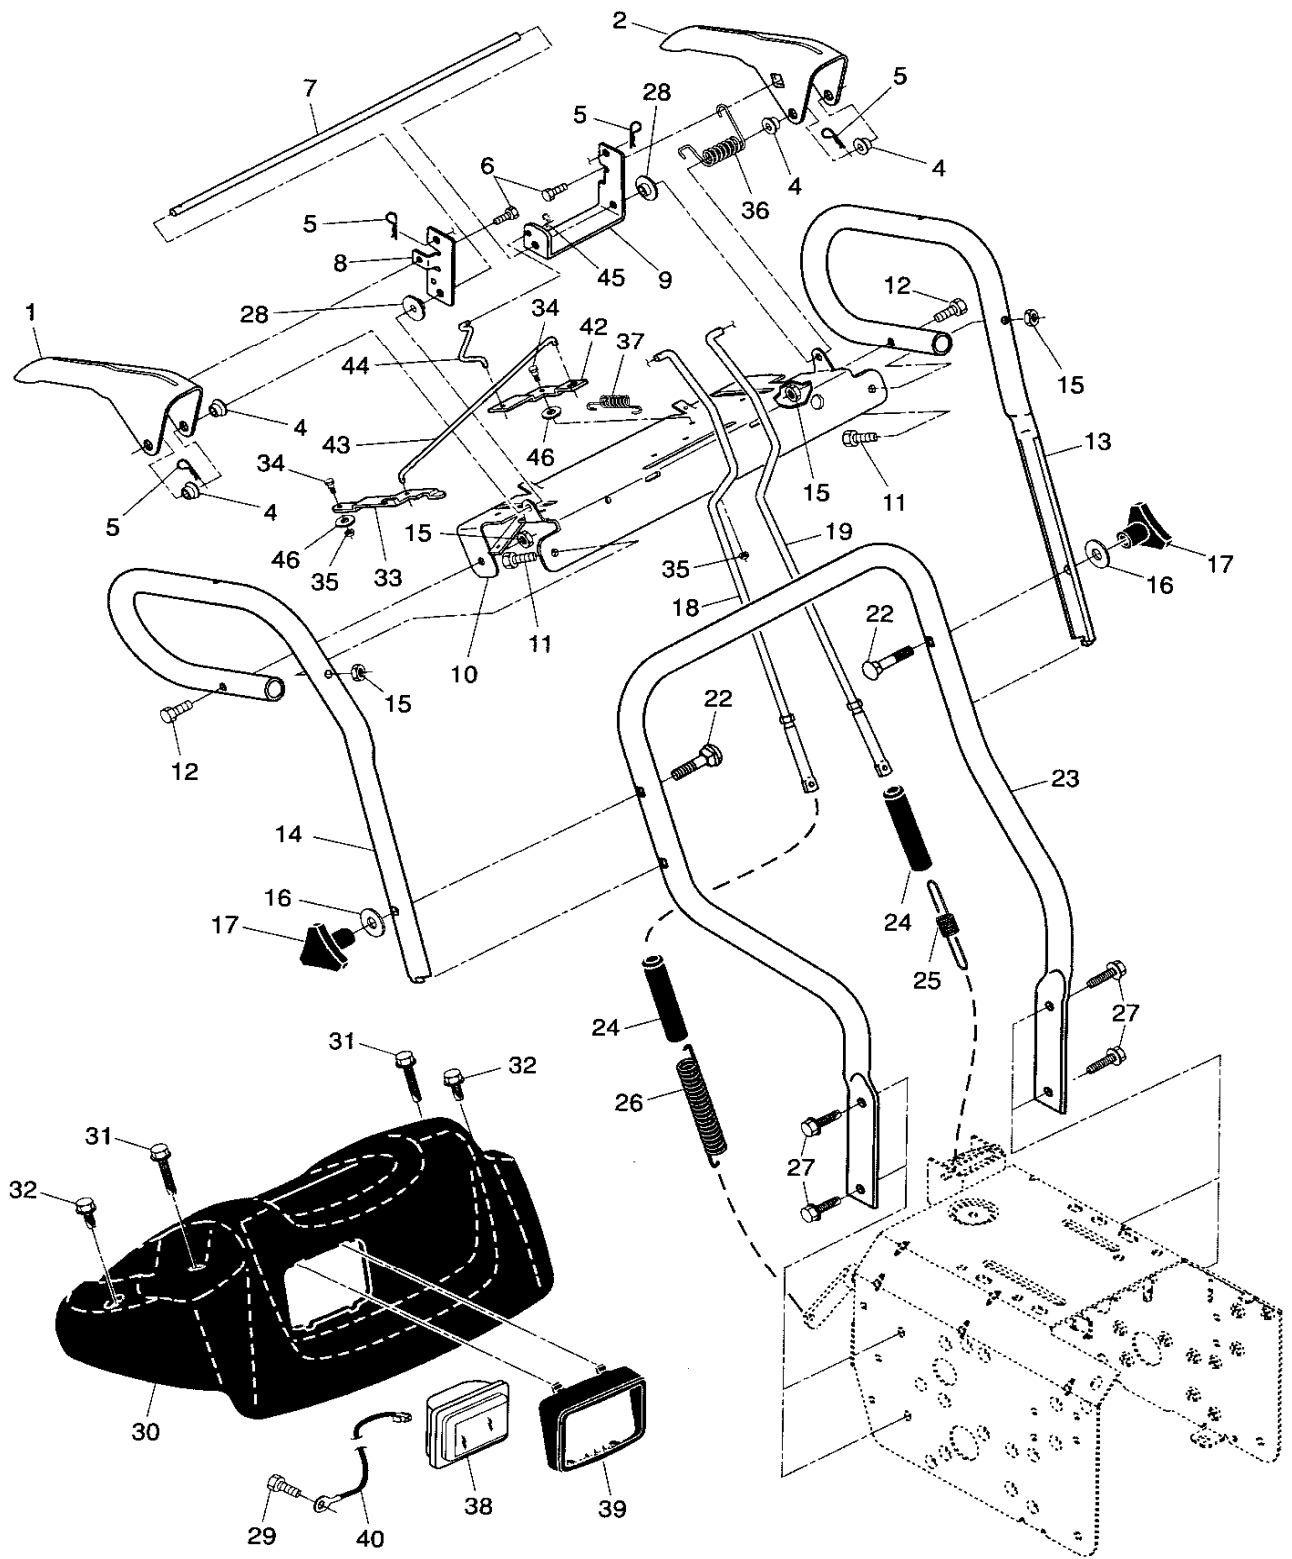


HANDLES

#	Part #	Description
1	405783X479	Lever, auger control, rh
2	405999X479	Lever, traction drive control, lh
4	178888	Bushing, flange
5	169675	Retainer, hairpin
6	17060408	Screw, hex head 1/4-20 x 1/2
7	178652	Rod, interlock
8	196333X008	Arm, impeller rod
9	196334X008	Arm, traction rod
10	196619X479	Panel, control
11	STD523115	Screw, hex head 5/16-18 x 1-1/2
12	74780528	Screw, hex head, 5/16-18 x 1-3/4
13	414519X479	Handle tube, lh
14	414518X479	Handle tube, rh
15	166785	Nut, lock 5/16-18
16	STD551037	Washer, flat 3/8
17	178899	Knob, handle
18	180480	Rod, auger control
19	405740	Rod, traction control
22	72120618	Bolt, carriage 3/8-16 x 2-1/4
23	401940X479	Handle tube, lower
24	180447	Sleeve, spring
25	180926	Spring, traction drive
26	178669	Spring, auger control
27	17000616	Screw, hex head 3/8-16 x 1
28	412680	Bushing, pivot
29	193072	Screw, ground wire, headlight to blower housing
30	182906	Console, panel
31	175262	Screw, hex head, tapping #10-24 x 1-1/4
32	184471	Screw, hex head, tapping #10-24 x 1/2
33	196335X008	Latch, interlock
34	401369	Bolt, shoulder
35	STD541425	Nut, lock 1/4-20
36	178831	Spring, torsion, lever
37	193885	Spring, interlock
38	178666	Headlight, halogen (includes bulb)
38A	401620	Bulb, halogen
39	178668	Bezel, headlight
40	180964	Harness, headlight (halogen)
42	196336X08	Lever, interlock
43	199638	Rod, latch, interlock
44	196338	Rod, arm, interlock
45	700279	Clip
46	57079	Washer, friction
Not In Dia	415535	Repair parts manual, english
Not In Dia	415534	Operator's manual, scandinavian
Not In Dia	415533	Operator's manual, european

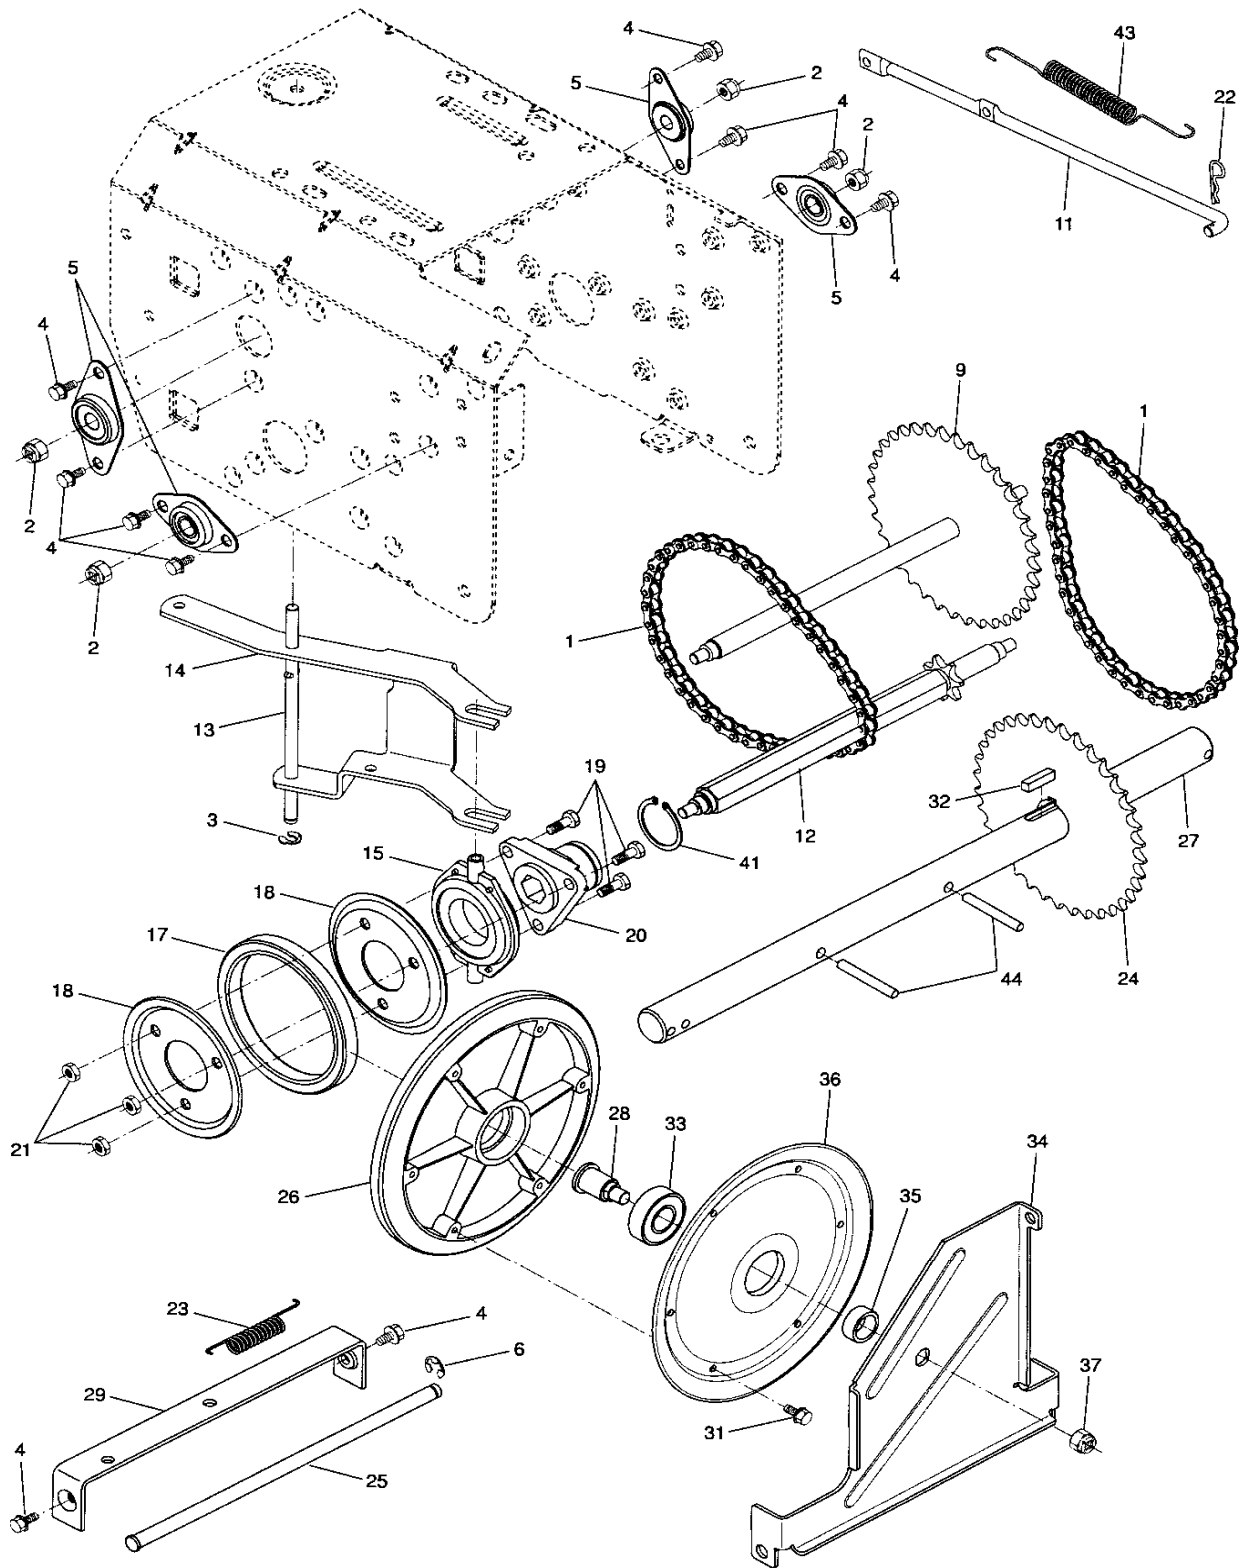


DRIVE

#	Part #	Description
1	401619	Chain, drive
2	166785	Nut, lock 5/16-18
3	402882	Clip, retainer
4	17490508	Bolt, hex head 5/16-18 x 1/2
5	408981	Bearing, flange
6	12000007	E-ring, retainer
9	402855	Sprocket & shaft assembly
11	402568	Rod, clutch
12	402187	Shaft, hex
13	402310	Pivot rod, shifter
14	401732X479	Yoke, shifter
15	175344	Trunnion bearing assembly
17	179831	Ring, rubber wheel
18	198176X479	Plate, rubber wheel
19	74760514	Screw, hex head 5/16-18 x 7/8
20	178613	Hub, rubber wheel
21	73930500	Nut, lock 5/16-18
22	169675	Retainer, hairpin
23	180135	Spring, bias
24	402691	Sprocket, axle shaft
25	402652	Pivot rod, swing plate
26	401820	Plate, drive
27	404307	Axle shaft assembly
28	402504	Shaft, friction pulley
29	401984X479	Bracket, shifter, speed
31	17541008	Screw, cap head
32	189282	Key, square
33	198791	Bearing, ball
34	402394	Plate, swing
35	402511	Spacer, bearing
36	402393	Pulley, friction
37	409148	Nut, lock 5/16-18
41	12000012	Ring, retaining
43	402878	Spring, return
44	9465M	Pin, roll
Not In Dia	415535	Repair parts manual, english
Not In Dia	415534	Operator's manual, scandinavian
Not In Dia	415533	Operator's manual, european

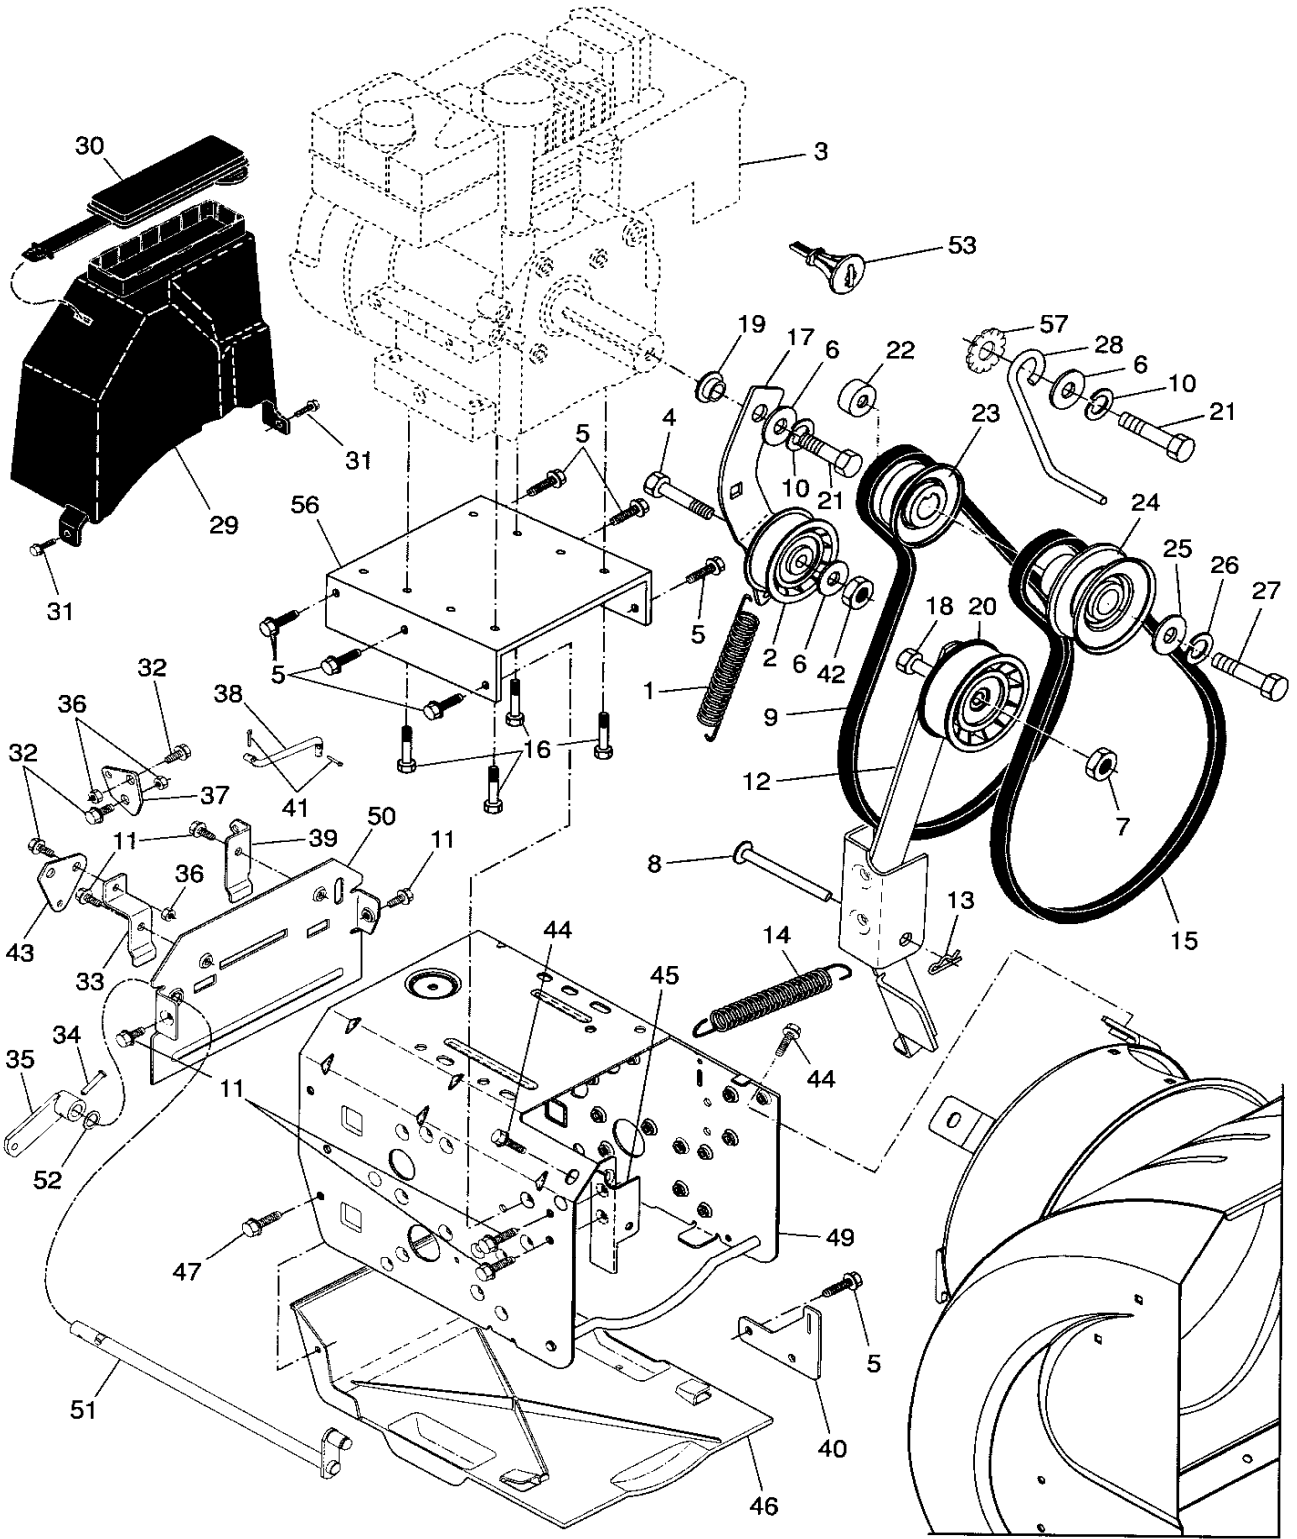


CHASSIS/ENGINE/PULLEYS

#	Part #	Description
1	414557	Spring, traction idler
2	180522	Pulley, idler (2-1/4)
3	N/P	Engine, briggs & stratton, model number 20m314-0949-e1
4	STD523112	Screw, hex head 5/16-18 x 1-1/4
5	150078	Screw
6	59289	Washer, flat
7	166785	Nut, jam lock 5/16-18
8	175330	Pin, idler pivot
9	416954	V-belt, traction drive
10	STD551131	Washer, lock 5/16
11	17490508	Screw, hex washer head 5/16-18 x 1/2
12	410420	Impeller arm assembly
13	85179	Retainer, hairpin
14	178828	Spring, brake
15	408007	V-belt, impeller drive
16	150406	Screw, hex head 3/8-16 x 1-1/4
17	187786X008	Arm, idler
18	STD523115	Screw, hex head 5/16-18 x 1-1/2
19	175331	Bushing, idler pivot
20	180523	Pulley, idler (2-3/4)
21	74610516	Screw, hex head 5/16-24 x 1
22	409475	Spacer, engine pulley
23	180478	Pulley, engine, traction drive
24	179157	Pulley, engine, impeler drive
25	400026	Washer, flat 3/8
26	850263	Washer, lock 3/8
27	851084	Screw, hex head 3/8-24 x 1-3/8
28	155452	Guide, belt
29	192213	Belt cover assembly (includes toolbox cover)
30	178830	Cover, toolbox
31	STD512505	Screw, hex head 1/4-20 x 1/2
32	402881	Bolt, shoulder 5/16-18
33	403096X004	Bellcrank shifter
34	198580	Clevis pin
35	405485	Arm, auger control
36	191730	Locknut, hex
37	402856X004	Plate, clutch
38	187101	Link, speed control
39	416717X004	Bracket, clutch
40	413429X479	Bracket, traction
41	700279	Hairpin, cotter 3/32 x 1/2
42	73930500	Locknut, hex
43	403097X004	Plate, shifter
44	17000616	Screw, hex head
45	184789	Pivot bracket, impeller idler arm
46	410877	Pan, frame bottom
47	184471	Screw
49	409346X615	Frame assembly
50	402685X615	Plate, frame end
51	406109	Shaft, auger control
52	57079	Washer, hardened
53	193071	Key, safety
56	417015X615	Mounting plate, engine
57	11050500	Washer, lock, external tooth
Not In Dia	415535	Repair parts manual, english
Not In Dia	415534	Operator's manual, scandinavian
Not In Dia	415533	Operator's manual, european

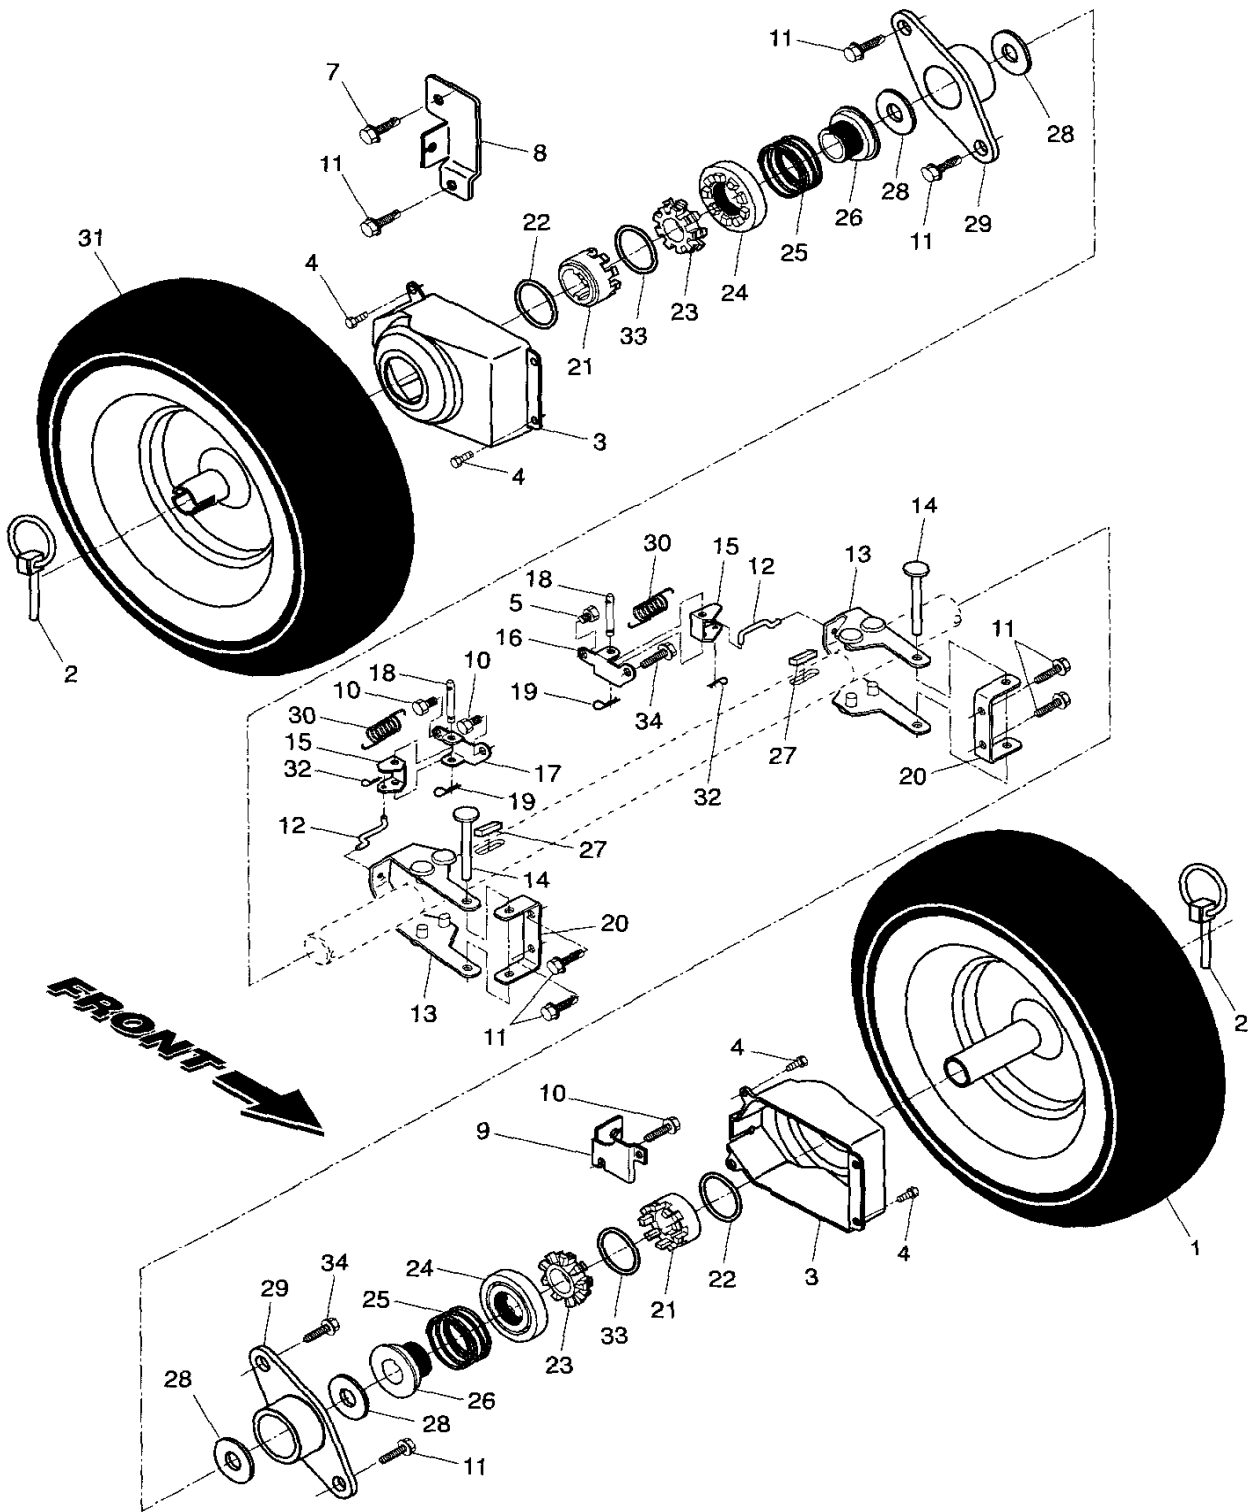

WHEELS

#	Part #	Description
1	196752X417	Wheel assembly, 16", with power steering, lh
2	155443	Pin, klik 1/4
3	405161	Cover, power steering
4	184471	Screw, shoulder, hex head #10-24 x 1/2
7	17060410	Screw, hex head 3/8-16 x 1
8	410294	Bracket, steering cable, rh
9	410293	Bracket, steering cable, lh
10	17600406	Screw, cap hex head 5/16-18 x 3/4
11	17490508	Screw, hex head 5/16-18 x 1/2
12	405077	Link, steering lever
13	193506X479	Lever assembly, steering
14	182015	Pin, steering lever
15	194944X008	Bellcrank
16	194939X008	Bracket assembly, lh steering
17	194943X008	Bracket assembly, rh steering
18	181847	Pin, steering bellecrank
19	85179	Retainer, hairpin
20	179148X479	Bracket, lever assembly
21	192126	Drive, wheel
22	182466	Ring, wire retainer
23	187622	Lobe, wheel
23	182466	Ring, wire retainer
24	194941	Slide, clutch
25	179139	Spring, clutch slide
26	194940	Lobe, axle
27	189282	Key, square 1/4 x 1/4 x 7/8
28	174697	Washer, thrust (1")
29	179830	Bearing, axle
30	193885	Spring, return, steering latch
31	196753X417	Wheel assembly, 16", with power steering, rh
32	700279	Clip, retainer
33	12000045	Ring, retaining
34	146315	Screw, tapping, hex head 5/16-18 x 3/4
Not In Dia	415535	Repair parts manual, english
Not In Dia	415534	Operator's manual, scandinavian
Not In Dia	415533	Operator's manual, european

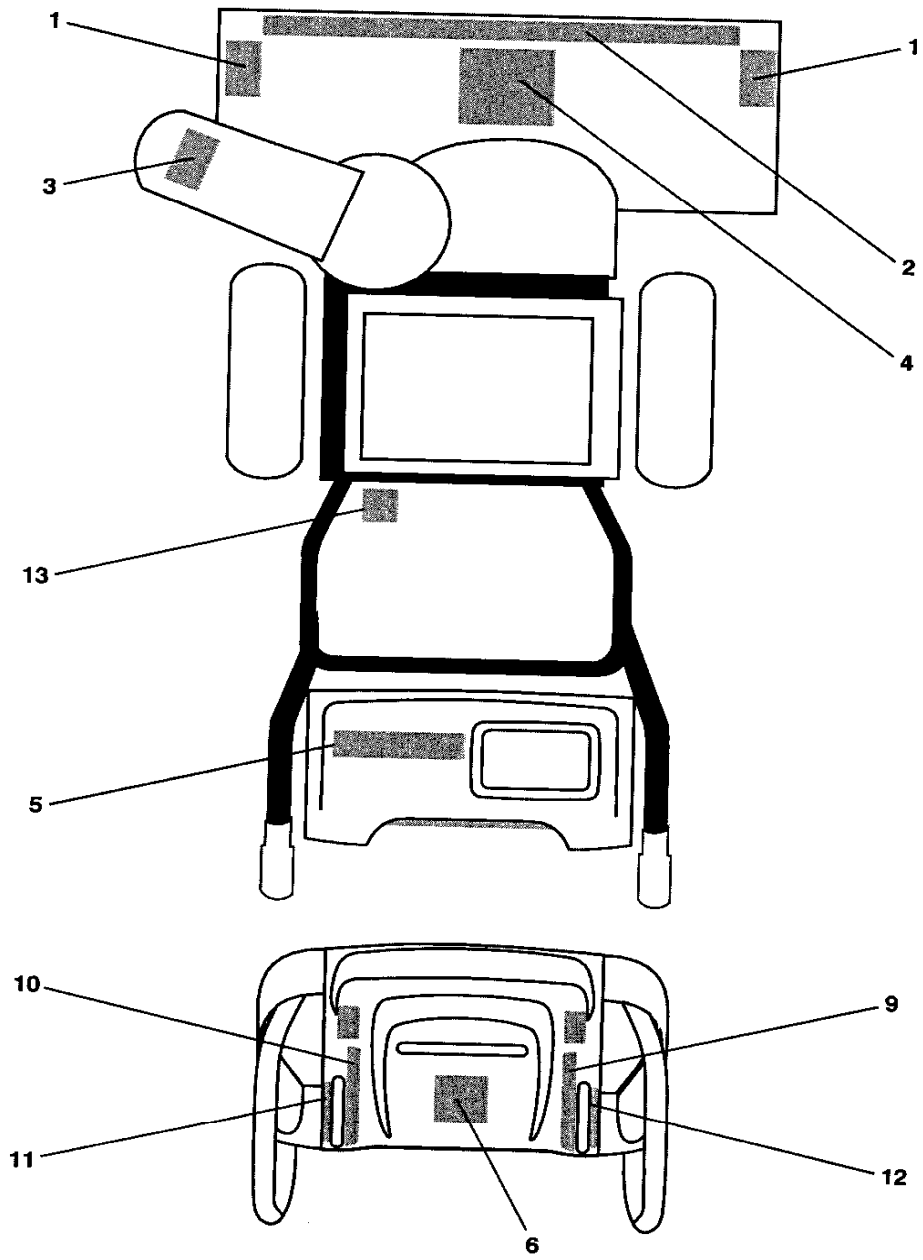

DECALS

<u>#</u>	<u>Part #</u>	<u>Description</u>
1	199683	Decal, danger
2	416448	Decal, craftsman, 1450 s/76cm
3	199682	Decal, danger, deflector
4	184045	Decal, danger
5	183876	Decal, craftsman
6	184030	Decal, instruction
9	415477	Decal, speed control
10	184031	Decal, remote deflector
11	415459	Decal, lh trigger
12	415460	Decal, rh trigger
13	180433	Decal, sound level
Not In Dis	415535	Repair parts manual, english
Not In Dis	415534	Operator's manual, scandinavian
Not In Dis	415533	Operator's manual, european