 


LR 44 TK (K500) - Illustrated parts list

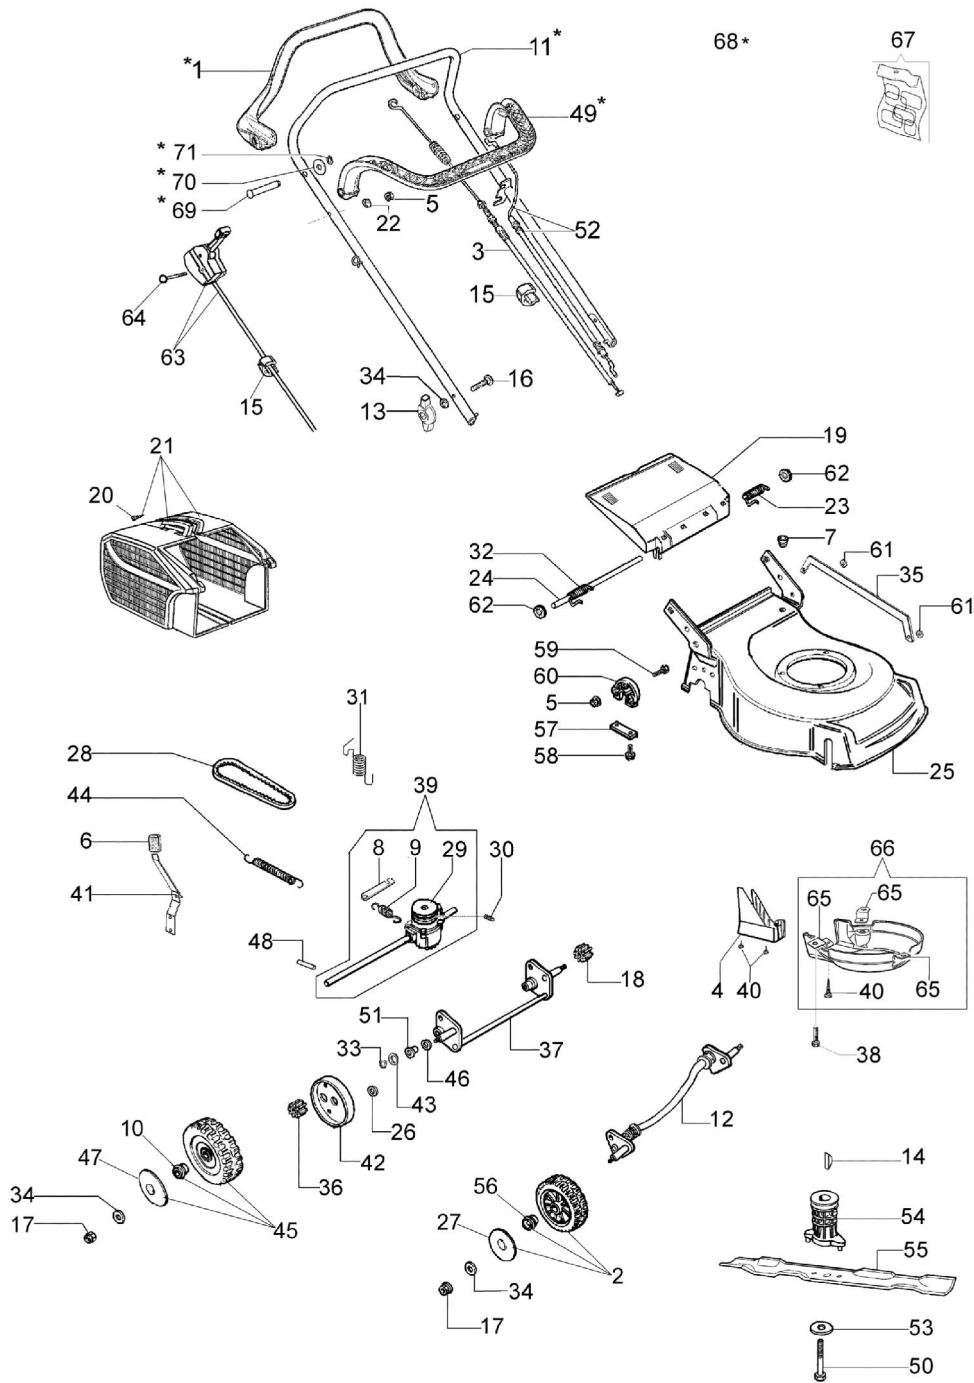



LR 44 TK (K500) - Illustrated parts list



Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	66060356AR	Traction lever				
2	2	66110281	Wheel kit				
3	1	66060058CR	Tract.wire				
4	1	66100013	Guard				
5	1	3914006R	Nut				
6	1	66070021	Handle				
7	1	66030038	Grommet				
8	1	66070100	Traction lever				
9	1	66070099R	Spring				
10	4	66030057	Bearing				
11	1	66060397AR	Handle				
12	1	66070024B	Front axle				
13	2	4119013AR	Knob				
14	1	8202126R	Key				
15	2	66060231	Band				
16	2	3910015R	Screw				
17	4	3933032R	Nut				
18	1	66030228	Left sprocket				
19	1	66110014R	Shutter				
20	4	3960013R	Screw				
21	1	66112001R	Complete grassbag				
22	2	3918009R	Washer				
23	1	66110017R	Spring				
24	1	66110026	Deflector axle				
25	1	66100006R	Deck				
26	2	3916012	Washer				
27	2	66110278R	Wheel cover				
28	1	3047026R	Belt				
29	1	66070450R	Pulley	matr. 6301118618			BT5-069-06/11
30	1	3801010R	Screw				
31	1	66070035AR	Spring				
32	1	66110018R	Spring				
33	1	3024012	Ring				
34	7	3916008R	Washer				
35	1	66100012	Rod				
36	1	66030227	Right sprocket				
37	1	66070013B	Rear axle				
38	3	3806076	Screw				
39	1	66070017DR	Transmission	matr. 6301118618			BT5-069-06/11
40	2	011200035R	Screw				
41	1	66070018	Lever				

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
42	1	66070060	Wheel cover				
43	1	66030044	Whaser				
44	1	66070036R	Spring				
45	2	66062097	Wheel kit				
46	2	8202311	Ring				
47	2	66030145R	Wheel cover				
48	1	66060010R	Pin				
49	1	66060106	Brake lever				
50	1	3906150R	Screw				
51	2	66060030R	Bushing				
52	1	66060108R	Engine break cable				
53	1	66060384R	Washer				
54	1	66030256R	Hub Ø22,2mm				
55	1	66100044R	Blade				
56	4	66030081R	Bearing				
57	2	66030039	Plate				
58	4	3960031R	Screw				
59	6	3801022	Screw				
60	2	66030049	Support				
61	2	3045035R	Retainer washer				
62	2	3045034R	Retainer washer				
63	1	66060164BR	Compl. throttle				
64	1	3910020R	Screw				
65	3	66070228	Support				
66	1	66070233	Compl. guard				
67	1	66070381	Labels set				
68	1	66060425R	Handle kit				
69	2	66060381AR	Pin				
70	2	3064037	Washer				
71	2	3024006	Snap ring				

  LR 44 TK (K500) - Cylinder head and valve

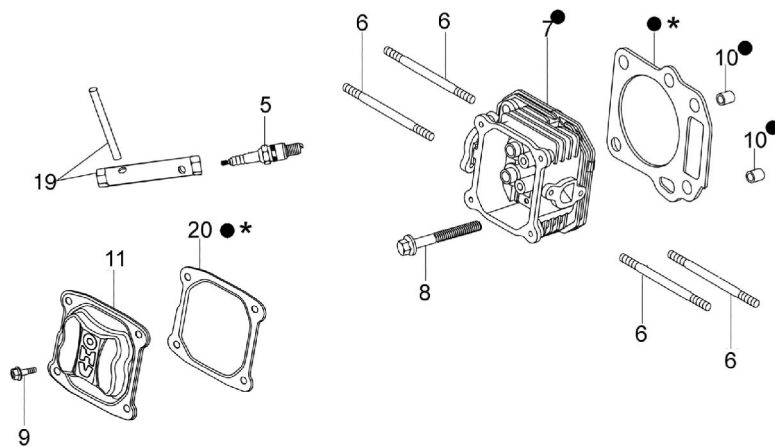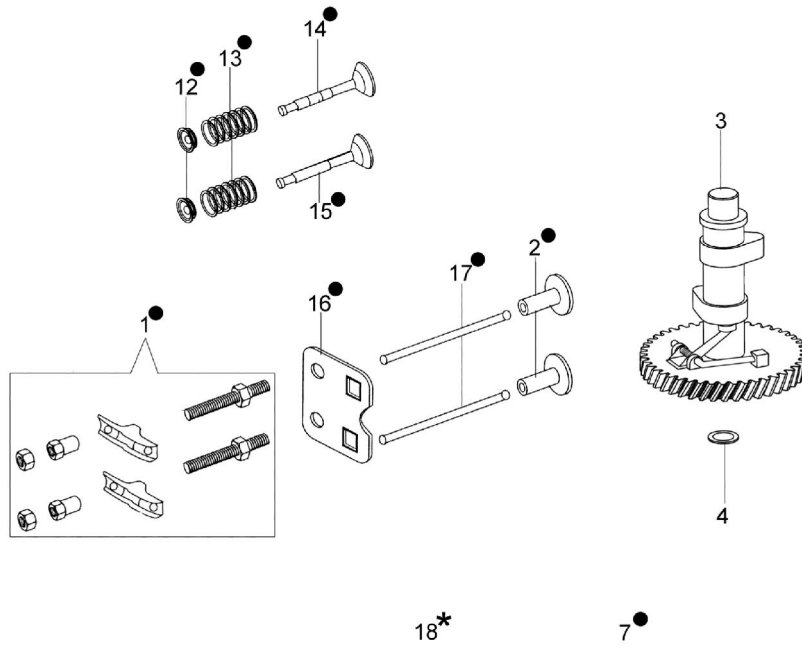


LR 44 TK (K500) - Cylinder head and valve



Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	L66150086	Arm assy.				
2	2	L66150099	Slide				
3	1	L66150101	Camshaft assy.				
4	1	L66150100	Washer				
5	1	3055123	Spark plug				
6	4	L66150008	Stud				
7	1	L66150215	Head comp.cylinder				
8	4	L66150005	Screw				
9	4	L66150001	Screw				
10	2	L66150012	Bushing				
11	1	L66150002	Cover				
12	2	L66150088	Guide spring				
13	2	L66150090	Spring				
14	1	L66150091	Intake valve				
15	1	L66150093	Exhaust valve				
16	1	L66150095	Plate				
17	2	L66150097	Rod				
18	1	L66150227	Gasket set				
19	1	66060414	19 x 21 mm wrench				
20	1	L66150471	Gasket				

 LR 44 TK (K500) - Cylinder and crankcase

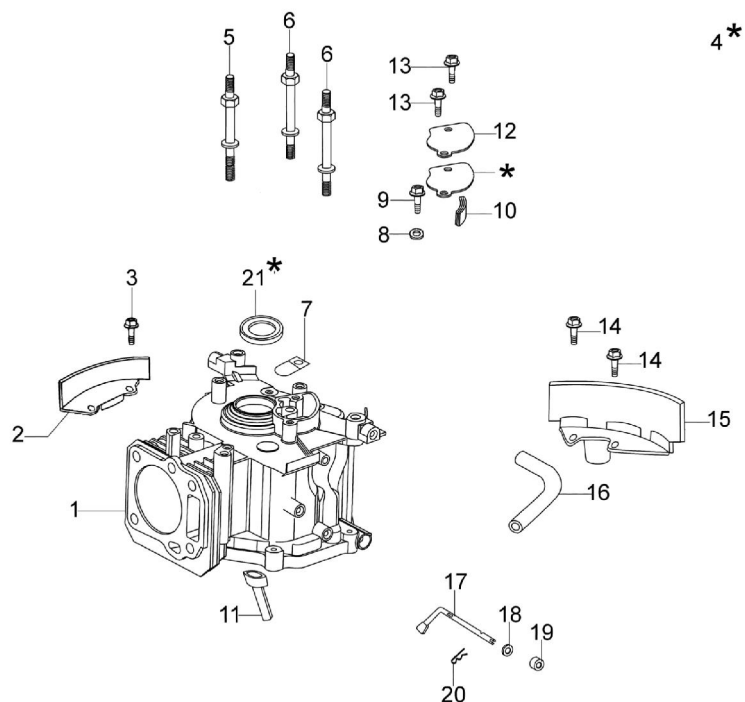


LR 44 TK (K500) - Cylinder and crankcase



Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150224	Crankcase assy				
2	1	L66150225	Shield,tank side				
3	2	L66150016	Screw				
4	1	L66150227	Gasket set				
5	1	L66150018	Stud				
6	2	L66150019	Stud				
7	1	L66150020	Reed valve				
8	1	L66150021	Washer				
9	1	L66150022	Screw				
10	1	L66150023	Filter,breather				
11	1	L66150232	Packing, breather chamber				
12	1	L66150226	Cap,breather chamber				
13	2	L66150029	Screw				
14	2	L66150030	Screw				
15	1	L66150031	Guard				
16	1	L66150229	Hose				
17	1	L66150034	Shaft,governor arm				
18	1	L66150035	Washer				
19	1	L66150036	Gasket				
20	1	L66150037	Spring lock				
21	1	L66150017	Seal ring				

 LR 44 TK (K500) - Crankcase cover



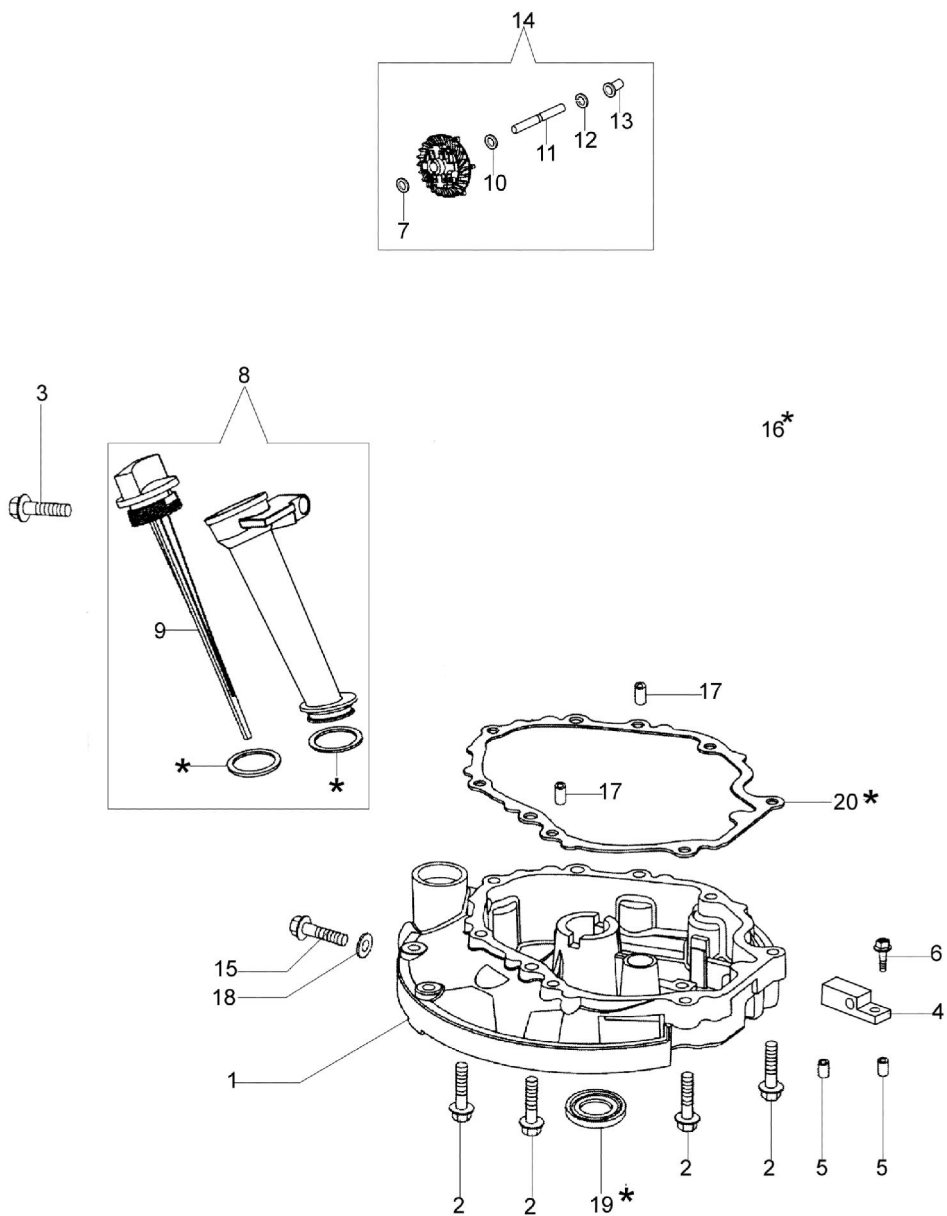


LR 44 TK (K500) - Crankcase cover



Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150230	Cover				
2	7	L66150046	Screw				
3	3	L66150069	Screw				
4	1	L66150049	Plate,governor holder				
5	2	L66150050	Bushing				
6	1	L66150051	Screw				
7	1	L66150052	Washer				
8	1	L66150068	Cap assy				
9	1	L66150067	Oil cap				
10	1	L66150053	Washer				
11	1	L66150054	Shaft,governor				
12	1	L66150055	Seeger				
13	1	L66150056	Slide control				
14	1	L66150057	Governor assy				
15	1	L66150064	Screw				
16	1	L66150227	Gasket set				
17	2	L66150061	Bushing				
18	1	L66150063	Washer				
19	1	L66150048	Seal ring				
20	1	L66150463	Oil seal				

   LR 44 TK (K500) - Crankshaft and piston

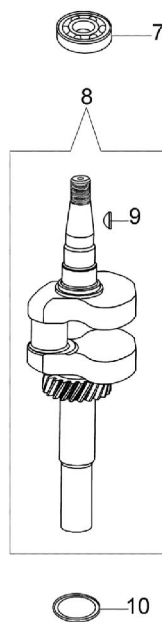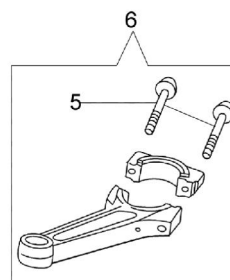
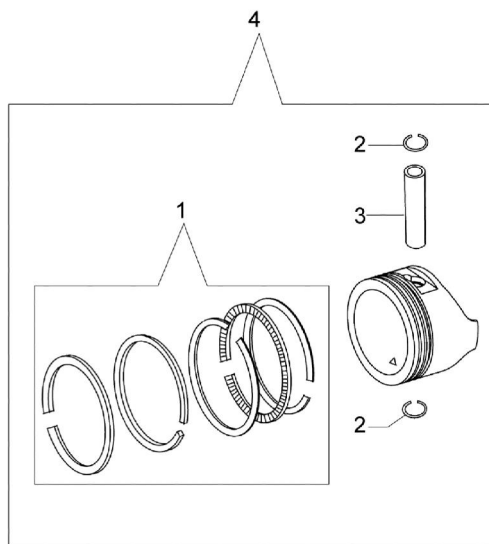


LR 44 TK (K500) - Crankshaft and piston



Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150070	Piston ring set				
2	2	L66150074	Snap ring				
3	1	L66150076	Piston pin				
4	1	L66150217	Piston assy				
5	2	L66150078	Bolt,connecting rod				
6	1	L66150079	Connecting rod set				
7	1	L66150085	Bearing				
8	1	L66150082	Crankshaft comp				
9	1	L66150081	Key				
10	1	L66150084	Washer				

  LR 44 TK (K500) - Starter assy and flywheel

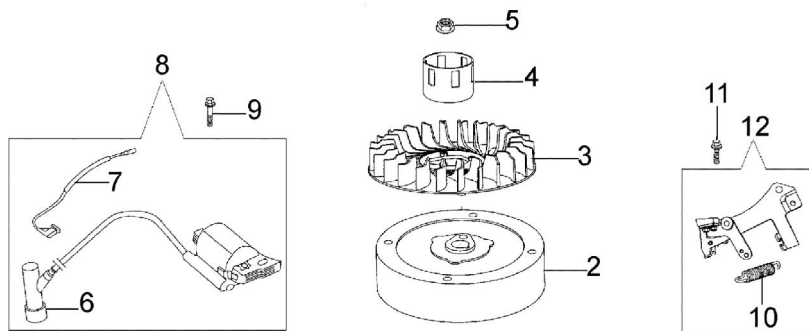
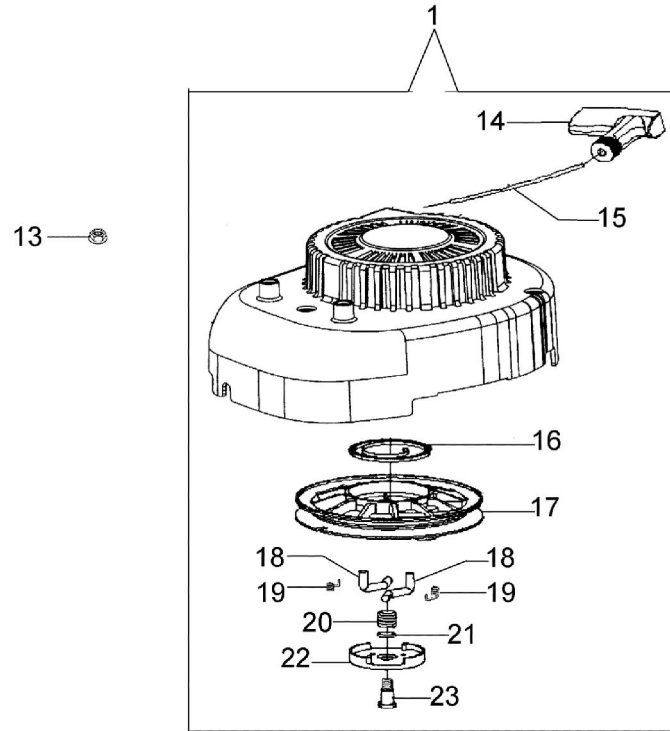


LR 44 TK (K500) - Starter assy and flywheel



Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150233	Starter assy				
2	1	L66150144	Flywheel				
3	1	L66150146	Fan				
4	1	L66150147	Pulley				
5	1	L66150148	Nut				
6	1	L66150149	Spark plug cap				
7	1	L66150150	Wire, stopping engine				
8	1	L66150151	Ignition coil				
9	1	L66150152	Screw				
10	1	L66150153	Spring				
11	2	L66150152	Screw				
12	1	L66150228	Flyweheel brake				
13	1	L66150235	Nut				
14	1	L66150270	Handle				
15	1	L66150269	Starter rope				
16	1	L66150266	Spring, recoil starter				
17	1	L66150265	Pulley				
18	2	L66150263	Pawl				
19	2	L66150264	Spring				
20	1	L66150262	Spring				
21	1	L66150261	Washer				
22	1	L66150260	Slide				
23	1	L66150259	Screw				

  LR 44 TK (K500) - Carbuirettor

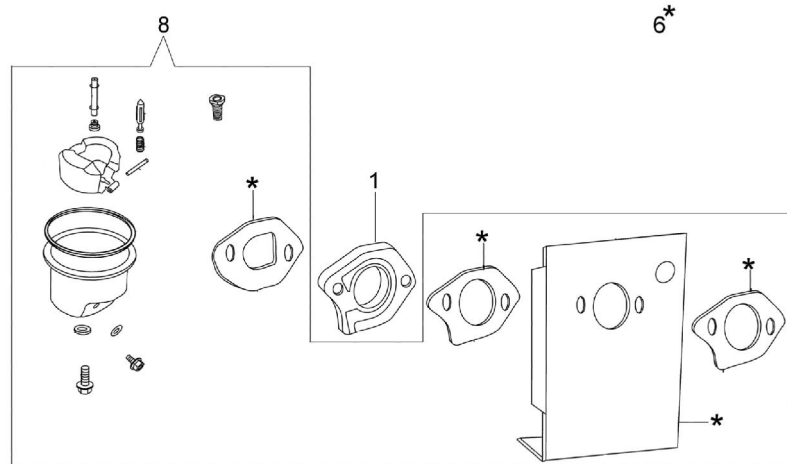
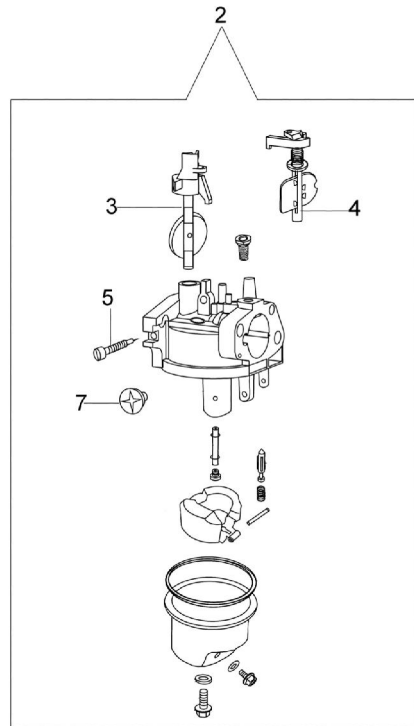


LR 44 TK (K500) - Carburettor



Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150116	Insulator				
2	1	L66150142	Carburetor				
3	1	L66150131	Throttle valve assy.				
4	1	L66150135	Air lever				
5		-	Not available for this product				
6	1	L66150227	Gasket set				
7	1	L66150122	Screw				
8	1	L66150211	Repair kit				

  LR 44 TK (K500) - Air filter and muffler


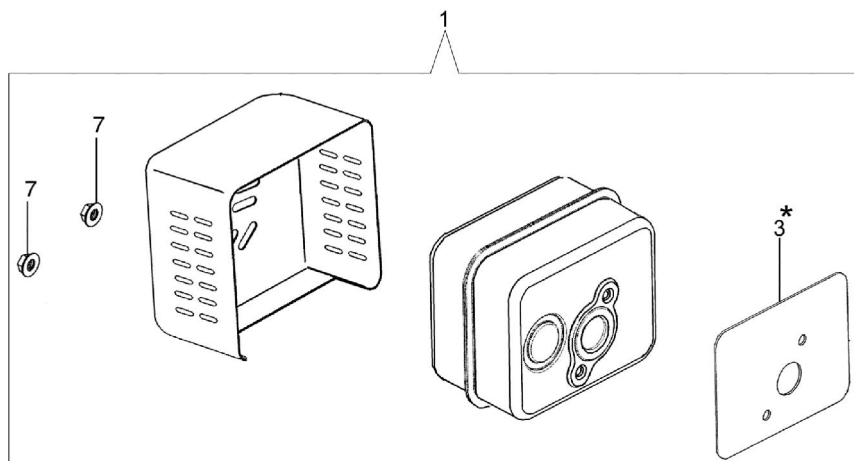
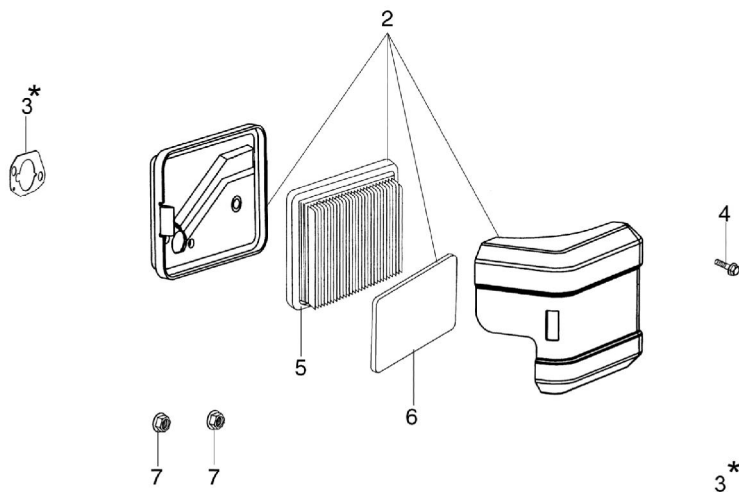


LR 44 TK (K500) - Air filter and muffler



Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150219	Muffler assy.				
2	1	L66150159	Air filter kit				
3	1	L66150227	Gasket set				
4	2	L66150165	Screw				
5	1	L66150155	Air filter				
6	1	L66150157	Filter,outer				
7	1	L66150164	Nut				

   LR 44 TK (K500) - Control lever

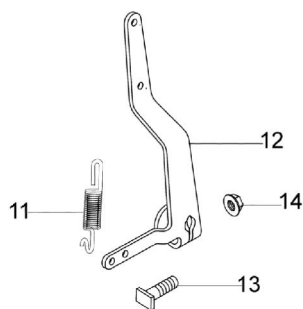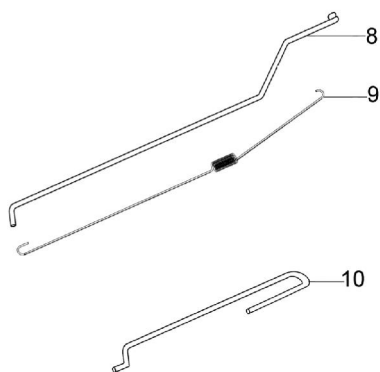
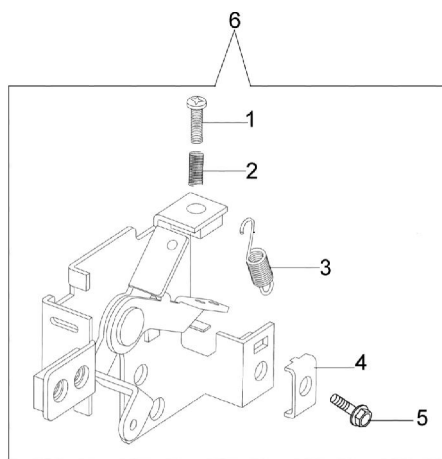


LR 44 TK (K500) - Control lever



Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150168	Screw,control adjusting				
2	1	L66150169	Spring				
3	1	L66150170	Spring				
4	1	L66150171	Plate				
5	1	L66150172	Bolt m5x16				
6	1	L66150173	Complete lever				
7	2	L66150174	Screw				
8	1	L66150236	Rod				
9	1	L66150237	Spring				
10	1	L66150177	Throttle rod				
11	1	L66150179	Spring				
12	1	L66150181	Arm,governor				
13	1	L66150183	Screw				
14	1	L66150164	Nut				

  LR 44 TK (K500) - Fuel tank and cover

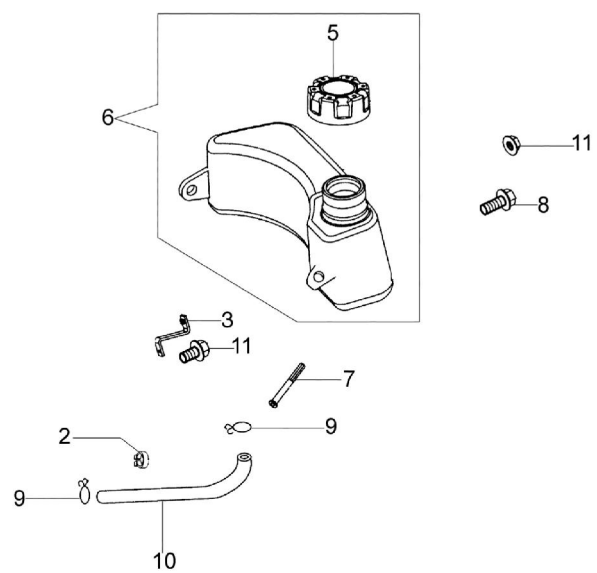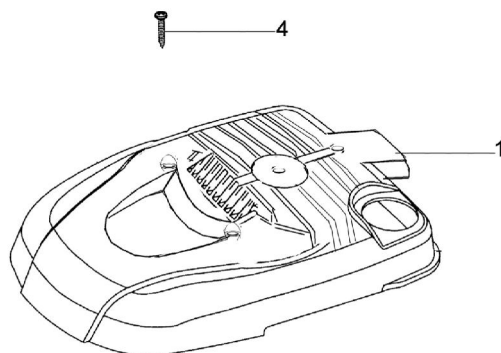

LR 44 TK (K500) - Fuel tank and cover



Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150234	Cover				
2	1	L66150207	Clip				
3	1	L66150239	Holder, fuel tank				
4	1	L66150240	Screw				
5	1	L66150193	Cap				
6	1	L66150238	Tank				
7	1	L66150204	Filter				
8	1	L66150197	Screw				
9	2	L66150198	Clip				
10	1	L66150199	Hose				
11	1	L66150203	Screw				