 


# CRAFTSMAN 21" 4HP SNOW THROWER 536.881400

## DRIVE COMPONENTS

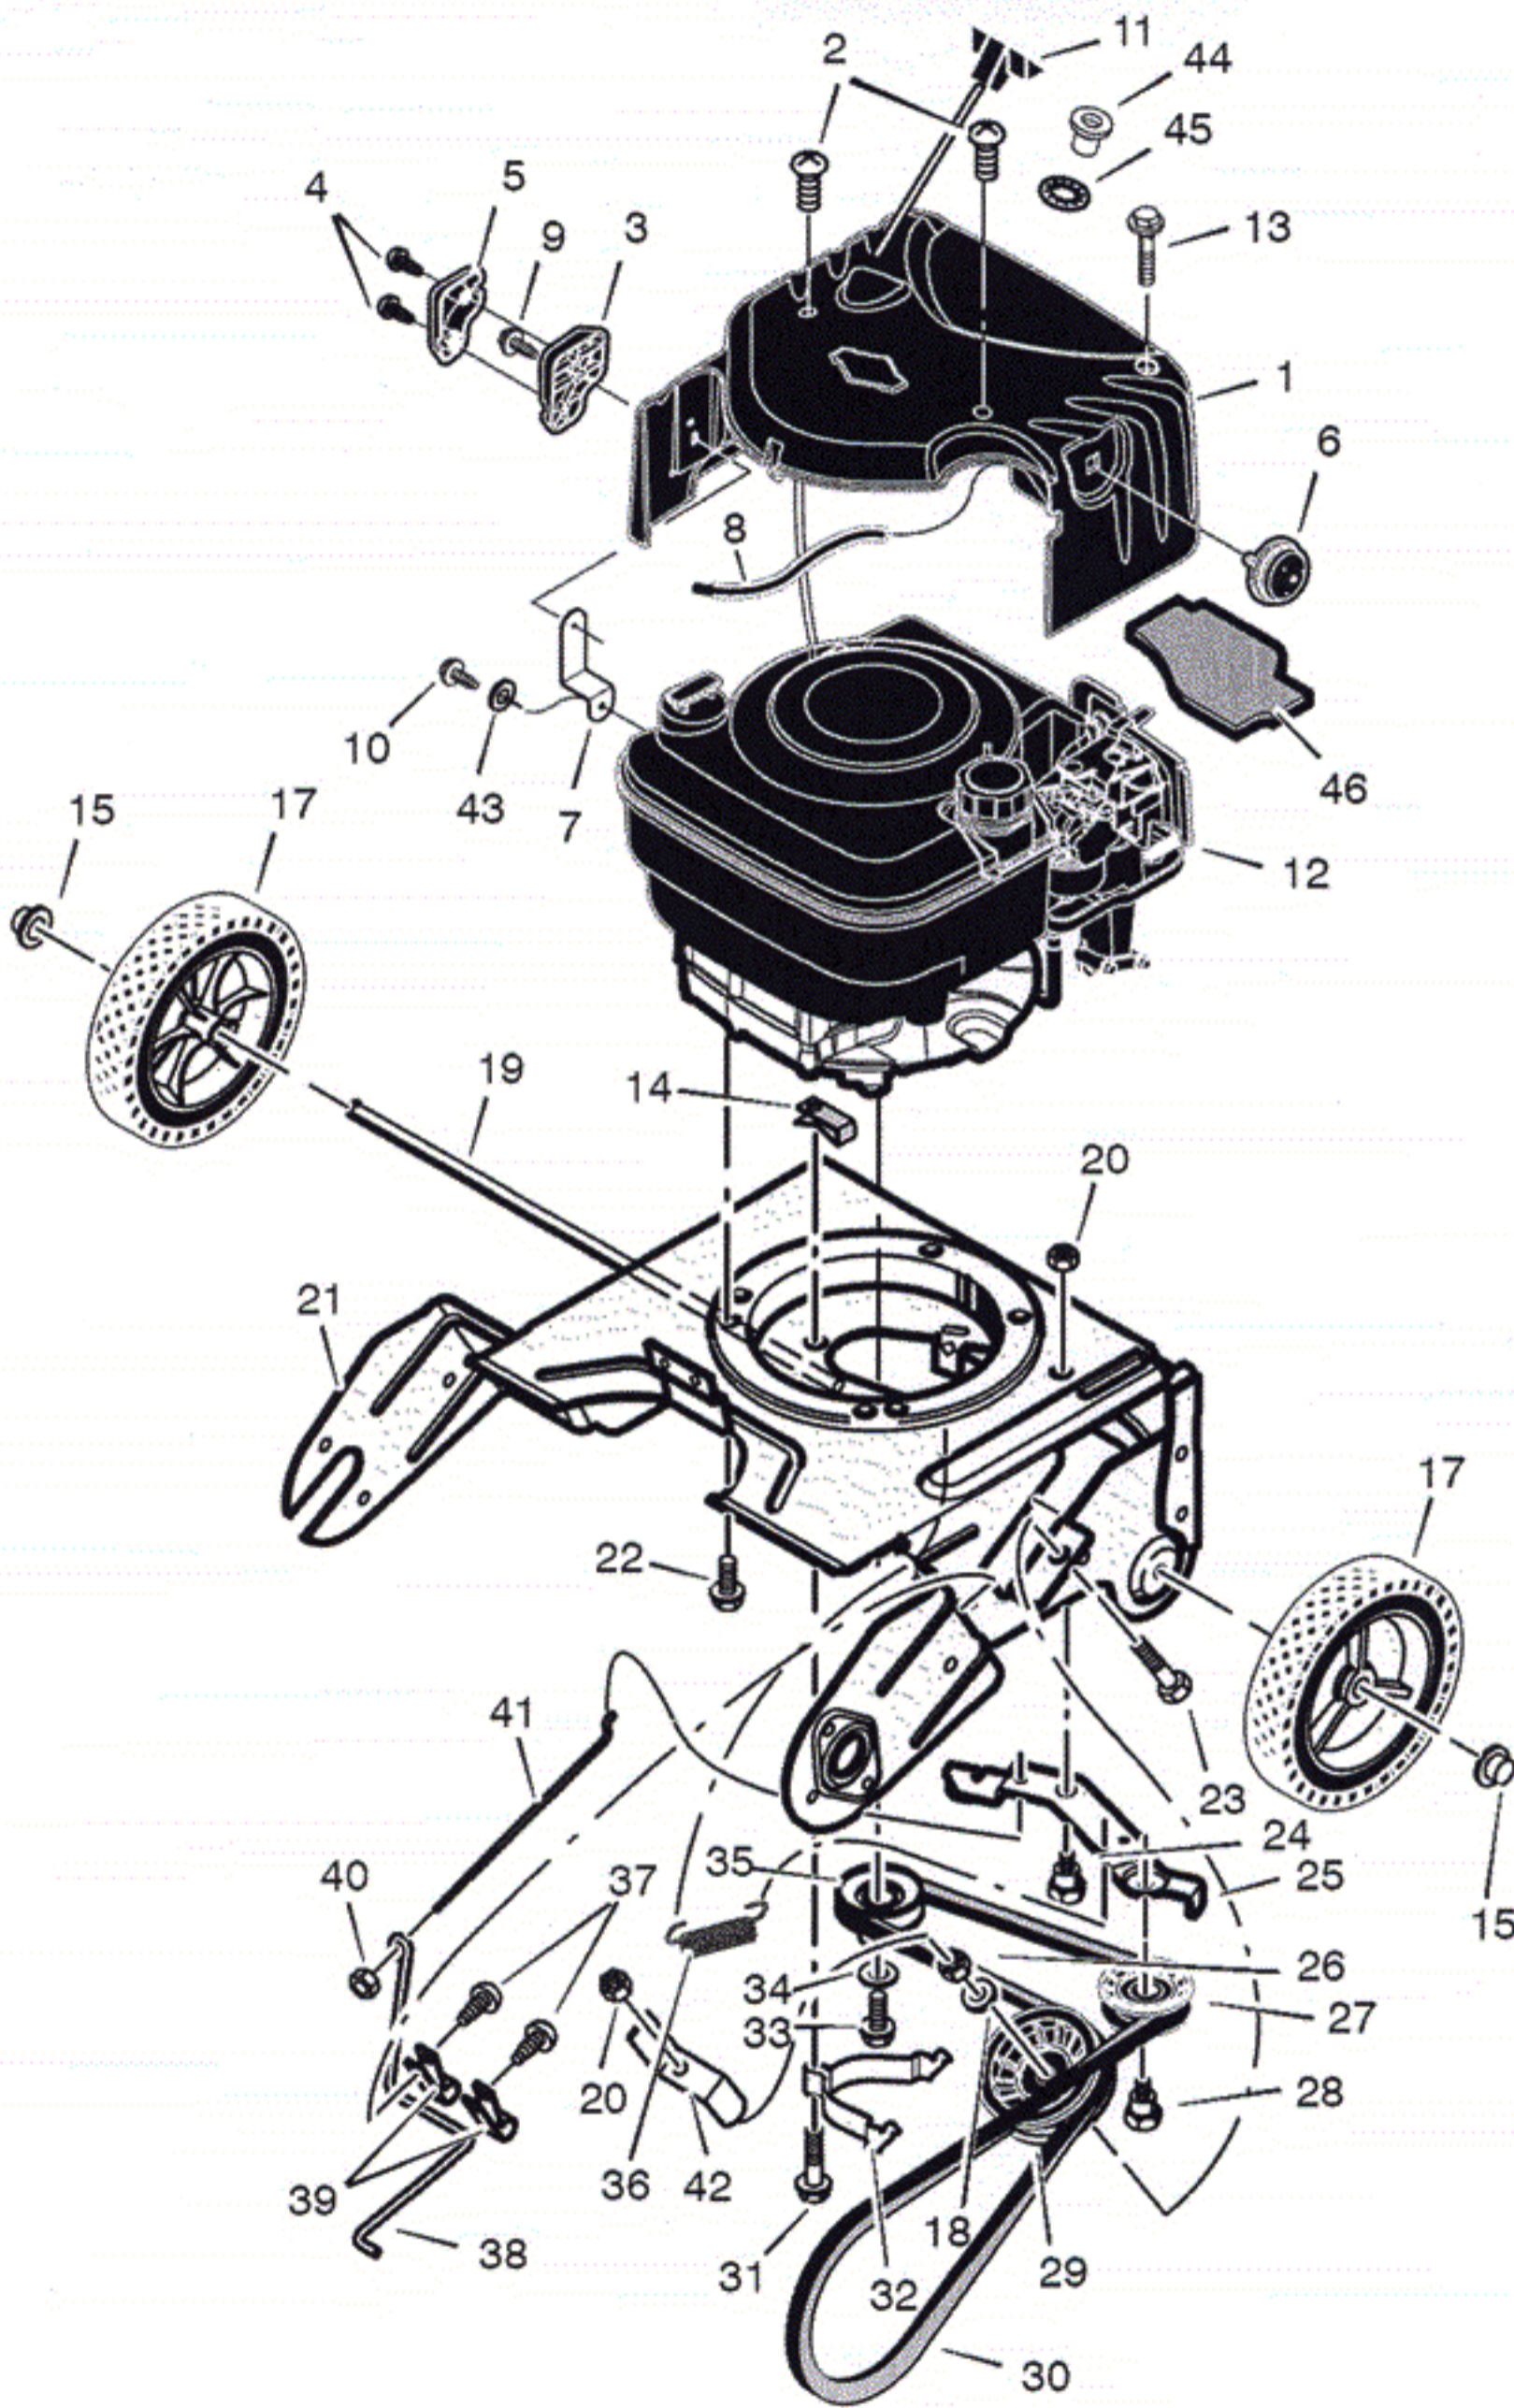

 
# CRAFTSMAN 21" 4HP SNOW THROWER 536.881400

## DRIVE COMPONENTS

Key No.	Part No.	Description
1	1501812	Cover, Top
2	26x316	Screw
3	1501814	Base, Chute Rod
4	26x292	Screw
5	1501815	Cover, Chute Rod
6	1501911	Primerbulb, Red
7	1501813	Bracket, Engine Chute
8	1259	Hose
9	780212	Screw
10	578408	Screw
11	1501724	Handle, Starter
12	-----	Engine
13	1x215	Bolt
14	578109	Retainer
15	711627	Nut, Push Cap
17	760713	Wheel & Tire
18	71072	Washer
19	762280	Axle
20	71111	Nut
21	1502011E549	Frame, Motor Box
22	47792	Bolt
23	71007	Bolt
24	712233	Bolt, Shoulder
25	762254	Bracket, Idler Arm
26	71044	Nut
27	762257	Pulley, V-Belt
28	762258	Bolt, Shoulder
29	762256	Pulley, Flat Idler
30	37x131	Belt
31	315312	Screw
32	762267	Guide, Belt
33	910828	Screw
34	71060	Washer
35	762255	Pulley
36	165x143	Spring
37	26X263	Screw
38	762288	Arm, Brake
39	762285	Clamp
40	312300	Nut
41	762287	Rod, Adjustment
42	762380	Guide, Belt
43	18x35	Lockwasher
44	1501919	Guide, Rope
45	28x84	Washer
46	1501920	Seal, Foam
—	F-041067C	Book, Instruction

# CRAFTSMAN 21" 4HP SNOW THROWER 536.881400

## AUGER COMPONENTS

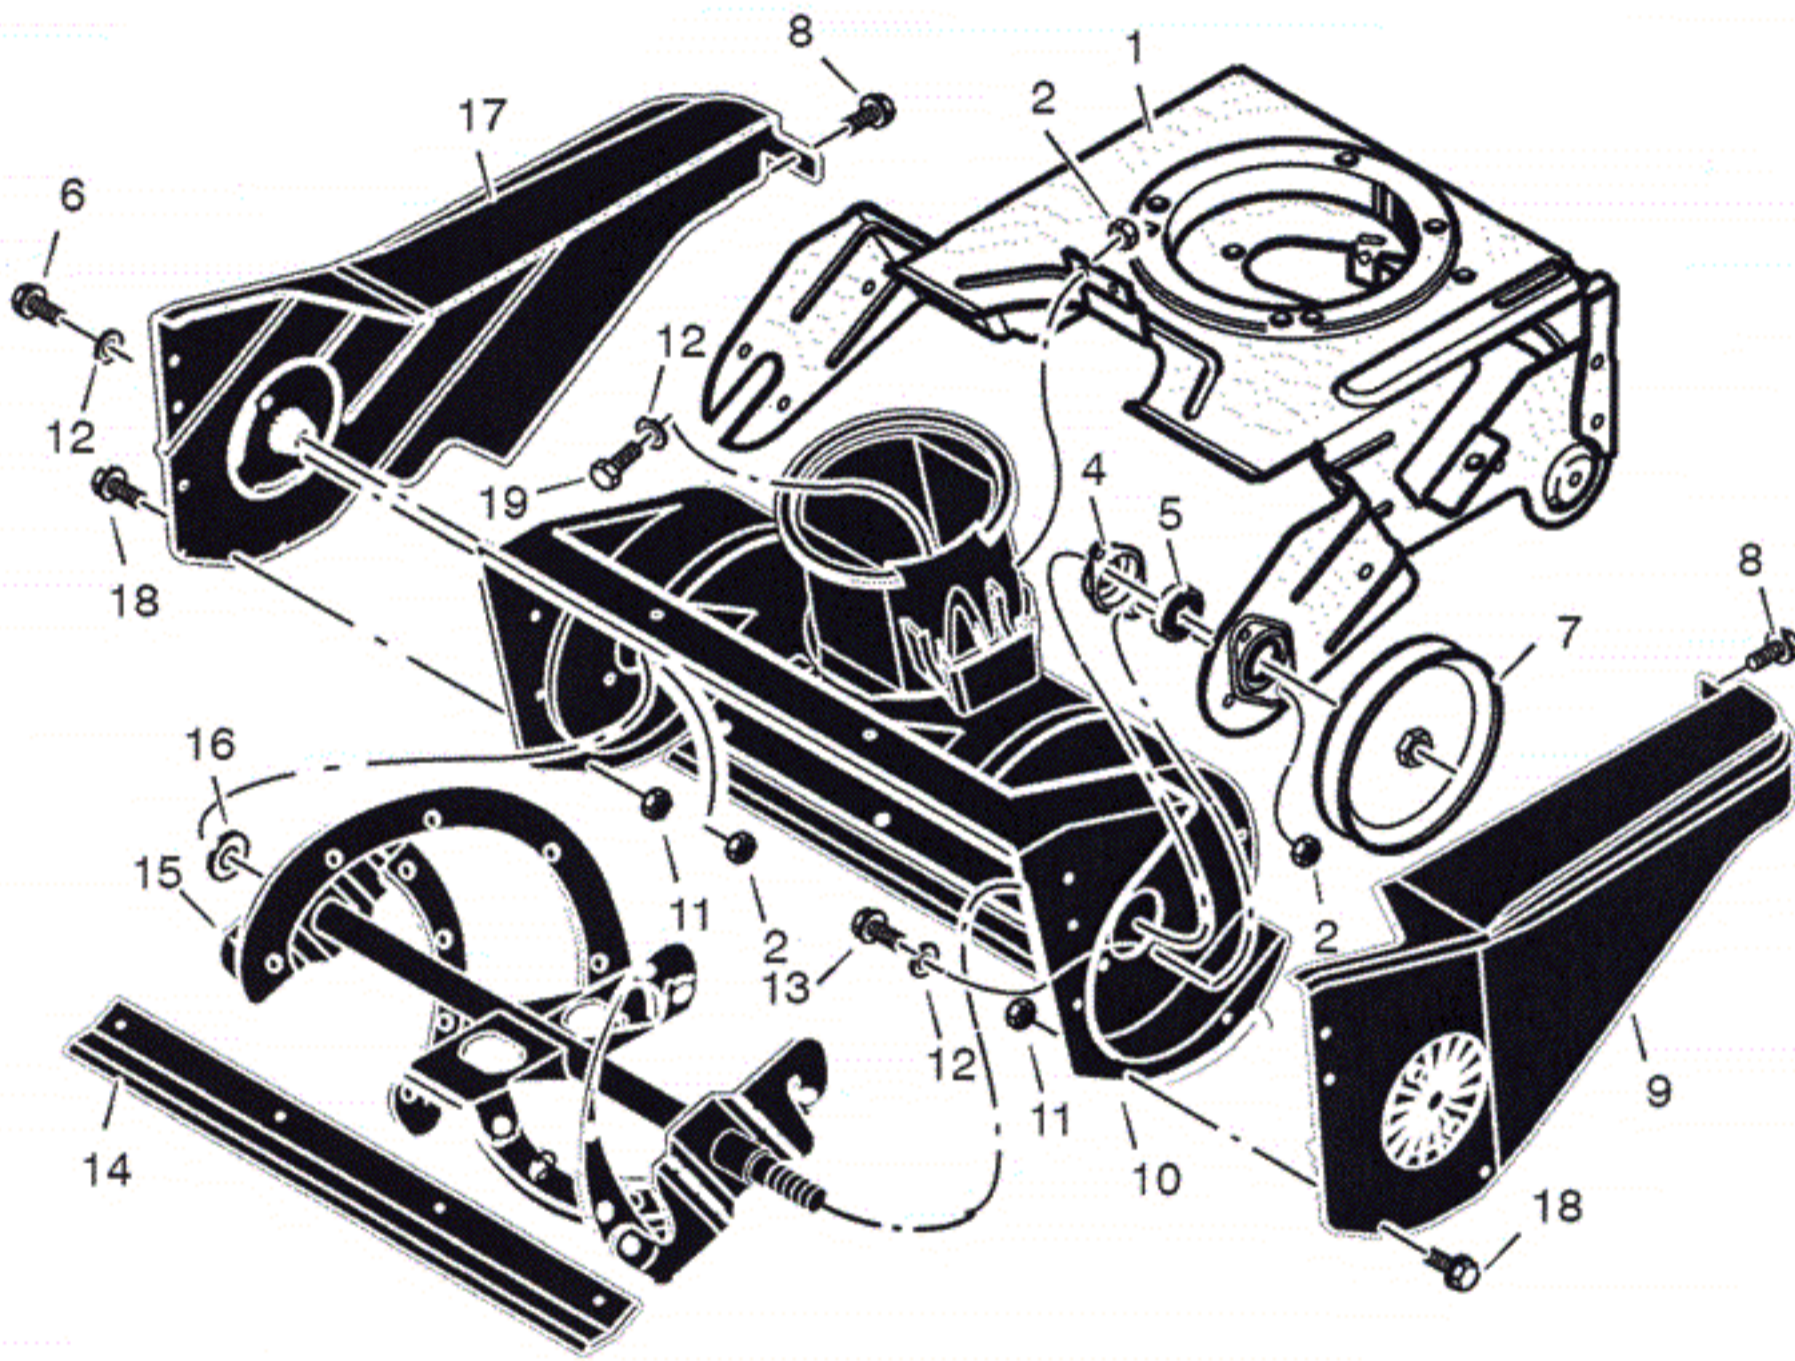


**CRAFTSMAN 21" 4HP SNOW THROWER 536.881400**  
**AUGER COMPONENTS**

<b>Key No.</b>	<b>Part No.</b>	<b>Description</b>
1	1502011E549	Frame, Motor Box
2	15X143	Nut
4	580251	Retainer, Bearing
5	43846	Bearing
6	302628	Bolt
7	338965	Pulley, Auger
8	26x263	Screw
9	762277	Cover, Left Belt
10	1501927	Assembly, Auger Housing
11	312300	Nut
12	71067	Washer
13	579052	Bolt
14	55323	Blade, Scraper
15	327072	Auger Assembly
16	580969	Washer
17	762278	Cover, Right
18	12342	Screw
19	302628	Screw

# CRAFTSMAN 21" 4HP SNOW THROWER 536.881400
 
## HANDLE & DISCHARGE COMPONENTS

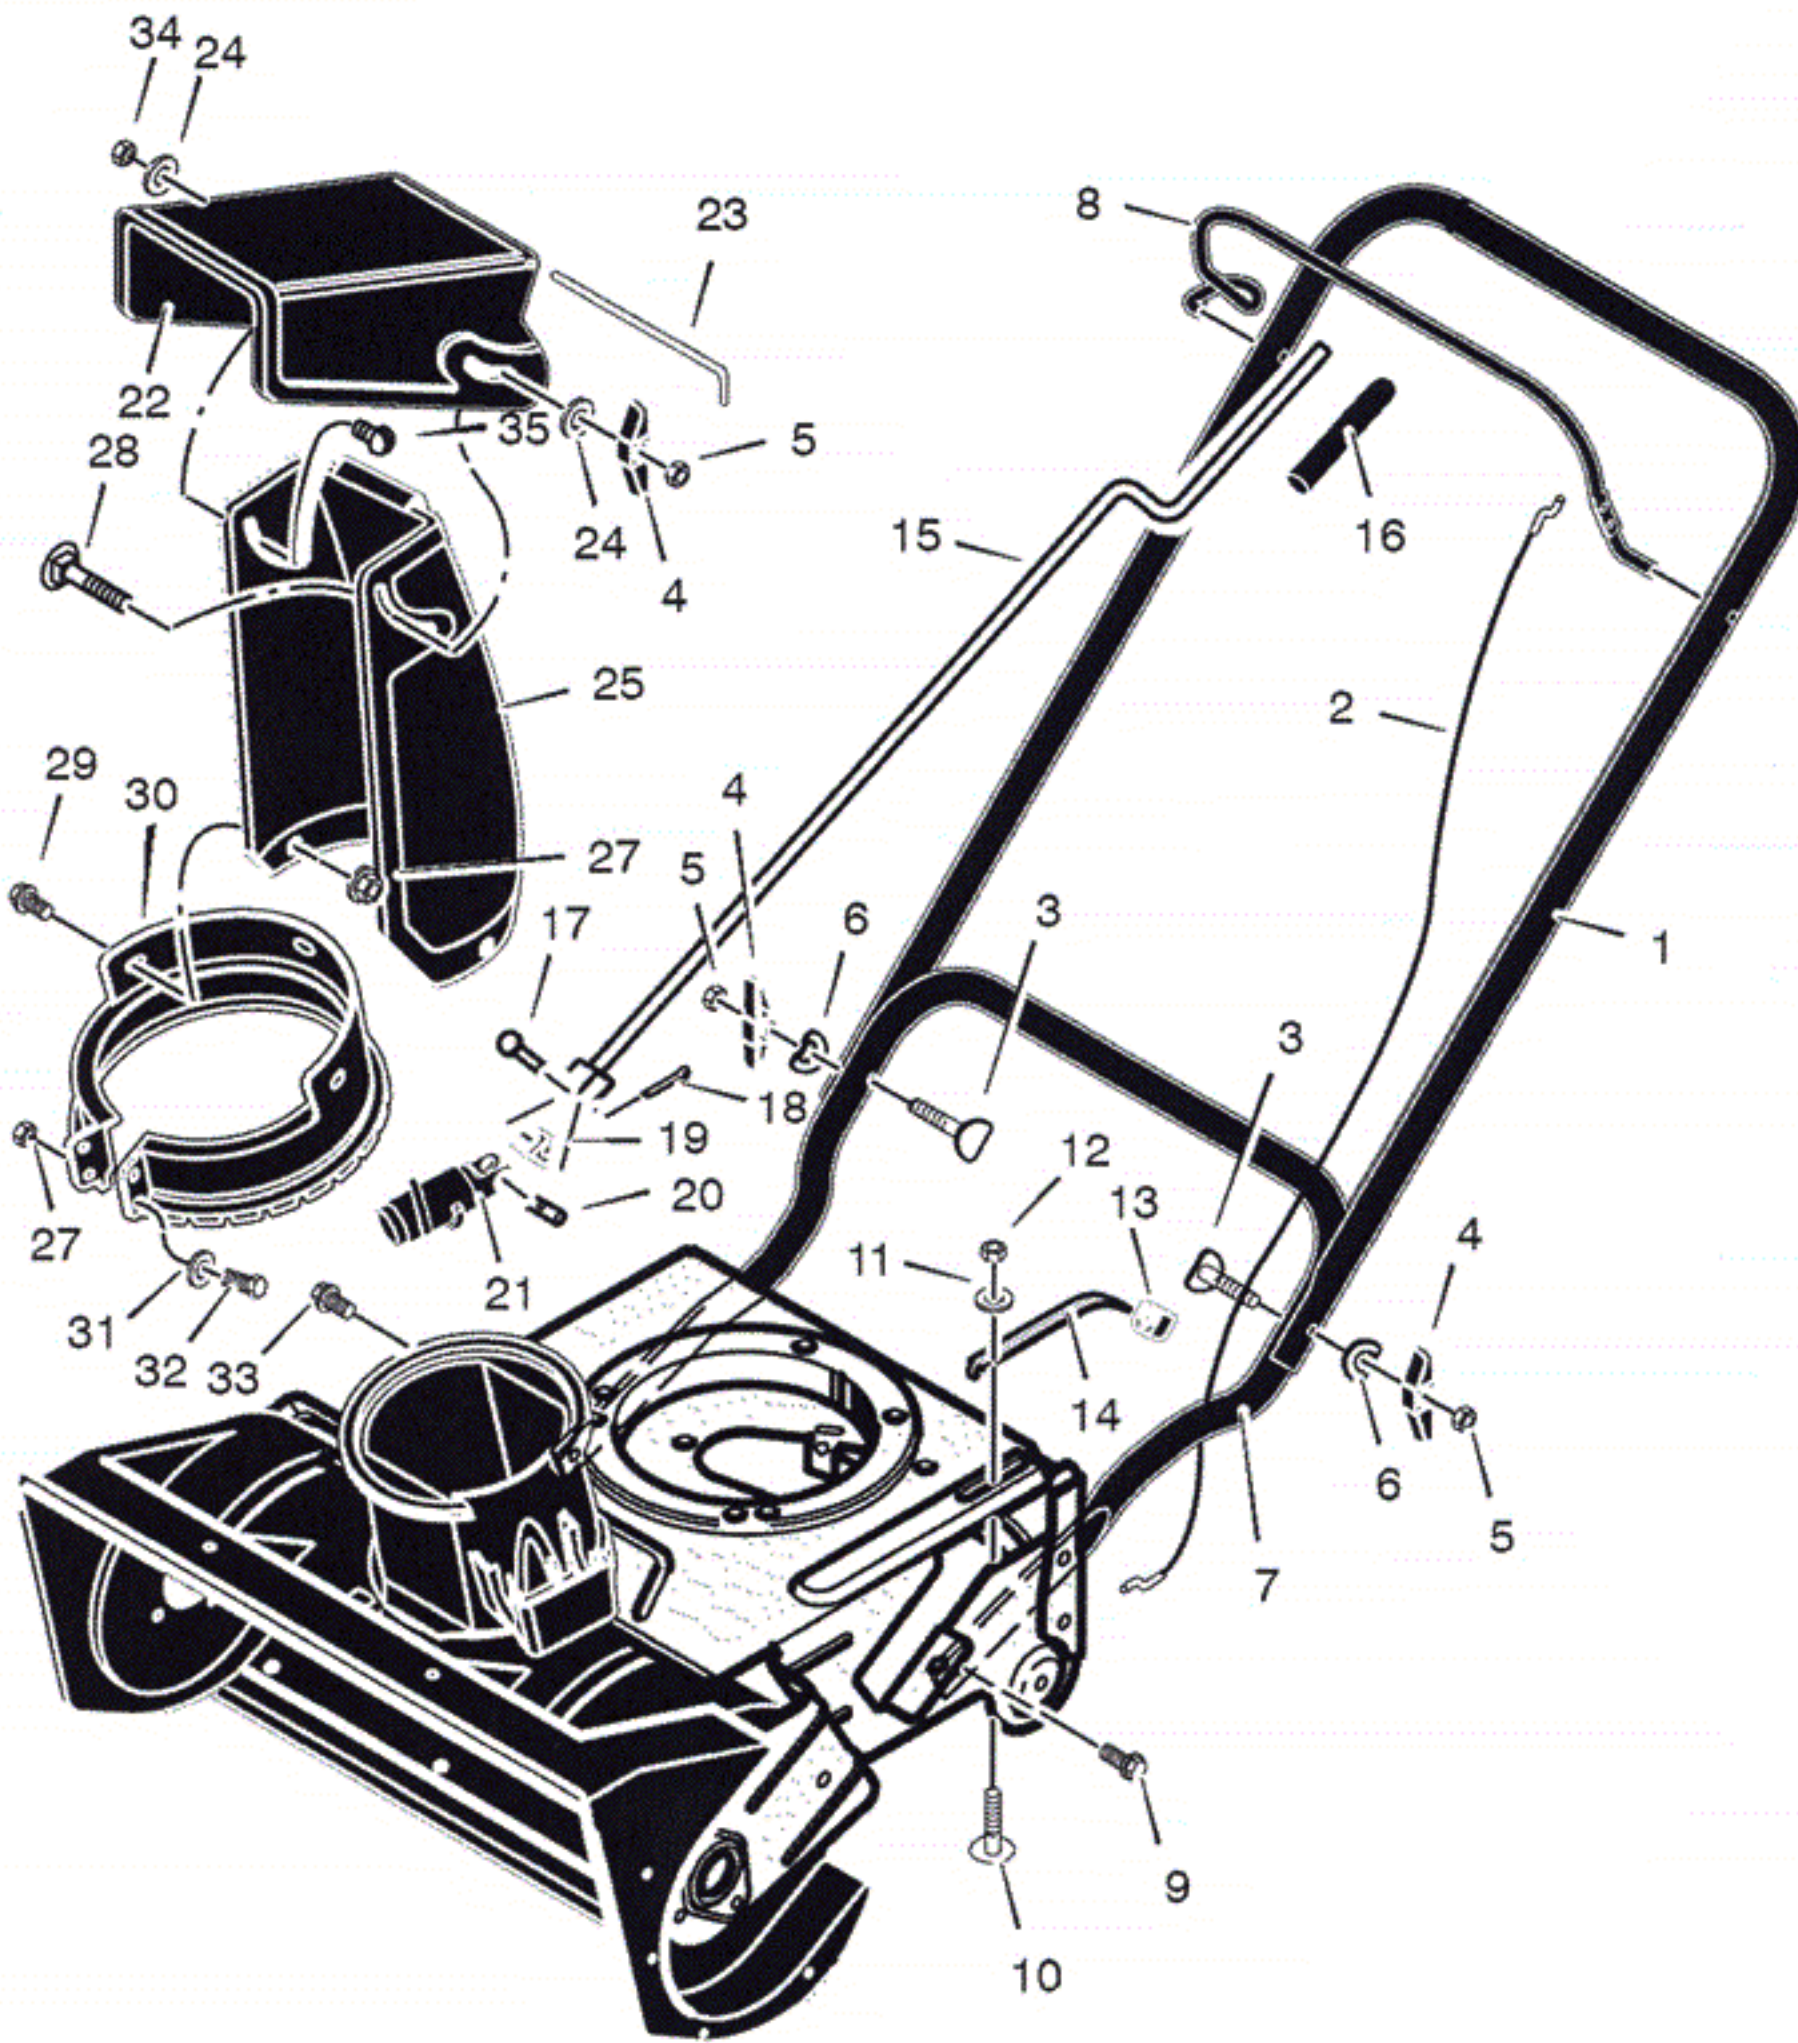


**CRAFTSMAN 21" 4HP SNOW THROWER 536.881400  
HANDLE & DISCHARGE COMPONENTS**


<b>Key No.</b>	<b>Part No.</b>	<b>Description</b>
1	762252E701	Handle, Upper
2	762259	Cable, Auger Drive
3	337584	Bolt
4	57171	Knob
5	71037	Nut
6	311936	Washer
7	762250E701	Handle, Lower
8	762251E701	Lever, Auger Drive
9	70984	Screw
10	340715	Bolt
11	712123	Washer
12	780029	Nut
13	762281	Bushing, Tensioner
14	762282	Bracket, Cable Tensioner
15	762362	Rod, Crank
16	762289	Grip, Crank Rod
17	578309	Pin, Clevis
18	579493	Pin, Cotter
19	578063	Block, Universal Pivot
20	578060	Pin
21	585196	Gear, Worm
22	325847	Deflector
23	308931	Pin, Pivot
24	71071	Washer
25	334234	Chute, Discharge
27	15X143	Nut
28	302843	Bolt
29	313686	Bolt
30	1501846	Ring, Chute
31	71067	Washer
32	302628	Bolt
33	70984	Bolt
34	71391	Locknut
35	578088	Bolt

# CRAFTSMAN 21" 4HP SNOW THROWER 536.881400
 
## DECALS

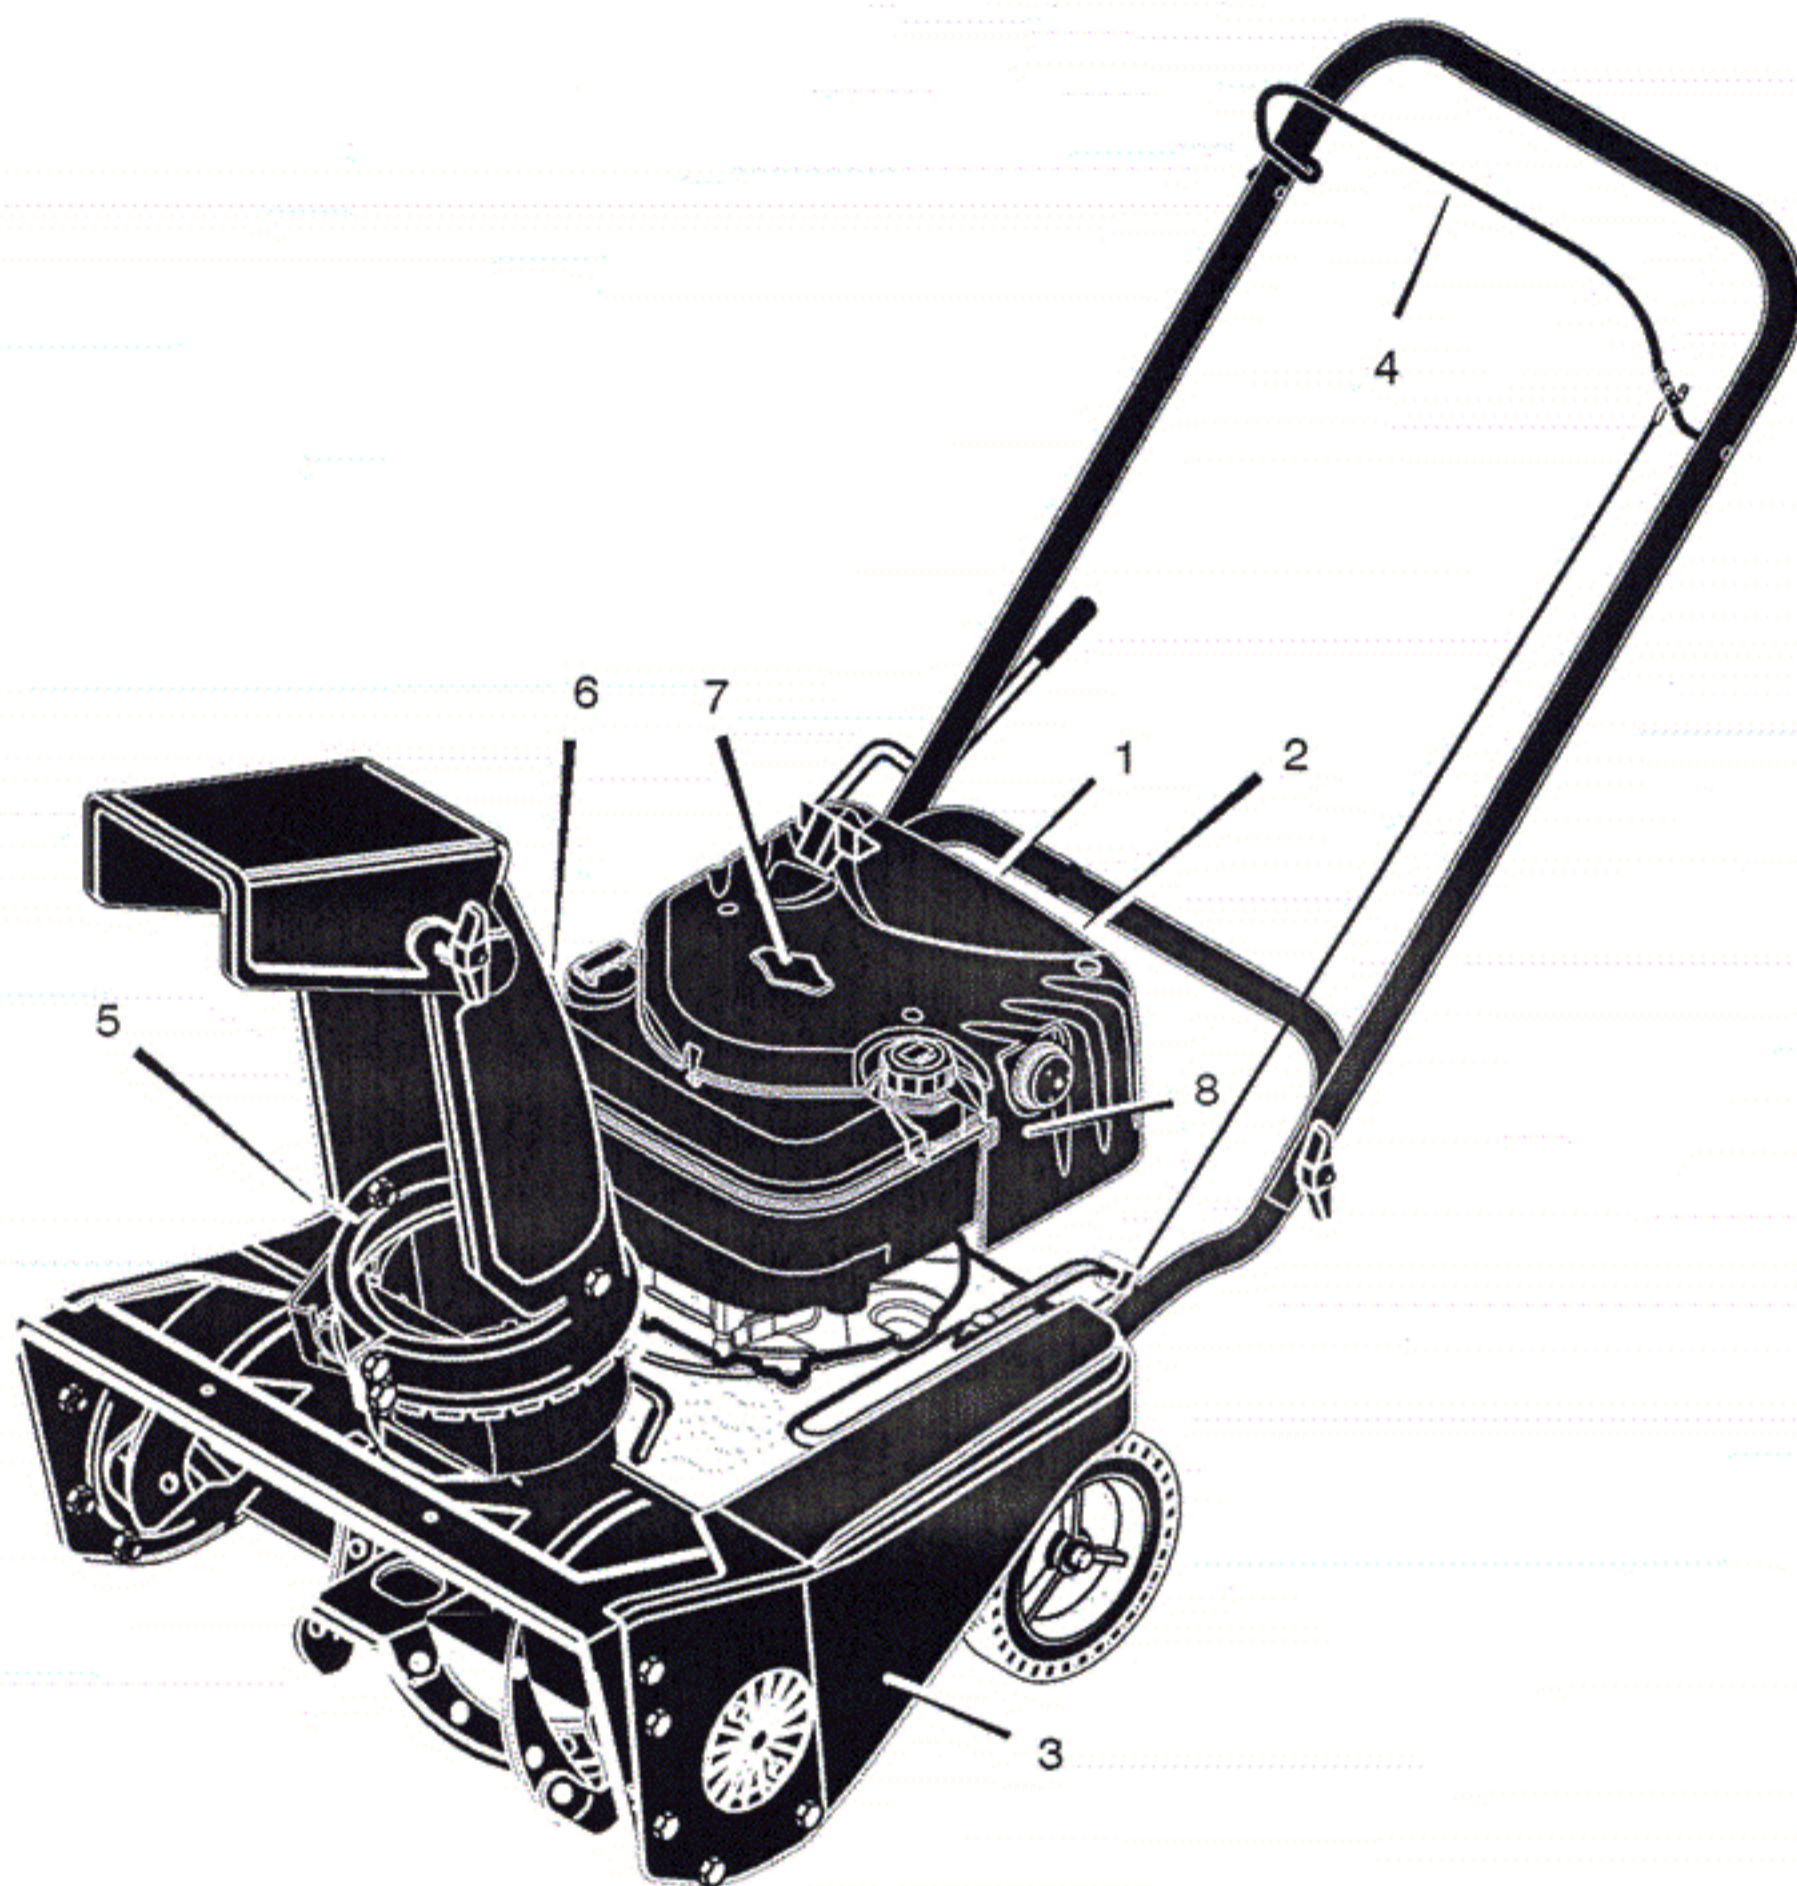

Key No.	Part No.	Description
1	48x5550	Decal, 4hp / 21"
2	48x5536	Decal, Choke
3	48x304	Decal, Belt Instruction (inside cover)
4	761150	Decal, Auger Control Lever
5	70141	Decal, Danger Auger (Foot)
6	48x5642	Decal, Danger Chute (Hand)
7	48x5533	Decal, Briggs & Stratton
8	48x5534	Decal, Primer Bulb

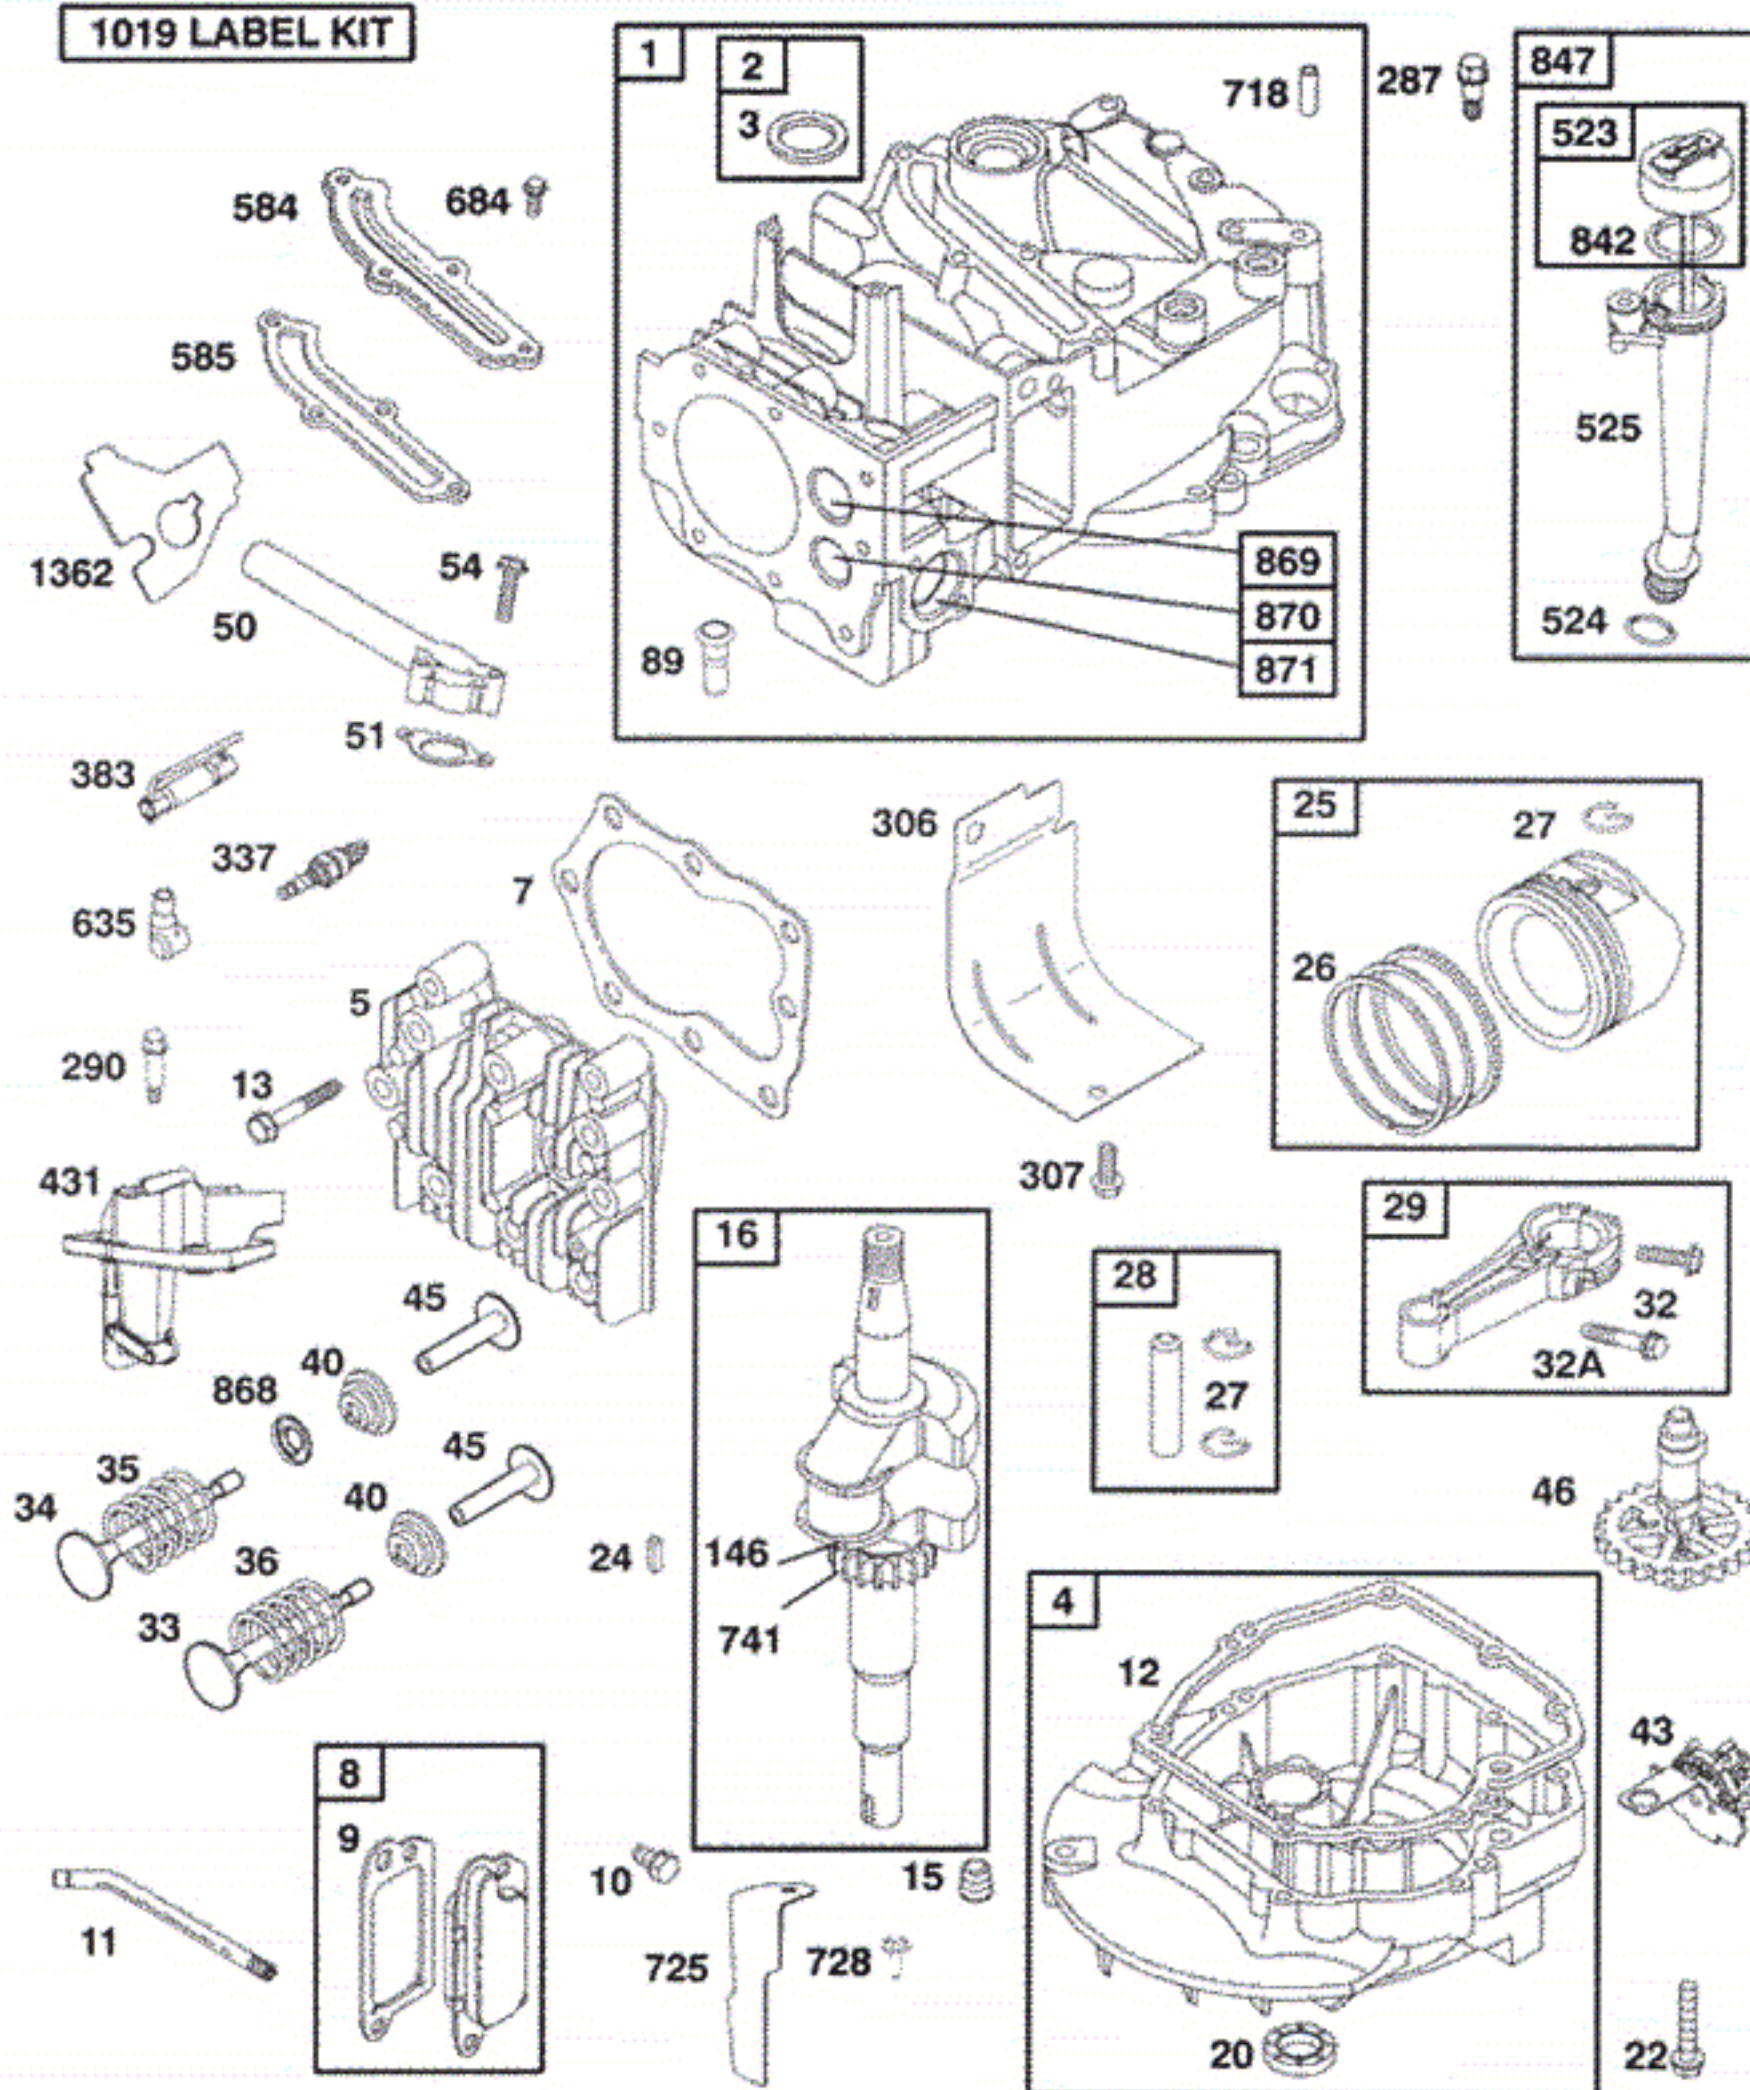 


Assemblies include all parts shown in frames.



# BRIGGS & STRATTON ENGINE
 
# MODEL 120502-0255-E1

Key No.	Part No.	Description	Key No.	Part No.	Description
1	697322	Cylinder Assembly	40	692194	Retainer-Valve
2	399269	Kit-Bushing/Seal (Magneto Side)	43	691997	Slinger-Governor/Oil
3	*299819	Seal-Oil (Magneto Side)	45	690548	Tappet-Valve
4	493279	Sump-Engine	46	691449	Camshaft
5	691160	Head-Cylinder	50	790285	Manifold-Intake
7	*692249	Gasket-Cylinder	51	*692555	Gasket-Intake
8	695250	Tube-Breather	54	691650	Screw (Intake Manifold)
9	*699472	Gasket-Breather	89	692348	Plug-Oil
10	691125	Screw (Breather)	146	690979	Key-Timing
11	691781	Tube-Breather	287	690940	Screw (Dipstick Tube)
12	*692232	Gasket-Crankcase	290	690349	Screw (Intake Elbow)
13	690912	Screw (Cylinder Head)	306	690450	Shield-Cylinder
15	691680	Plug-Oil Drain	307	690345	Screw (Cylinder Shield)
16	790277	Crankshaft	337	802592	Plug-Spark
20	*399781	Seal-Oil (PTO Side)	383	19374	Wrench-Spark Plug
22	691092	Screw (Crankcase Cover/Sump)	431	790284	Elbow-Intake
24	222698	Key-Flywheel	523	495264	Dipstick
25	697339	Piston Assembly (Standard)	524	*692296	Seal-Dipstick Tube
		<b>Note</b>	525	495265	Tube-Dipstick
		697341 Piston Assembly (.020" Oversize)	584	697734	Cover-Breather
26	790360	Ring Set (Standard)	585	*691879	Gasket-Breather
		<b>Note</b>	635	66538	Boot-Spark Plug
		499427 Ring Set (.020" Oversize)	684	690345	Screw (Breather Cover)
27	691866	Lock-Piston Pin	718	690959	Pin-Locating
28	499423	Pin-Piston	725	790289	Shield-Heat
29	499424	Rod-Connecting	728	790282	Screw (Heat Shield)
32	691664	Screw (Connecting Rod)	741	691830	Gear-Timing
32A	695759	Screw (Conneting Rod)	842	*691031	Seal-O Ring (Dipstick Tube)
33	262651	Valve-Exhaust	847	692017	Dipstick/Tube
34	262652	Valve-Intake	868	697338	Seal-Valve
35	691270	Spring- Intake Valve	869	691155	Seat-Intake Valve
36	691270	Spring-Exhaust Valve	870	690380	Seat-Exhaust Valve
			871	262001	Bushing-Guide (Exhaust)
					<b>Note</b>
					63709 Bushing- Guide (Intake)
			1019	790295	Kit-Label
			1362	790288	Baffle-Intake Elbow

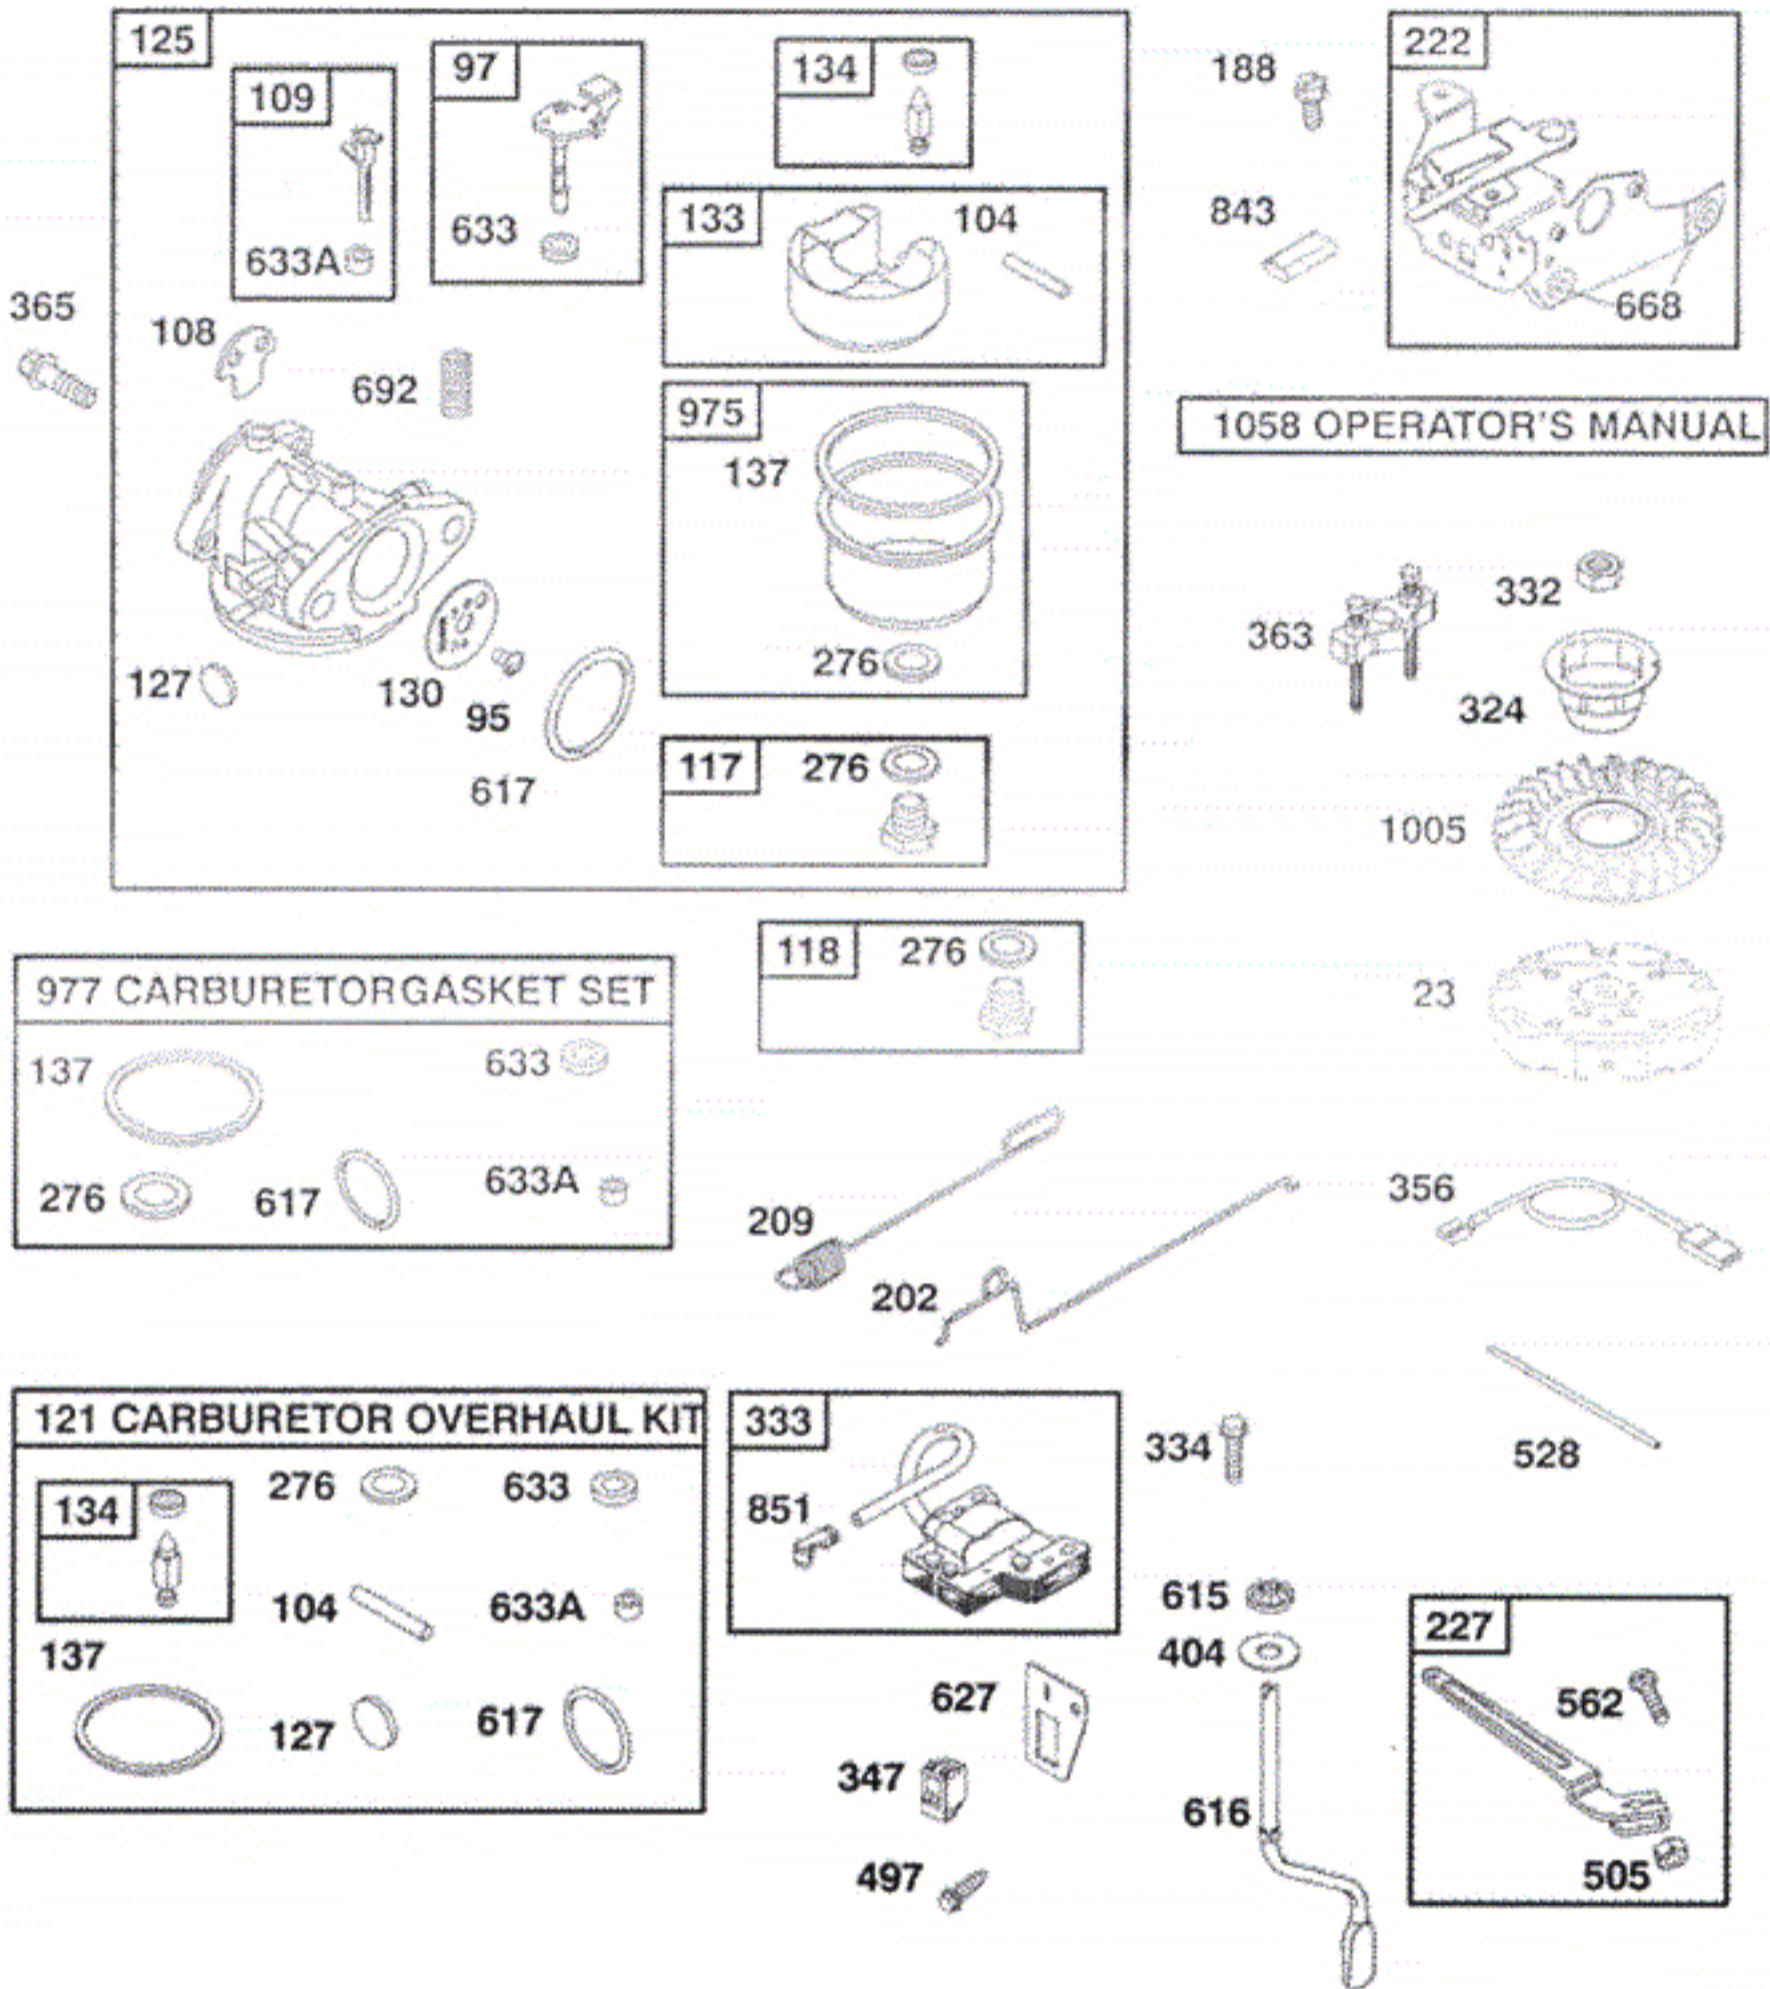











Assemblies include all parts shown in frames.

# BRIGGS & STRATTON ENGINE

          
# MODEL 120502-0255-E1

Key No.	Part No.	Description	Key No.	Part No.	Description
23	790536	Flywheel	347	790283	Switch—Rocker
95	691636	Screw (Throttle Valve)	356	693010	Wire—Stop
97	493267	Shaft—Throttle	363	19069	Puller—Flywheel
104	●691242	Pin—Float Hinge	365	692524	Screw (Carburetor)
108	691182	Valve—Choke	404	690272	Washer (Governor Crank)
109	498593	Shaft—Choke	497	690664	Screw (Stopswitch Bracket)
117	498975	Jet—Main (Standard)	505	691251	Nut (Governor Control Lever)
118	497348	Jet—Main (High Altitude)	528	696751	Hose—Primer
121	498260	Kit—Carburetor Overhaul	562	691119	Bolt (Governor Control Lever)
125	790276	Carburetor	615	690340	Retainer—Governor Shaft
127	●694468	Plug—Welch	616	698801	Crank—Governor
130	691203	Valve—Throttle	617★●◆270344		Seal—O Ring (Intake Manifold)
133	398187	Float—Carburetor	627	692872	Bracket—Stopswitch
134	●398188	Kit—Needle/Seat	633●◆691321		Seal—Choke/Throttle Shaft
137●◆693981		Gasket—Float Bowl	633A●◆693867		Seal—Choke/Throttle Shaft
188	693399	Screw (Control Bracket)	668	★493823	Spacer (Includes 2)
202	691829	Link—Mechanical Governor	692	690572	Spring—Detent
209	691851	Spring—Governor (Yellow)	843	691895	Sleeve—Lever
222	692982	Bracket—Control	851	493880	Terminal—Spark Plug
227	690783	Lever—Governor Control	975	493640	Bowl—Float
276●◆271716		Washer—Sealing	977	498261	Gasket Set—Carbure- tor
324	695161	Screen/Cup Assem- bly	1005	790035	Fan—Flywheel
332	690662	Nut (Flywheel)	1058	275963	Operator's Manual
333	802574	Magneto—Armature			
334	691061	Screw (Armature Magneto)			

1036 EMISSIONS LABEL

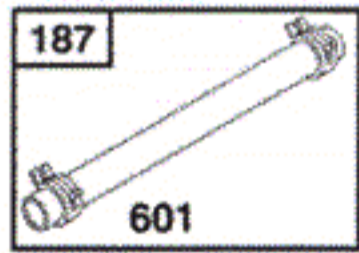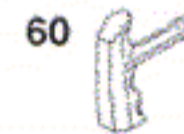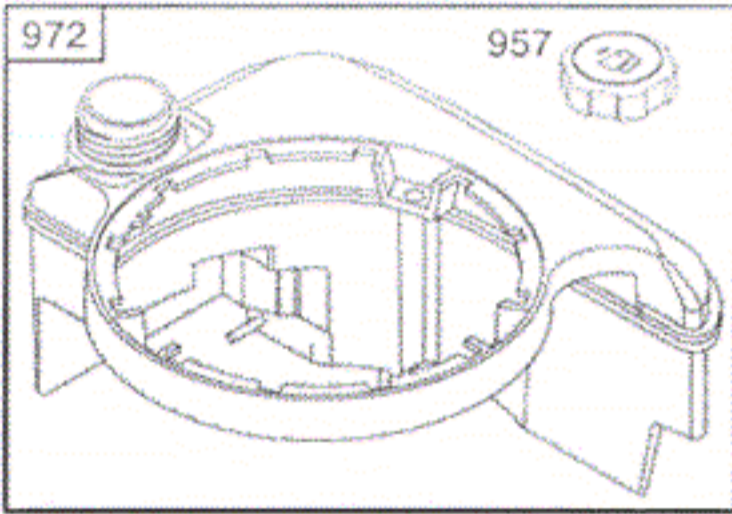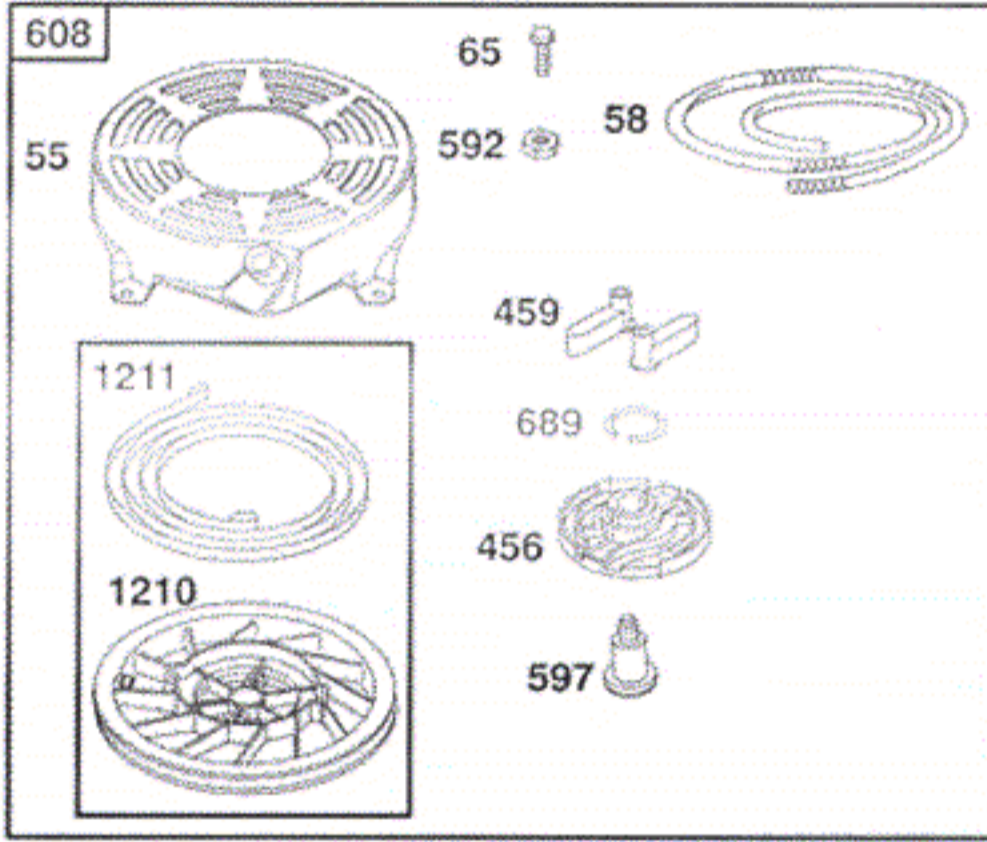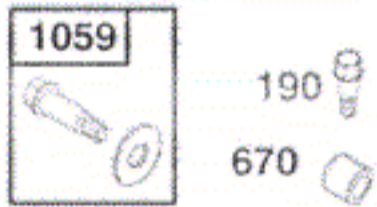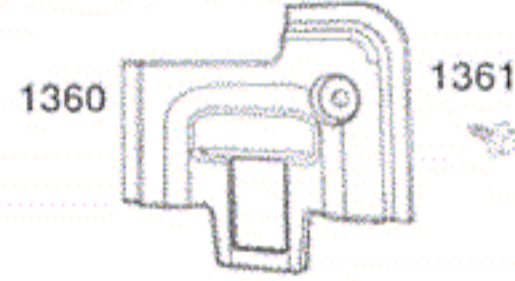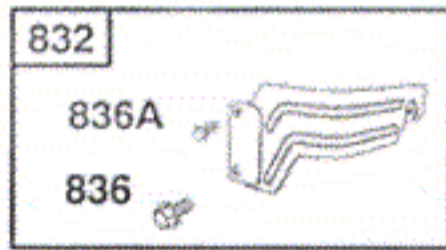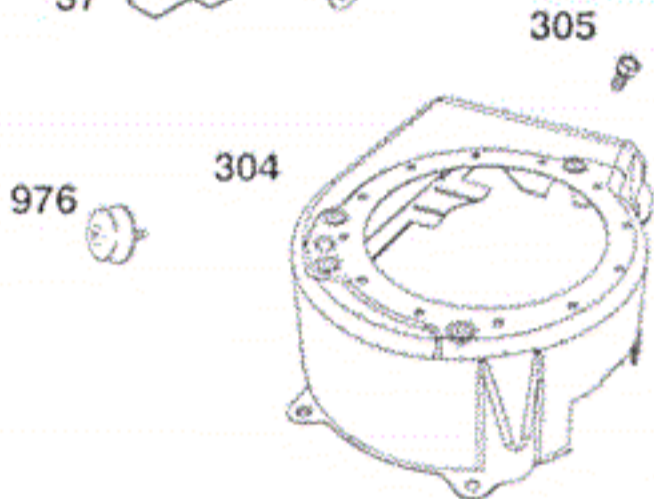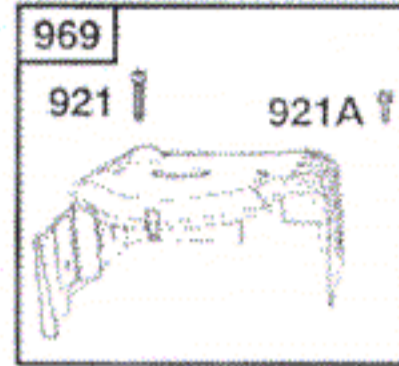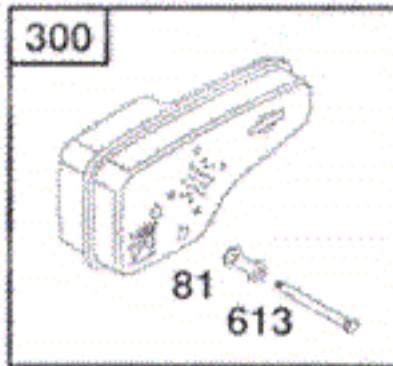

1330 REPAIR MANUAL

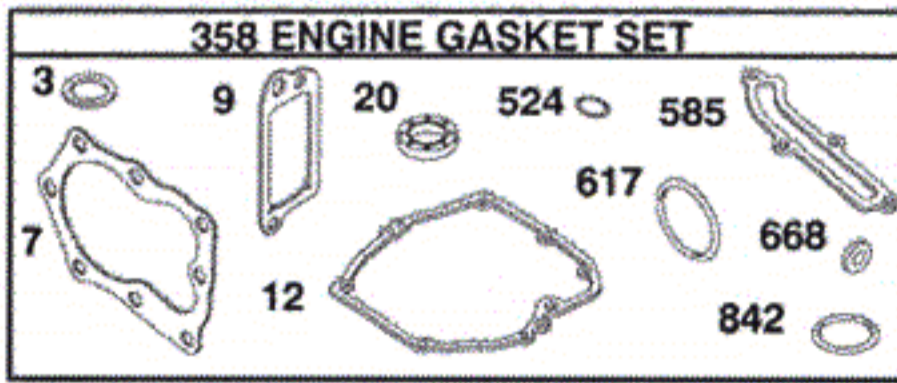 

Assemblies include all parts shown in frames.

# BRIGGS & STRATTON ENGINE

# MODEL 120502-0255-E1

Key No.	Part No.	Description	Key No.	Part No.	Description
3	*299819	Seal—Oil (Magneto Side)	601	95162	Clamp—Hose
7	*692249	Gasket—Cylinder Head	608	697743	Starter—Rewind
9	*699472	Gasket—Breather	613	691340	Screw (Muffler)
12	*692232	Gasket—Crankcase Cover	617*♦	270344	Seal—O Ring (Intake Manifold)
20	*399781	Seal—Oil (PTO Side)	668	*493823	Spacer (Includes 2)
37	694086	Guard—Flywheel	689	691855	Spring—Friction
55	691421	Starter—Rewind Housing	670	692294	Spacer—Fuel Tank
58	693389	Rope—Starter (Cut to Required Length)	832	790280	Guard—Muffler
60	691915	Grip—Starter Rope	836	690664	Screw (Muffler Guard)
65	690837	Screw (Reqind Starter)	836A	690661	Screw (Muffler Guard)
78	691108	Screw (Flywheel Guard)	842	*691031	Seal—O Ring (Dipstick Tube)
81	691740	Lock—Muffler Screw	921	690700	Screw (Blower Housing Cover)
187	691050	Line—Fuel (Cut to Required Length)	921A	691135	Screw (Blower Housing Cover)
190	690940	Screw (Fuel Tank)	957	397974	Cap—Fuel Tank
300	692038	Muffler	969	790294	Cover—Blower Housing
304	790286	Housing—Blower	972	699374	Tank—Fuel
305	691108	Screw (Blower Housing)	976	790221	Primer—Carburetor
358	497316	Gasket Set—Engine	1036	697457	Label—Emissions
456	692299	Plate—Pawl Friction	1059	692311	Kit—Screw/Washer
459	281505	Pawl—Ratchet	1210	498144	Pulley/Spring Assembly (Pulley)
524	*692296	Seal—Dipstick Tube	1211	498144	Pulley/Spring Assembly (Spring)
585	*691879	Gasket—Breather Passage	1330	272147	Repair Manual
592	690800	Nut (Rewind Starter)	1360	790281	Cover—Switch
597	691696	Screw (Pawl Friction Plate)	1361	790282	Screw (Cover Switch)