

CRAFTSMAN ROTARY LAWN MOWER - - MODEL NUMBER 917.370690

PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION		PART NO.	DESCRIPTION
183471X479	Upper Handle	36	175735	Hinge Bracket Assembly			1268-B1 (See Breakdown)
438391	Cable, Engine Zone Control /	38	419942X428	Discharge Deflector		197480	O-Ring
	Rear Door Prop	39	442470X479	Handle Bracket, LH	68	431134	Kit, Wheel Adjuster, Rear,
429930X004	Bracket, Upstop	40	438526X479	Handle Bracket, RH			LH (Includes Red Knob
145006	Guide, Cable	41	150406	Screw, Dogpoint 3/8-16			and Pushnut)
182398	Handle Knob, Star	42	193000	Spring, Torsion	71	431009	Wiring Harness, Battery
750634	Screw #10-24 x 1/2	43	191730	Nut, Hex, Flanged 1/4-20	72	425937	Fuse, 40 Amp
426423X428	Control Bar	44	431558	Kit, Mower Housing	73	422115	Wiring Harness,
430657	Rear Door Assembly	45	175650	Rod, Hinge			Keyswitch Housing
425575	Hairpin, Door/Handle Pivot	46	421782	Blade Adapter / Pulley	74	430765	Battery
189713X428	Handle Knob, Standard	47	421825	Blade, 22"	75	186159	Screw
437516	Plug, Lower Handle Bar	48	851074	Washer, Hardened		180331	Key
427120X428	Rear Baffle	49	850263	Washer, Helical	77	194848	Nut, Cap
132004	Keps Locknut 1/4-20	50	851084	Screw, Machine, Hex Head	78	423800	Key Start Switch
194788	Rope Guide			3/8-24 x 1-3/8 Grade 8			(Includes Key)
429157	Rear Skirt	51	430599	Front Baffle	79	194847	Wiring Harness, Housing
419949	Spring, Rear Door, LH, Black	52	404763	Decal, Danger	80	190097	Charger, Battery
141841	Screw, Panhead, Torx #20	53	175000510	Screw, Semi-Gimlett Point	83	750097	Screw
419948	Spring, Rear Door, RH, Grey			1/4-20 x 1/2	84	428124	Fastener, Push
409149	Nut, Hex, Flanged	54	88348	Washer, Flat	85	429801X004	Mounting Bracket, Skirt
419945	Screw, Rear Door/Handle Pivot	55	191730	Nut, Hex	96	197991	Clip, Cable
431880X460	Wheel & Tire Assembly, Rear	56	17411312	Screw, Hex Washer Head	98	182003	Clip, Packaging
72250505	Bolt, Carriage 5/16-18 x 5/8			#13 x 3/4		439079	Owner's Manual,
413808	Nut, Push	57	155377	Nut, Hex			English/Spanish
419407X615	Selector Knob	58	437517X479	Bar, Lower Handle	Ava	ilable accesso	ries not included with mower:
419944	Latch, Mulcher Door	59	191574	Handle Bolt		71 33623	Gas Can
423358	Mulcher Door	62	431913X004	Belt Retainer			(2.5 Gallon Container)
419946X615	Pivot Bracket	63	178848	Screw #10-16 x 5/8		71 33500	Fuel Stabilizer
431131	Kit, Wheel Adjuster, Rear, RH	64		Engine, Briggs & Stratton,		71 33000	SAE 30W Oil
	(Includes Red Knob & Pushnut)			Model Number 128T05-			(20 Ounce Bottle)
	NO. 183471X479 438391 429930X004 145006 182398 750634 426423X428 430657 425575 189713X428 437516 427120X428 132004 194788 429157 419949 141841 419948 409149 419945 431880X460 72250505 413808 419407X615 419944 423358 419946X615	NO. DESCRIPTION 183471X479 Upper Handle 438391 Cable, Engine Zone Control / Rear Door Prop 429930X004 Bracket, Upstop 145006 Guide, Cable 182398 Handle Knob, Star 750634 Screw #10-24 x 1/2 426423X428 Control Bar 430657 Rear Door Assembly 425575 Hairpin, Door/Handle Pivot 189713X428 Handle Knob, Standard 437516 Plug, Lower Handle Bar 427120X428 Rear Baffle 132004 Keps Locknut 1/4-20 194788 Rope Guide 429157 Rear Skirt 419949 Spring, Rear Door, LH, Black 141841 Screw, Panhead, Torx #20 419948 Spring, Rear Door, RH, Grey 409149 Nut, Hex, Flanged 419945 Screw, Rear Door/Handle Pivot 43180X460 Wheel & Tire Assembly, Rear 72250505 Bolt, Carriage 5/16-18 x 5/8 413808 Nut, Push 419944 Latch, Mulcher Door	NO. DESCRIPTION NO. 183471X479 Upper Handle 36 438391 Cable, Engine Zone Control / Bear Door Prop 39 429930X004 Bracket, Upstop 40 145006 Guide, Cable 41 182398 Handle Knob, Star 42 750634 Screw #10-24 x 1/2 43 426423X428 Control Bar 44 430657 Rear Door Assembly 45 425575 Hairpin, Door/Handle Pivot 46 189713X428 Handle Knob, Standard 47 437516 Plug, Lower Handle Bar 48 427120X428 Rear Baffle 49 132004 Keps Locknut 1/4-20 50 194788 Rope Guide 429157 Rear Skirt 51 419949 Spring, Rear Door, LH, Black 52 141841 Screw, Panhead, Torx #20 53 419948 Spring, Rear Door, RH, Grey 409149 Nut, Hex, Flanged 54 419945 Screw, Rear Door/Handle Pivot	NO. DESCRIPTION NO. NO. 183471X479 Upper Handle 36 175735 438391 Cable, Engine Zone Control / Rear Door Prop 39 442470X479 429930X004 Bracket, Upstop 40 438526X479 145006 Guide, Cable 41 150406 182398 Handle Knob, Star 42 193000 750634 Screw #10-24 x 1/2 43 191730 426423X428 Control Bar 44 431558 430657 Rear Door Assembly 45 175650 425575 Hairpin, Door/Handle Pivot 46 421782 189713X428 Handle Knob, Standard 47 421825 437516 Plug, Lower Handle Bar 48 851074 427120X428 Rear Baffle 49 850263 132004 Keps Locknut 1/4-20 50 851084 49949 Spring, Rear Door, LH, Black 52 404763 411841 Screw, Panhead, Torx #20 53 175000510 419948 <td>NO. DESCRIPTION NO. DESCRIPTION 183471X479 Upper Handle 36 175735 Hinge Bracket Assembly 438391 Cable, Engine Zone Control / Rear Door Prop 38 419942X428 Discharge Deflector 429930X004 Bracket, Upstop 40 438526X479 Handle Bracket, LH 45006 Guide, Cable 41 150406 Screw, Dogpoint 3/8-16 82398 Handle Knob, Star 42 193000 Spring, Torsion 750634 Screw #10-24 x 1/2 43 191730 Nut, Hex, Flanged 1/4-20 426423X428 Control Bar 44 431558 Kit, Mower Housing 426423X428 Control Bar 44 431558 Kit, Mower Housing 425575 Hairpin, Door/Handle Pivot 46 421782 Blade Adapter / Pulley 489713X428 Handle Knob, Standard 47 421825 Blade, 22" 437516 Plug, Lower Handle Bar 48 851074 Washer, Hardened 429157 Rear Baffle 49 850263 Washer, Helical<</td> <td>NO. DESCRIPTION NO. NO. DESCRIPTION NO. 183471X479 Upper Handle 36 175735 Hinge Bracket Assembly 438391 Cable, Engine Zone Control / Rear Door Prop 39 419942X428 Discharge Deflector 6 429930X004 Bracket, Upstop 40 438526X479 Handle Bracket, LH 68 429930X004 Bracket, Upstop 40 438526X479 Handle Bracket, RH 68 429930X004 Bracket, Cupstop 40 438526X479 Handle Bracket, RH 68 429930X004 Bracket, Cupstop 40 438526X479 Handle Bracket, RH 68 45006 Guide, Cable 41 150406 Screw, Dogpoint 3/8-16 71 182398 Handle Knob, Star 42 193000 Spring, Torsion 71 47 25065 Hairpin, Door/Handle Pivot 46 421782 Blade Adapter / Pulley 74 4897120X428 Handle Knob, Standard 47 421825 Blade, 22° 75 437516</td> <td>NO. DESCRIPTION NO. NO. DESCRIPTION NO. NO. 183471X479 Upper Handle 36 175735 Hinge Bracket Assembly 4 438391 Cable, Engine Zone Control / Rear Door Prop 38 419942X428 Discharge Deflector 65 197480 429930X004 Bracket, Upstop 40 438526X479 Handle Bracket, LH 68 431134 429308 Handle Knob, Star 42 193000 Spring, Torsion 71 431009 750634 Screw #10-24 x 1/2 43 191730 Nut, Hex, Flanged 1/4-20 72 425937 426423X428 Control Bar 44 431558 Kit, Mower Housing 73 422115 4205575 Hairpin, Door/Handle Pivot 46 421782 Blade Adapter / Pulley 74 430765 189713X428 Handle Knob, Standard 47 421825 Blade, 22" 75 186159 437516 Plug, Lower Handle Bar 48 851074 Washer, Hardened 76 180331</td>	NO. DESCRIPTION NO. DESCRIPTION 183471X479 Upper Handle 36 175735 Hinge Bracket Assembly 438391 Cable, Engine Zone Control / Rear Door Prop 38 419942X428 Discharge Deflector 429930X004 Bracket, Upstop 40 438526X479 Handle Bracket, LH 45006 Guide, Cable 41 150406 Screw, Dogpoint 3/8-16 82398 Handle Knob, Star 42 193000 Spring, Torsion 750634 Screw #10-24 x 1/2 43 191730 Nut, Hex, Flanged 1/4-20 426423X428 Control Bar 44 431558 Kit, Mower Housing 426423X428 Control Bar 44 431558 Kit, Mower Housing 425575 Hairpin, Door/Handle Pivot 46 421782 Blade Adapter / Pulley 489713X428 Handle Knob, Standard 47 421825 Blade, 22" 437516 Plug, Lower Handle Bar 48 851074 Washer, Hardened 429157 Rear Baffle 49 850263 Washer, Helical<	NO. DESCRIPTION NO. NO. DESCRIPTION NO. 183471X479 Upper Handle 36 175735 Hinge Bracket Assembly 438391 Cable, Engine Zone Control / Rear Door Prop 39 419942X428 Discharge Deflector 6 429930X004 Bracket, Upstop 40 438526X479 Handle Bracket, LH 68 429930X004 Bracket, Upstop 40 438526X479 Handle Bracket, RH 68 429930X004 Bracket, Cupstop 40 438526X479 Handle Bracket, RH 68 429930X004 Bracket, Cupstop 40 438526X479 Handle Bracket, RH 68 45006 Guide, Cable 41 150406 Screw, Dogpoint 3/8-16 71 182398 Handle Knob, Star 42 193000 Spring, Torsion 71 47 25065 Hairpin, Door/Handle Pivot 46 421782 Blade Adapter / Pulley 74 4897120X428 Handle Knob, Standard 47 421825 Blade, 22° 75 437516	NO. DESCRIPTION NO. NO. DESCRIPTION NO. NO. 183471X479 Upper Handle 36 175735 Hinge Bracket Assembly 4 438391 Cable, Engine Zone Control / Rear Door Prop 38 419942X428 Discharge Deflector 65 197480 429930X004 Bracket, Upstop 40 438526X479 Handle Bracket, LH 68 431134 429308 Handle Knob, Star 42 193000 Spring, Torsion 71 431009 750634 Screw #10-24 x 1/2 43 191730 Nut, Hex, Flanged 1/4-20 72 425937 426423X428 Control Bar 44 431558 Kit, Mower Housing 73 422115 4205575 Hairpin, Door/Handle Pivot 46 421782 Blade Adapter / Pulley 74 430765 189713X428 Handle Knob, Standard 47 421825 Blade, 22" 75 186159 437516 Plug, Lower Handle Bar 48 851074 Washer, Hardened 76 180331


NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm.


IMPORTANT: Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your lawn mower and void your warranty.


CRAFTSMAN ROTARY LAWN MOWER - - MODEL NUMBER 917.370690 81 82 -28 -32 1[']7 18

 
CRAFTSMAN ROTARY LAWN MOWER - - MODEL NUMBER 917.370690


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	430991	Drive Control Assembly	29	409148	Locknut, Hex
		(Includes Cable)	32	194018	Drive Pulley
9	427426	Cable, Drive	33	426609	V-Belt
10	429544X479	Mounting Bracket, Drive Control	35	431124	Kit, Wheel Adjuster, Front, LH
11	194231X460	Wheel & Tire Assembly, Front			(Includes Red Knob and Pushnut)
12	12000058	E-Ring	36	424657	Gear Case Assembly, Complete
13	403849	Pinion	38	191730	Locknut, Hex 1/4-20
14	189403	Dust Cover	40	406558	Spring
15	404845	Pawl, Drive	41	431121	Kit, Wheel Adjuster, Front, RH
16	67725	Washer, Flat 3/8			(Includes Red Knob and Pushnut)
17	413808	Nut, Push	54	422507	Grassbag
18	419345X615	Selector Knob	57	419951	Frame, Grassbag
20	181698	Screw	80	421114	Kit, Water Washout Assembly
25	430458X004	Belt Keeper			(Includes Key Numbers 81 thru 83)
26	163409	Screw, Hi-Lo Thread #12 x 5/8	81	419735	Fitting, Water Washout
27	175262	Screw, Pan Head #10-24 x 2-3/4	82	415585	Washer, Lock, Internal Tooth
28	421094	Drive Cover	83	415586	Locknut, Hex, with O-Ring

 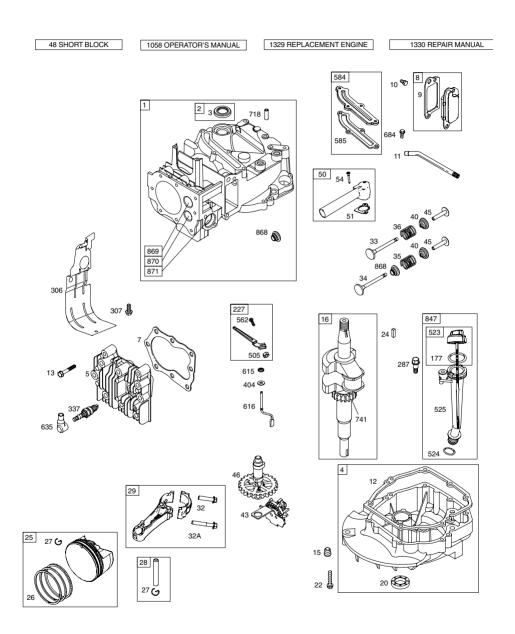


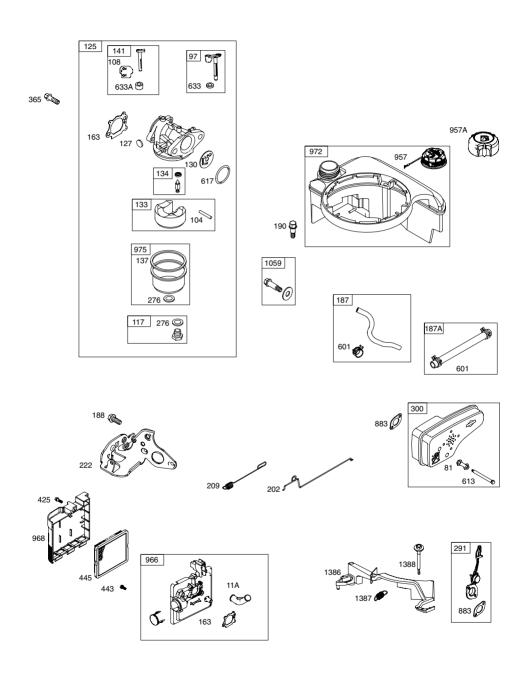

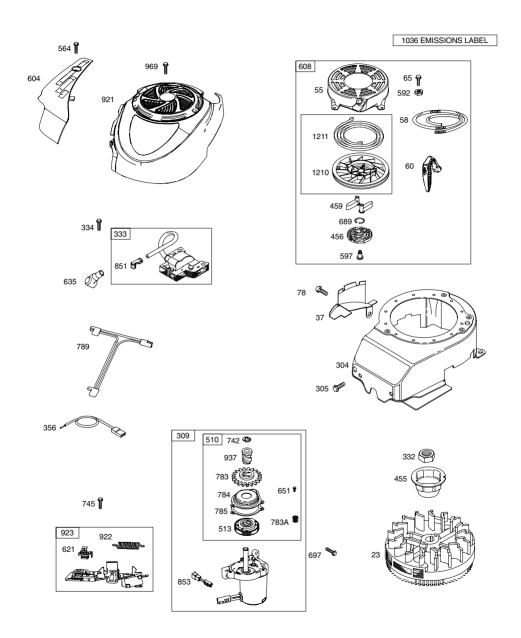



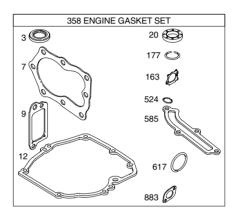



Engine Power Rating Information

The gross power rating for individual gas engine models is labeled in accordance with SAE (Society of Automo-tive Engineers) code J11940 (Small Engine Power & Torque Rating Procedure), and rating performance has been obtained and corrected in accordance with SAE J1995 (Revision 2002-5). Actual gross engine power will be lower and is affected by, among other things, ambient operating conditions and engine-to-engine variability. Given both the wide array of products on which engines are placed and the variety of environmental issues applicable to operating the equipment, the gas engine will not develop the rated gross power when used in a given piece of power equipment (actual "on-site" or net horsepower). This difference is due to a variety of factors including, but not limited to, accessories (air cleaner, exhaust, charging, cooling, carburetor, fuel pump, etc.), application limitations, ambient operating conditions (temperature, humidity, altitude), and engine-to-engine variability. Due to manufacturing and capacity limitations, Briggs & Stratton may substitute an engine of higher rated power for this Series engine.

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1 2	697322 399269	Cylinder Assembly Kit-Bushing / Seal	29	797306	Rod-Connecting (Used After Code Date 09041600).
		(Magneto Side)		499424	Rod-Connecting
3	299819s	Seal-Oil (Magneto Side)			(Used Before Code Date
4	493279	Sump-Engine			09041700).
5	691160	Head-Cylinder	32	691664	Screw (Con. Rod) (Short)
7	692249	Gasket-Cylinder Head	32A	695759	Screw (Con. Rod) (Long)
8	695250	Breather Assembly	33	262651s	Valve-Exhaust
9	699472	Gasket-Breather	34	262652s	Valve-Intake
10	691125	Screw (Breather Assembly)	35	691270	Spring-Valve (Intake)
11	691781	Tube-Breather	36	691270	Spring-Valve (Exhaust)
11A	691923	Tube-Breather	37	793756	Guard-Flywheel
12	692232	Gasket-Crankcase	40	692194	Retainer-Valve
13	690912	Screw (Cylinder Head)	43	691997	Slinger-Governor / Oil
15	691680	Plug-Oil Drain	45	690548	Tappet-Valve
16	691450	Crankshaft (Includes Shim)	46	691449	Camshaft
20	399781s	Seal-Oil (PTO Side)	48	792741	Short Block
22	691092	Screw (Crankcase / Sump)	50	796703	Manifold-Intake
23	691987	Flywheel	51	796704	Gasket-Intake
24	222698s	Key-Flywheel	54	691650	Screw (Intake Manifold)
25	797302	Piston Assembly (Standard	55	691421	Housing-Rewind Starter
		Size) (Used After Code Date	58	697316	Rope-Starter
		09041600).	60	795426	Grip-Starter Rope
	795429	Piston Assembly (Standard	65	690837	Screw (Rewind Starter)
		Size) (Used Before Code	78	691108	Screw (Flywheel Guard)
		Date 09041700).	81	691740	Lock-Muffler Screw
	797303	Piston Assembly	97	696565	Shaft-Throttle
		(.020" Oversize) (Used After	104	691242	Pin-Float Hinge
		Code Date 09041600).	108	796708	Valve-Choke
	795430	Piston Assembly (.020"	117	694176	Jet-Main (Standard Size)
		Oversize) (Used Before Code	121	796612	Kit-Carburetor Overhaul
		Date 09041700).	125	796707	Carburetor
26	797304	Ring Set (Standard Size)	127	694468	Plug-Welch
		(Used After Code Date	130	696564	Valve-Throttle
		09041600).	133	398187	Float-Carburetor
	795431	Ring Set (Standard Size)	134	398188	Kit-Needle / Seat
		(Used Before Code Date	137	796610	Gasket-Float Bowl
	707005	09041700).	141	796193	Kit-Choke Shaft
	797305	Ring Set (.020" Oversize)	163	795629	Gasket-Air Cleaner
		(Used After Code Date	177	691031	Seal-O Ring (Dipstick)
	705 400	09041600).	187	791873	Line-Fuel (Formed)
	795432	Ring Set (.020" Oversize)	1074	701700	(Cut To Required Length)
		(Used Before Code Date		791766	Line-Fuel (Cut To Length)
07	CO1E00	09041700).	188	693999	Screw (Control Bracket)
27	691588	Lock-Piston Pin (Used After Code Date 09041600).	190	690940	Screw (Fuel Tank)
	601066	,	202	691829	Link-Mechanical Governor
	691866	Lock-Piston Pin (Used Before	209	699056	Spring-Governor (No Color) Bracket-Control
20	202000	Code Date 09041700).	222	795937	Lever-Governor Control
28	298909	Pin-Piston (Used After	227	690783	
	400400	Code Date 09041600).	276	271716	Washer-Sealing Screw (Dipstick Tube)
	499423	Pin-Piston (Used Before Code Date 09041700).	287	690940	Thermostat
			.291 .8	790830	memiosiai

48

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
300	790828	Muffler	783	795096	Gear-Pinion (Small)
304	790826	Housing-Blower	783A	795099	Gear-Pinion (Large)
305	691108	Screw (Blower Housing)	784	795095	Cover-Starter Gear
306	790836	Shield-Cylinder	785	795097	Gasket-Starter Cover
307	690345	Screw (Cylinder Shield)	789	796574	Harness-Wiring
309	795092	Motor-Starter	847	692047	Dipstick / Tube Assembly
332	690662	Nut (Flywheel)	851	493880s	
333	790817	Armature-Magneto	853	695268	Adapter-Wire (Starter Motor)
334	691061	Screw (Magneto Armature)	868	697338	Seal-Valve
337	796112s	Plug-Spark	869	691155	Seat-Valve (Intake)
356	692390	Wire-Stop	870	690380	Seat-Valve (Exhaust)
358	794307	Gasket Set-Engine	871	262001	Bushing-Valve Guide
365	691688	Screw (Carburetor)			(Exhaust Valve)
404	690272	Washer (Governor Crank)		63709	Bushing-Valve Guide
425	690670	Screw (Air Cleaner Cover)			(Intake Valve)
443	692523	Screw (Air Cleaner Base)	883	691881	Gasket-Exhaust
445	491588s	Filter-Air Cleaner Cartridge	921	796706	Cover-Blower Housing
455	791960	Cup-Flywheel	922	692135	Spring-Brake
456	692299	Plate-Pawl Friction	923	796387	Brake
459	281505s	Pawl-Ratchet	937	795098	Spline-Starter
505	691251	Nut (Governor Control Lever)	957	793606	Cap-Fuel Tank
513	795100	Clutch-Drive		692046	Cap-Fuel Tank
523	499621	Dipstick	966	795259	Base-Air Cleaner Primer
524	692296	Seal- Dipstick Tube	968	692298	Cover-Air Cleaner
525	495265	Tube-Dipstick	969	690700	Screw (Blower Cover)
562	691119	Bolt (Governor Control Lever)	972	699374	Tank-Fuel
564	698589	Screw (Control Cover)	975	493640	Bowl-Fuel
584	697734	Cover-Breather Passage	1036		Label-Emissions (Available
585	691879	Gasket-Breather Passage			From any Briggs & Stratton
592	690800	Nut (Rewind Starter)	1050	077000	Authorized Dealer)
597 601	691696	Screw (Pawl Friction Plate) Clamp-Hose (Green)		277039	Operator's Manual Kit-Screw / Washer
604	791850 790703	Cover-Control	1059	692311	(Fuel Tank)
608	497680	Starter-Rewind	1005	498528	Gasket Set-Valve
613	790833	Screw (Muffler)		498144	Pulley / Spring Assy. (Pulley)
615	690340	Retainer-Governor Shaft		498144	Pulley / Spring Assy. (Fulley)
616	698801	Crank-Governor		128L07-(, , , , , , , ,
617	270344s	Seal-O Ring (Intake Manifold)		270962	Repair Manual
621	692310	Switch-Stop (Brake)		790848	Vane-Air
633	691321	Seal-Choke / Throttle Shaft		790849	Spring-Air Vane
	00.02.	(Throttle Shaft)		790850	Screw (Air Vane)
633A	693867	Seal-Choke / Throttle Shaft		398067	Spark Arrester
		(Choke Shaft)			(available accessory)
635	66538s	Boot-Spark Plug			
651	690345	Screw (Starter Gear Cover)	Carb	uretor Ove	erhaul Kit Key No. 121
684	690345	Screw (Breather Cover)			
689	691855	Spring-Friction	Engir	ne Gasket	Set Key No. 358
697	691127	Screw (Drive Cap)			
718	690959	Pin-Locating	Valve	Gasket S	Set Key No. 1095
741	795755	Gear-Timing (Includes Shim)			
742	795094	Retainer-E Ring	NOT		ponent dimensions given in U.S.
745	691648	Screw (Brake)	40	inches.	1 inch = 25.4 mm

49