

Owner's Manual



ROTARY LAWN MOWER


5.5 Horsepower

21" Rear Discharge

Model No.

917.388592

• Español, p. 18

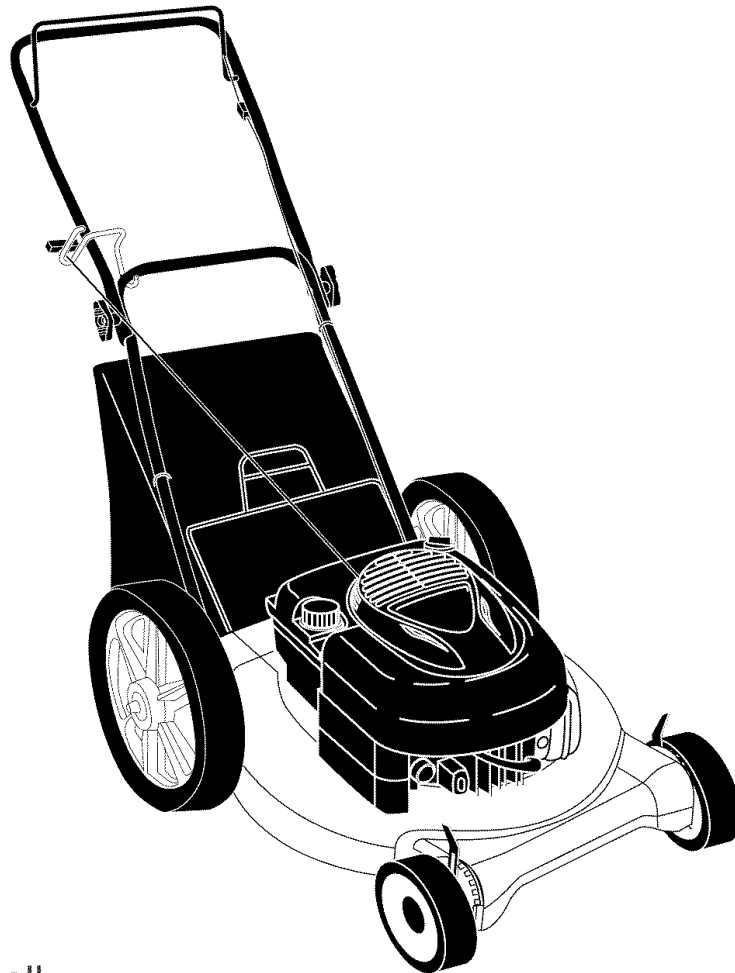


CAUTION:

Read and follow all
Safety Rules and Instructions
before operating this equipment

Sears, Roebuck and Co., Hoffman Estates, IL 60179 U.S.A.
Visit our Craftsman website: www.sears.com/craftsman

CRAFTSMAN ROTARY LAWN MOWER - - MODEL NUMBER 917.388592

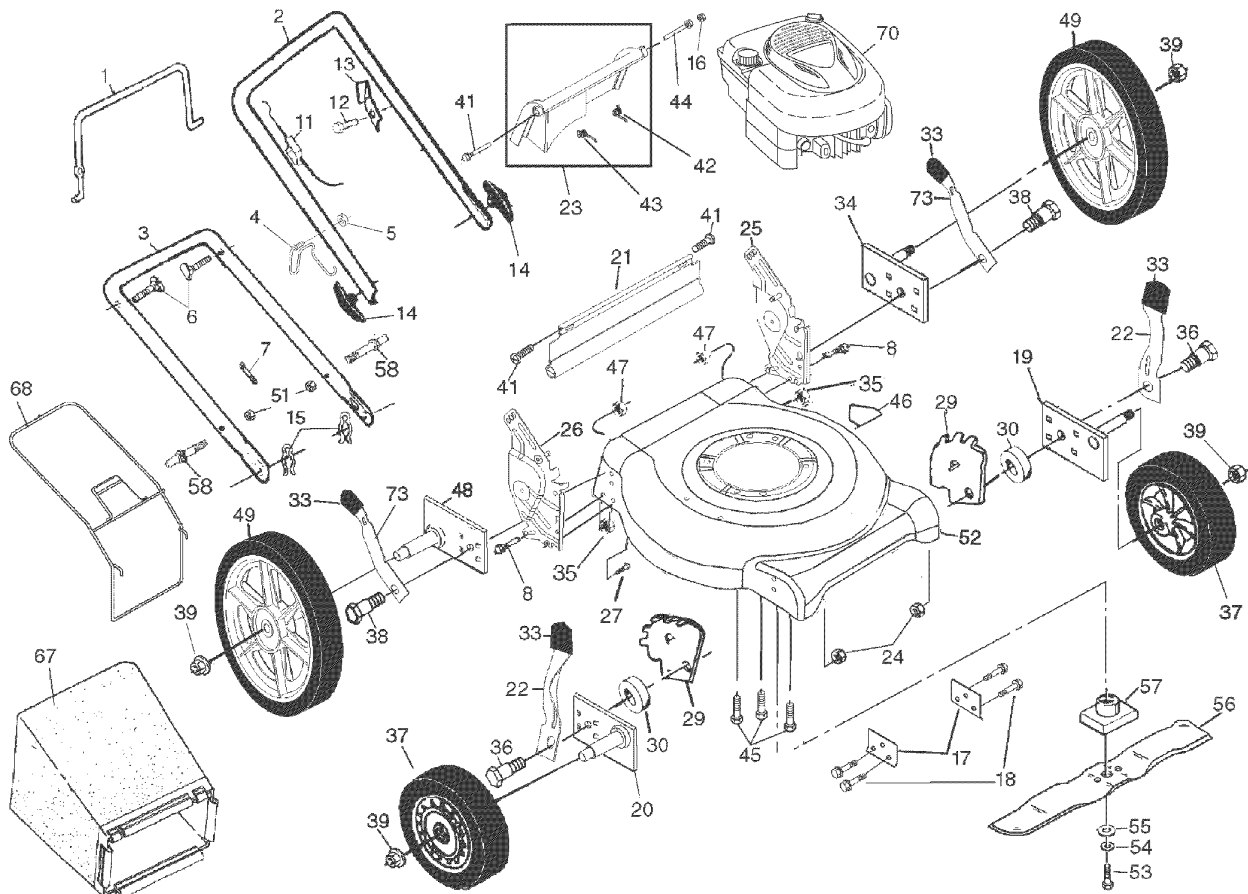


CRAFTSMAN ROTARY LAWN MOWER - - MODEL NUMBER 917.388592


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	131696	Control Bar	41	88652	Hinge Screw
2	166860X479	Upper Handle	42	165766	Spring, LH
3	161105X479	Lower Handle	43	165767	Spring, RH
4	186079	Rope Guide / Anti-Fold Bracket	44	185819	Rod, Stiffener
5	132004	Locknut 1/4-20	45	150406	Hex Head Thread Rolling Screw 3/8-16 x 1
6	131959	Handle Bolt	46	85463	Danger Decal
7	66426	Wire Tie	47	73800500	Nut
8	74780512	Hex Bolt 5/16-18 x 3/4	48	180410X004	Axle Arm Assembly, RR
11	176556	Engine Zone Control Cable	49	188808	Wheel
12	750634	Hex Washer Head Screw #10-24 x 1/2	51	73930500	Nut, Hex
13	86899X004	Up-Stop Bracket	52	166872	Housing Assembly (Includes Key #17, 18 and 46)
14	136376	Handle Knob	53	851084	Hex Head Screw 3/8-24 x 1-3/8 Grade 8
15	51793	Hairpin Cotter	54	850263	Helical Lockwasher
16	751152	Nut, Hex, Flangelock	55	851074	Hardened Washer
17	165946X479	Support Bracket	56	189028	21" Blade
18	17600406	Screw	57	184590	Blade Adapter
19	186577X004	Axle Arm Assembly, LF	58	188821	Adjustment Bolt
20	186578X004	Axle Arm Assembly, RF	67	189262	Grass Bag
21	188987	Rear Skirt	68	188813	Frame, Grass Bag
22	168360X004	Selector Spring	70	- - -	Engine, Briggs & Stratton, Model Number 123K02-0357-E1 (See Breakdown)
23	186612	Rear Door Assembly Kit (Includes Springs)	73	180080X004	Spring, Selector
24	73930500	Locknut 5/16-18	--	161058	Warning Decal (not shown)
25	186212X479	Handle Bracket Assembly (Left)	--	191016	Owner's Manual
26	186213X479	Handle Bracket Assembly (Right)			
27	851856	Screw 1/4-20 x 3/8			
29	160835X007	Wheel Adjusting Bracket, Front			
30	183901	Washer, Flat			
33	87877	Selector Knob			
34	180409X004	Axle Arm Assembly, LR	71	33623	Gas Can (2.5 Gallon Container)
35	166785	Locknut 5/16-18	71	33500	Fuel Stabilizer
36	160828	Shoulder Bolt 5/16-18	71	33000	SAE 30W Oil (20 Ounce Bottle)
37	700263	Wheel Assembly	71	33088	Clipping Deflector
38	164362	Shoulder Bolt			
39	83923	Flanged Locknut			


Available accessories not included with lawn mower:

71	33623	Gas Can (2.5 Gallon Container)
71	33500	Fuel Stabilizer
71	33000	SAE 30W Oil (20 Ounce Bottle)
71	33088	Clipping Deflector

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

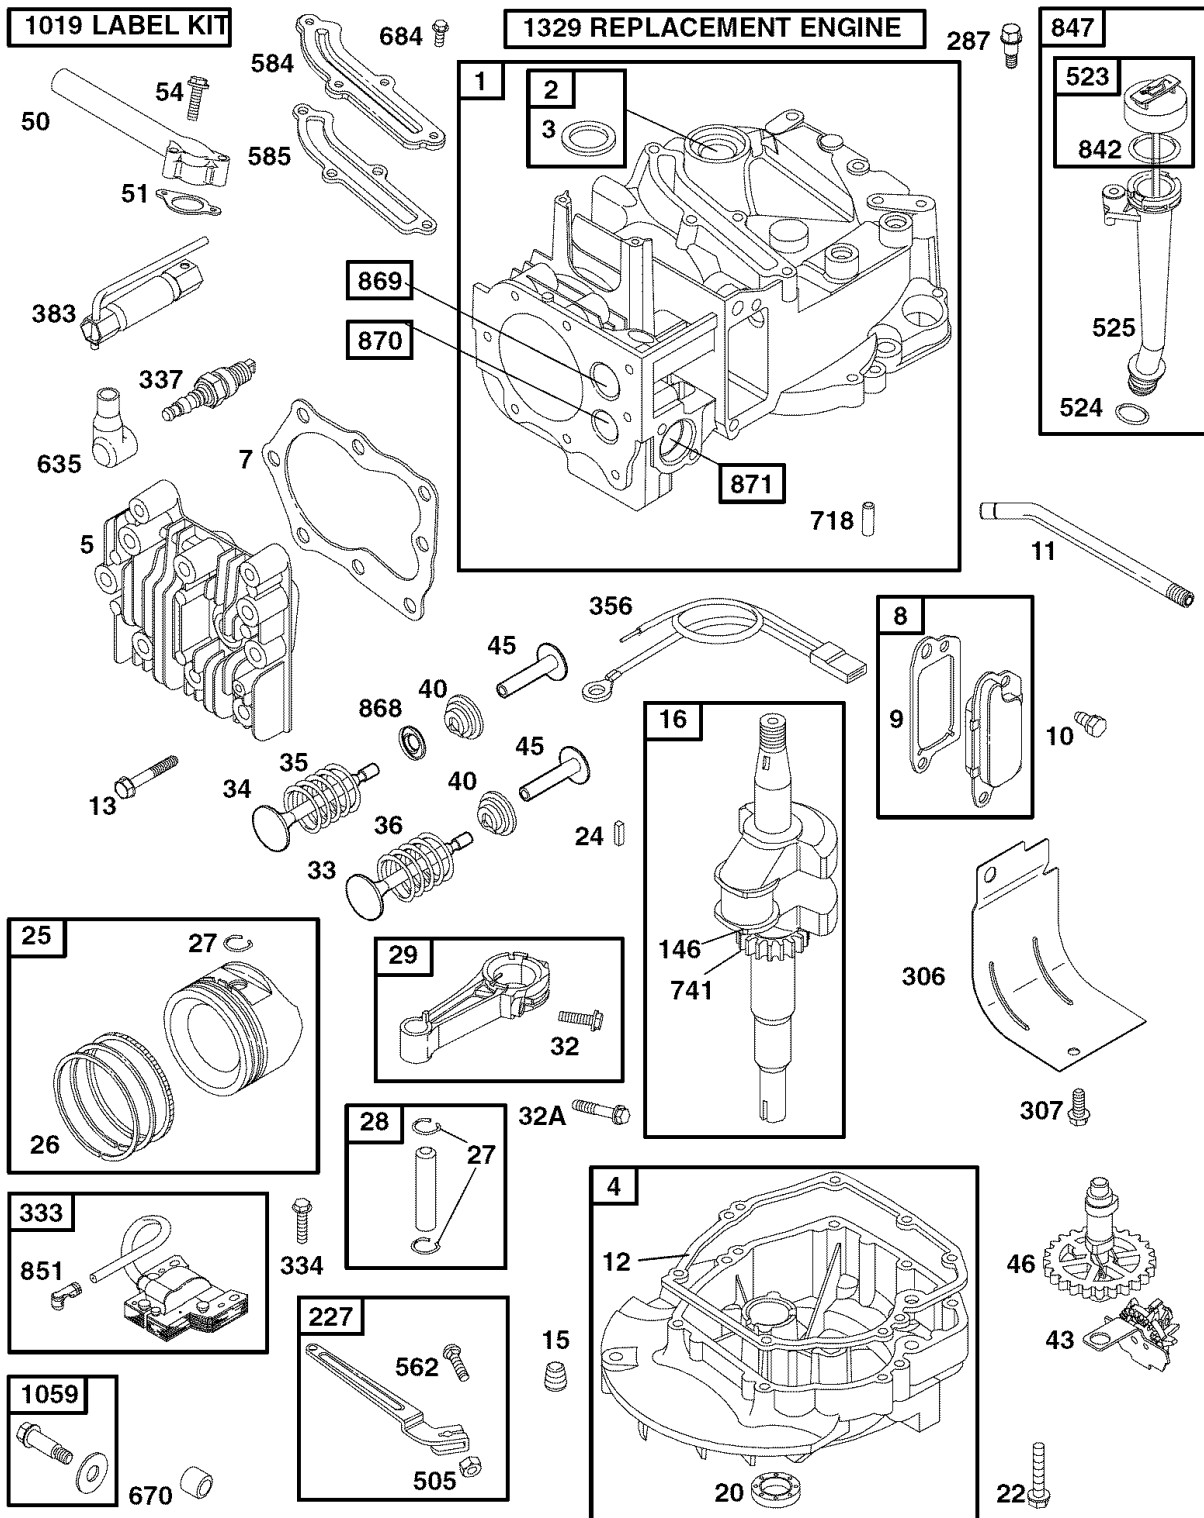

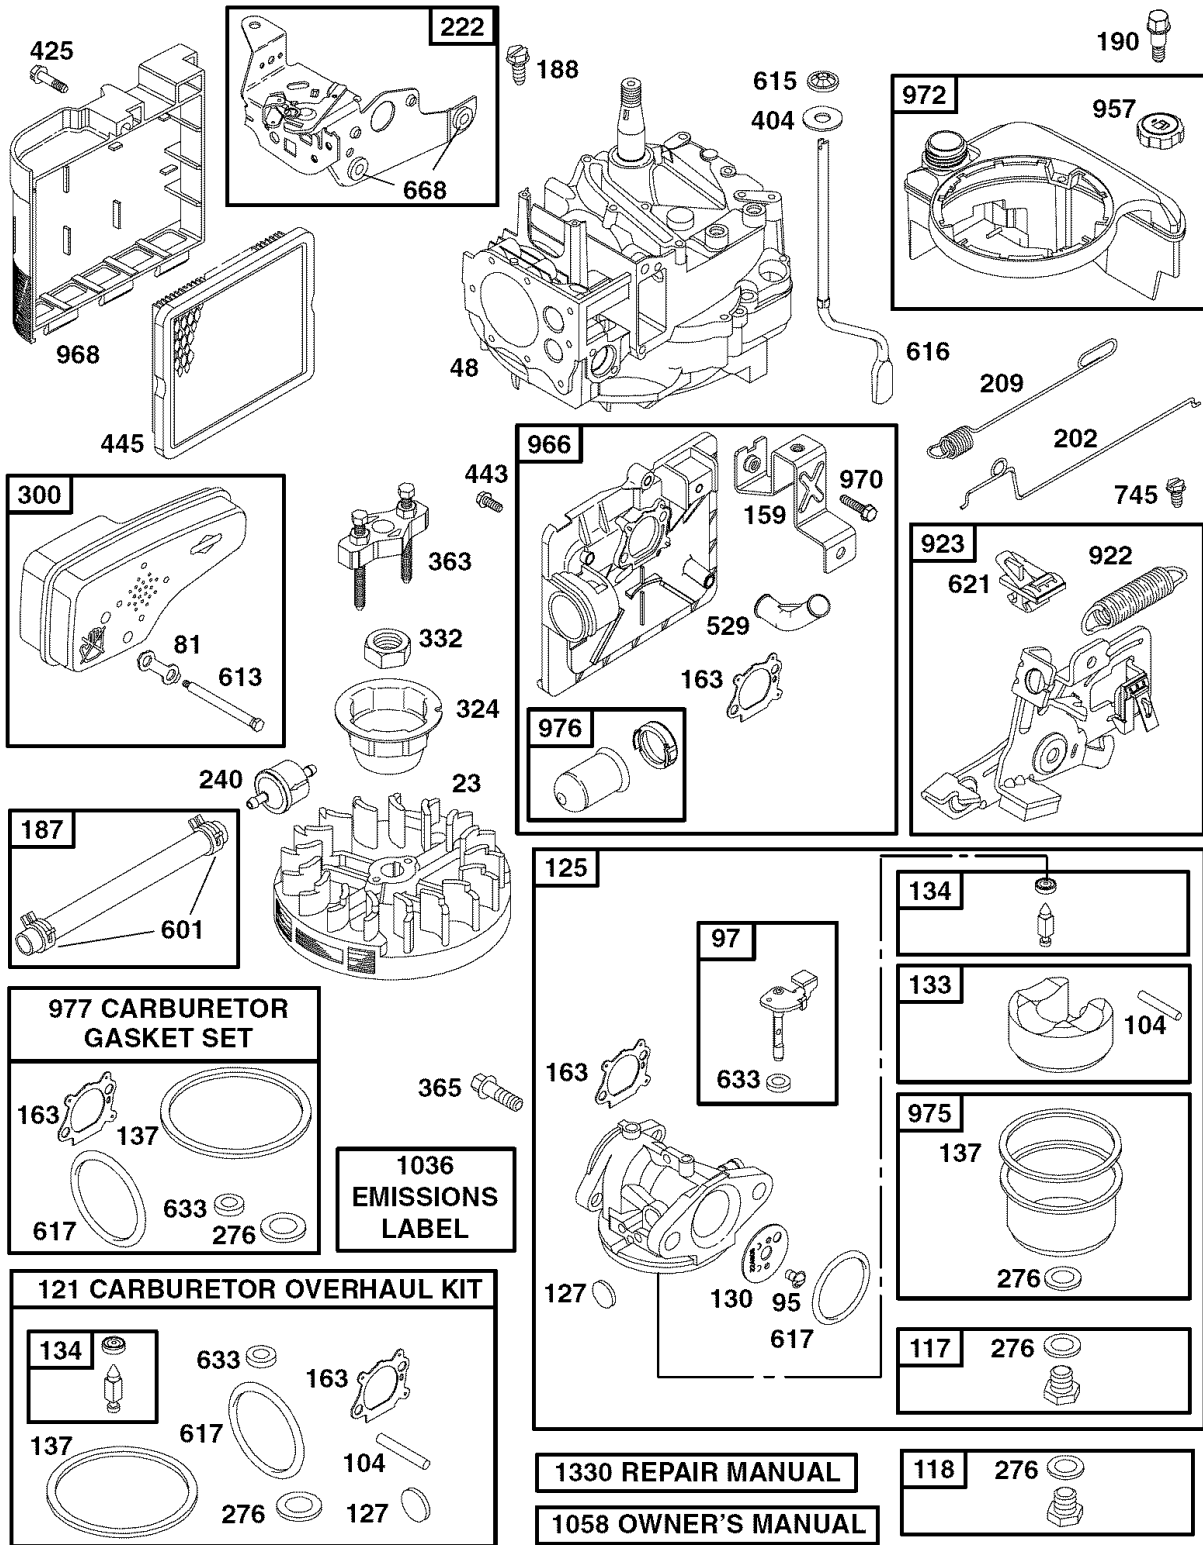

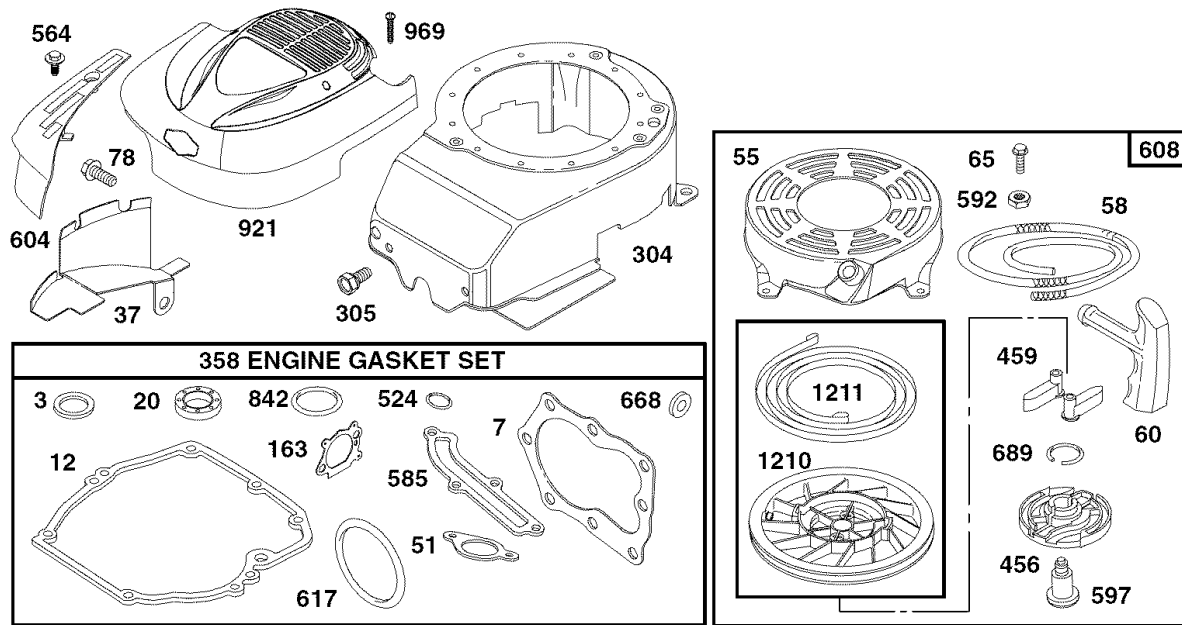

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	697322	Cylinder Assembly	32	691664	Screw (Connecting Rod)
2	399269	Kit-Bushing/Seal	32A	695759	Screw (Connecting Rod)
3	299819	• Seal-Oil (Magneto Side)	33	262651	Valve-Exhaust
4	493279	Sump-Engine	34	262652	Valve-Intake
5	691160	Head-Cylinder	35	691270	Spring-Valve (Intake)
7	692249	• Gasket-Cylinder Head	36	691270	Spring-Valve (Exhaust)
8	695250	Breather Assembly	37	694086	Guard-Flywheel
9	699472	Gasket-Breather	40	692194	Retainer-Valve
10	691125	Screw (Breather Assembly)	43	691997	Slinger-Governor/Oil
11	691260	Tube-Breather	45	690548	Tappet-Valve
12	692232	• Gasket-Crankcase	46	691449	Camshaft
13	690912	Screw (Cylinder Head)	48	498829	Short Block
15	691680	Plug-Oil Drain	50	497465	Manifold-Intake
16	691450	Crankshaft	51	272199	• Gasket-Intake
20	399781	• Seal-Oil (PTO Side)	54	691650	Screw (Intake Manifold)
22	691092	Screw (Engine Sump)	55	691421	Housing-Rewind Starter
23	692315	Flywheel	58	697316	Rope-Starter (Cut to Required Length)
24	222698	Key-Flywheel	60	281434	Grip-Starter Rope
25	697339	Piston Assembly (Standard)	65	690837	Screw (Rewind Starter)
	697341	Piston Assembly (.020" Oversize)	78	691108	Screw (Flywheel Guard)
26	499425	Ring Set-Piston (Standard)	81	691740	Lock-Muffler Screw
	499427	Ring Set-Piston (.020" Oversize)	95	691636	Screw (Throttle Valve)
27	691866	Lock-Piston Pin	97	696565	Shaft-Throttle
28	499423	Pin-Piston	104	691242	∅ Pin-Float Hinge
29	499424	Rod-Connecting			

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
117	498978	Jet-Main (Standard)	601	95162	Clamp-Hose
118	497466	Jet-Main (High Altitude)	604	698588	Cover-Control
121	498260	Kit-Carburetor Overhaul	608	497680	Starter-Rewind
125	498170	Carburetor	613	691340	Screw (Muffler)
127	694468	Ø Plug-Welch	615	690340	Retainer-Governor Shaft
130	696564	Valve-Throttle	616	698801	Crank-Governor
133	398187	Float-Carburetor	617	270344	•Ø‡ Seal-O Ring (Intake Manifold)
134	398188	Ø Valve-Needle/Seat	621	692310	Switch-Stop
137	693981	Ø‡ Gasket-Float Bowl	633	691321	Ø‡ Seal-Throttle Shaft
146	690979	Key-Timing	635	66538	Boot-Spark Plug
159	691753	Bracket-Air Cleaner Primer	668	493823	• Spacer (Includes 2)
163	272653	•Ø‡ Gasket-Air Cleaner	670	692294	Spacer-Fuel Tank
187	790178	Line-Fuel (Cut to Required Length)	684	690345	Screw (Breather Passage Cover)
188	693399	Screw (Control Bracket)	689	691855	Spring-Friction
190	690940	Screw (Fuel Tank)	718	690959	Pin-Locating
202	691829	Link-Mechanical Governor	741	691830	Gear-Timing
209	699056	Spring-Governor	745	691648	Screw (Brake)
222	692467	Bracket-Control	842	691031	• Seal-O Ring (Dipstick Tube)
227	690783	Control Lever-Governor	847	692017	Assembly-Dipstick/Tube
240	691035	Filter-Fuel	851	493880	Terminal-Spark Plug
276	271716	Ø‡ Sealing Washer	868	697338	Seal-Valve
287	690940	Screw (Dipstick Tube)	869	691155	Seat-Valve (Intake)
300	692038	Muffler	870	690380	Seat-Valve (Exhaust)
304	695892	Housing-Blower	871	262001	Bushing-Guide (Exhaust)
305	691108	Screw (Blower Housing)		63709	Bushing-Guide (Intake)
306	690450	Shield-Cylinder	921	695889	Cover-Blower Housing
307	690345	Screw (Cylinder Shield)	922	692135	Spring-Brake
324	695161	Cup/Screen Assembly	923	695891	Brake
332	690662	Nut (Flywheel)	957	397974	Cap-Fuel Tank
333	802574	Armature-Magneto	966	496116	Base-Air Cleaner Primer
334	691061	Screw (Armature Magneto)	968	692298	Cover-Air Cleaner
337	802592	Plug-Spark	969	691138	Screw (Blower Housing Cover)
356	692390	Wire-Stop	970	691669	Screw (Air Cleaner Primer Bracket)
358	497316	Engine Gasket Set	972	699374	Tank-Fuel
363	19069	Flywheel Puller	975	493640	Bowl-Float
365	692524	Screw (Carburetor)	976	694395	Primer-Carburetor
383	89838	Wrench-Spark Plug	977	498261	Set-Carburetor Gasket
404	690272	Washer (Governor Crank)	1019	494256	Kit-Label
425	690670	Screw (Air Cleaner Cover)	1036	697457	Label-Emissions
443	692523	Screw (Air Cleaner Primer Base)	1058	275177	Owner's Manual
445	491588	Filter-Air Cleaner Cartridge	1059	692311	Kit-Screw/Washer
456	692299	Plate-Pawl Friction	1210	498144	Assembly-Pulley/Spring (Pulley)
459	281505	Pawl-Ratchet	1211	498144	Assembly-Pulley/Spring (Spring)
505	691251	Nut (Governor Control Lever)	1329	123K02-0025	Replacement Engine
523	495264	Dipstick	1330	272147	Repair Manual
524	692296	• Seal-Dipstick Tube			
525	495265	Tube-Dipstick			• Included in Engine Gasket Set, Key No. 358
529	691923	Grommet			
562	691119	Bolt (Governor Control Lever)	Ø		Included in Carburetor Overhaul Kit, Key No. 121
564	698589	Screw (Control Cover)			
584	697734	Cover-Breather Passage	‡		Included in Carburetor Gasket Set, Key No. 977
585	691879	• Gasket-Breather Passage			
592	690800	Nut (Rewind Starter)			
597	691696	Screw (Pawl Friction Plate)			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm