




# SPARE PARTS LIST

LAWN MOWERS: CONSUMER  
WALK-BEHINDS

LC140, 967320001, 2015-01

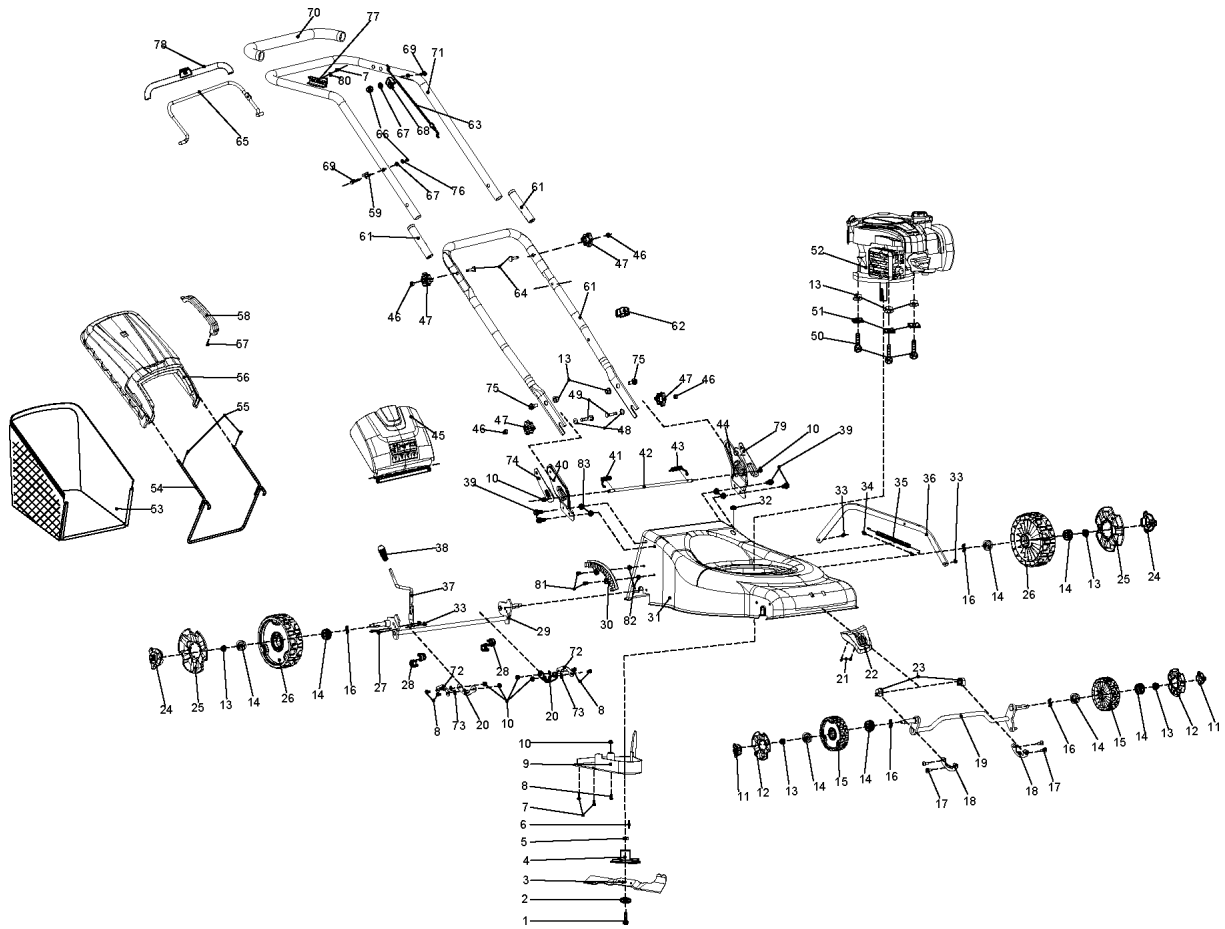

Спр. №	Код	Описание	Замечание	КОЛ Наб.
1	587 91 38-01	LOCKING BOLT		1
2	587 91 07-01	Шайба		1
3	587 38 63-10	MOWER BLADE		1
4	587 91 12-01	BLADE SUPPORT		1
5	587 91 54-01	BUSH		1
6	587 91 53-01	Плоский контакт		1
7	587 91 22-01	SCREW		3
8	587 91 26-01	SCREW		5
9	587 90 98-01	КРЫШКА		1
10	587 91 34-01	LOCK NUT		7
11	587 58 50-01	WHEEL COVER		2
12	587 58 52-01	WHEEL COVER		2
13	587 91 35-01	LOCKING BOLT		7
14	587 91 29-01	Игольчатый подшипник		8
15	587 58 54-01	Колесо		2
16	587 91 46-01	Шайба		4
17	587 91 25-01	SCREW		4
18	587 91 10-01	FIXING PLATE		2
19	587 91 15-01	AXLE		1
20	587 91 09-01	FIXING PLATE		2
21	587 91 24-01	SCREW		2
22	587 58 49-01	FRONT COVER		1
23	587 90 97-01	LOCKING RING		2
24	587 58 51-01	WHEEL COVER		2
25	587 58 53-01	WHEEL COVER		2
26	587 91 80-01	Колесо		2
27	587 91 27-01	Шайба		2
28	587 91 79-01	КРЫШКА		4
29	587 91 81-01	AXLE		1
30	587 90 99-01	SEGMENT		1
31	587 90 88-01	Пластина		1
32	587 99 23-01	Заглушка		1
33	587 91 31-01	LOCKING BOLT		4
34	587 91 58-01	TUBING		2
35	587 91 49-01	Пружина		1
36	502 23 06-01	Шатун 225H		1
37	502 50 27-01	Рукоятка и тросик		1
38	587 58 57-01	KNOB		1
39	587 91 39-01	BOLT 0 16X32		4
40	501 05 44-01	Кронштейн		1
41	587 91 51-01	Пружина		1
42	502 23 10-01	ROD		1
43	587 91 50-01	Кронштейн		1
44	501 05 47-01	Кронштейн		1
45	587 58 59-01	FLAP		1
46	587 91 33-01	HEXAGON NUT		4
47	587 58 58-01	KNOB		4
48	502 25 87-01	Кольцо		2
49	502 25 99-01	BOLT 0 16X32		2
50	587 91 37-01	BOLT 0 16X32		3
51	587 91 11-01	Прокладка		3
52	587 91 61-01	Продукция		1
53	587 58 63-01	GRASSBAG		1
54	587 91 18-01	Кронштейн		1
55	587 91 21-01	SCREW		2
56	587 58 60-01	КРЫШКА		1
57	587 91 23-01	SCREW		1
58	587 58 61-01	Передняя ручка 371K		1
59	502 27 58-01	Отпускной крючок к рулет.		1
60	502 27 59-01	Передняя ручка 371K		1
61	501 05 54-01	КРЫШКА		2
62	501 05 57-01	HOLDER		2
63	502 40 18-01	Провод		1
64	502 40 21-01	BOLT 0 16X32		2

Спр. №	Код	Описание	Замечание	КОЛ Наб.
65	502 40 54-01	TROLLEY		1
66	587 91 32-01	Гайка		2
67	587 91 44-01	Резиновое кольцо		2
68	502 40 56-01	BLOCK		1
69	587 91 40-01	BOLT 0 16X32		2
70	502 40 67-01	КРЫШКА		1
71	502 51 77-01	Передняя ручка 371K		1
72	587 99 24-01	FIXING PLATE		2
73	587 99 25-01	Сальник		4
74	501 05 56-01	Пластина		1
75	502 42 99-01	BOLT 0 16X32		2
76	502 43 42-01	Шайба		1
77	501 05 53-01	Пластина		1
78	501 05 52-01	ROD		1
79	501 05 55-01	Пластина		1
80	502 51 78-01	BUSH		1
81	579 68 51-01	BOLT 0 16X32		2
82	579 68 52-01	Гайка		2
83	579 68 79-01	Гайка		4