

STIGA

PARK COMPACT 16 4WD (2013)

 
13-6104-21



Spare parts list Reservdelar Repuestos Ersatzteile Pièces détachées Reserve onderdelen Catalogo ricambi


- Use ST. S.p.A. Genuine Spare Parts specified in the parts list for repair and/or replacement.
- The contents described in the parts list may change due to improvement.
- The drawings of the spare parts are only indicative And might Not represent the part in question exactly.
- The indications "right" - "left" - "front" - "rear" refer to the position of the operator when using the machine.
- When placing orders of parts for repair And/Or replacement, make sure that the illustrated parts list Is the one applying to the machine's year of manufacture, as shown on the identification plate attached to the machine.

All rights reserved. No part Of this material may be reproduced Or transmitted, in any form Or by any means, electronic Or mechanical, including photocopying, recording Or by any information storage And retrieval system, without permission in writing from ST. S.p.A.

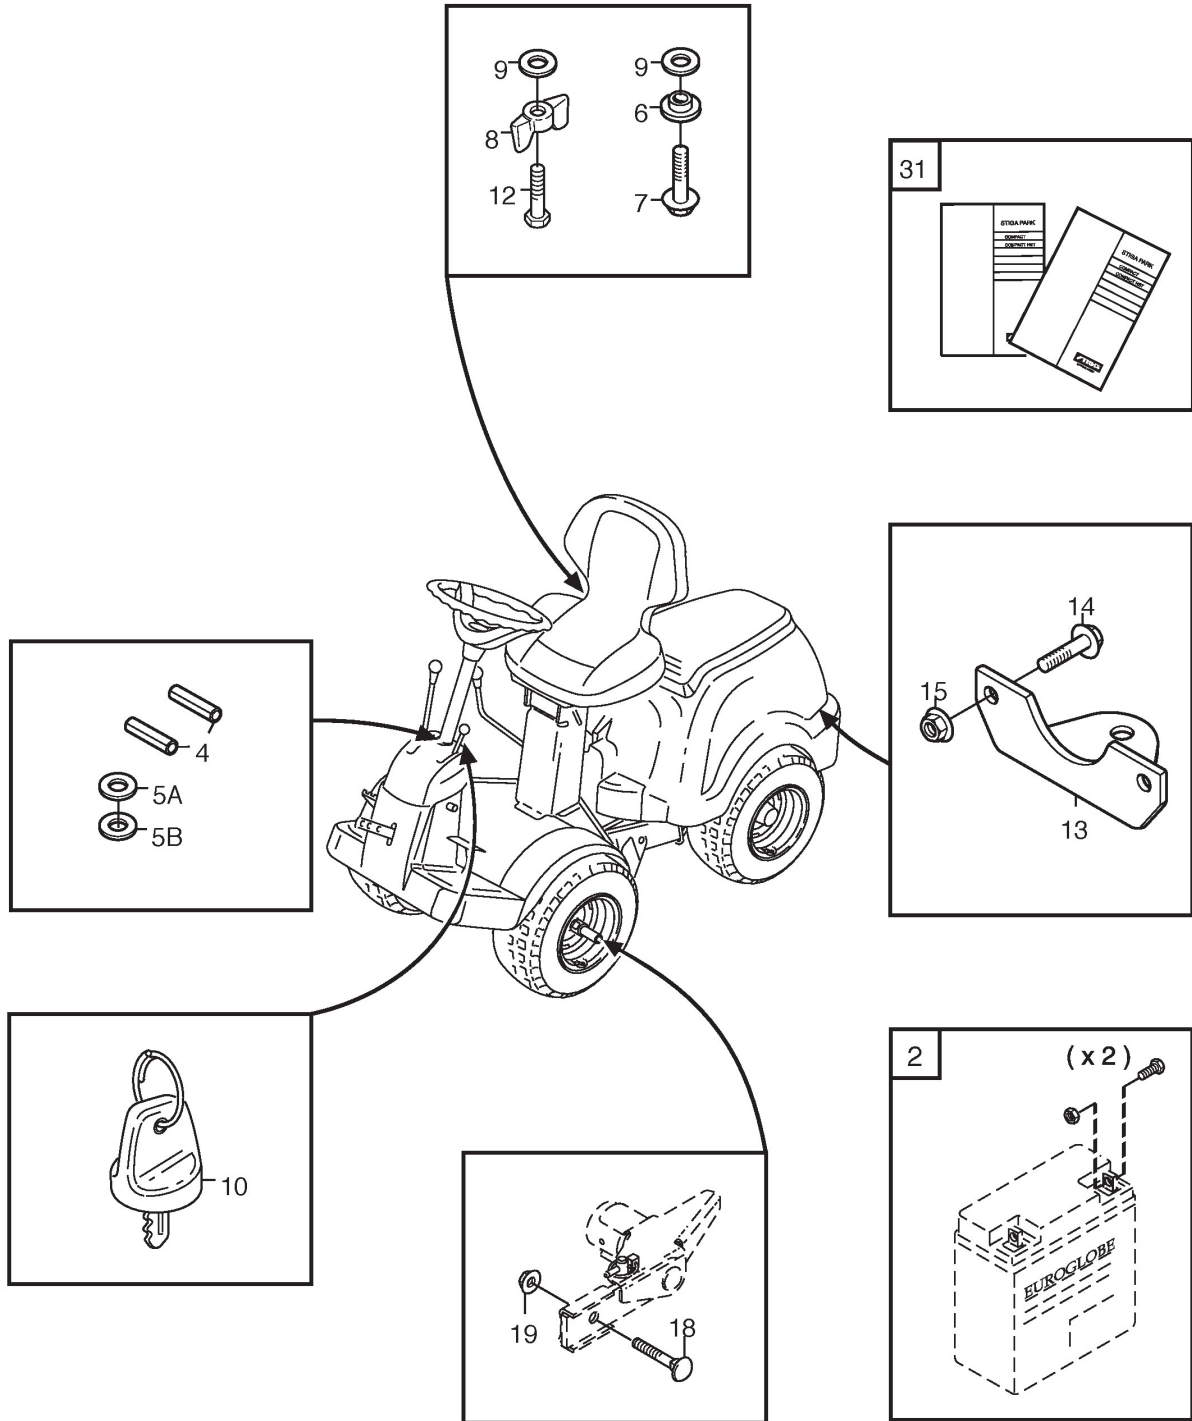


Assembly Parts

Ref.nr.	Qty	Item number	Description	Notes	From	Up to
2	1	1134-6113-01	Screw			
4	2	9595-0262-00	Locating Pin			
5	1	9699-0103-02	Washer	0.5 mm		
5	1	9699-0114-02	Washer	1.0 mm		
6	2	1134-4185-01	Flange Washer			
7	2	9959-0820-16	Screw			
8	2	1134-4481-01	Wing Nut			
9	4	9699-0056-02	Washer			
10	2	1134-4734-01	Ignition Key			
12	2	9997-0820-16	Screw			
13	1	1134-5512-01	Towing Plate			
14	2	9959-0820-16	Screw			
15	2	9739-0831-22	Nut			
18	2	9898-1035-16	Screw			
19	2	9739-1031-22	Nut			
31	1	8211-0001-00	Users Manual	From 01-September-2010 To 31-August-2011		
31	1	8211-0001-91	Owner's Manual	13-6103-21;From 01-September-2009 To 31-August-2010		
31	1	8211-0022-90	Owner's Manual	13-6109-21;From 01-September-2009 To 31-August-2010		
31	1	8211-0601-90	Assy Instructions	From 01-September-2009 To 31-August-2010		
31	1	8211-0701-91	Safety Regulations			
31	1	8211-0901-90	Service Book			
31	1	8211-0960-90	Warranty Card			

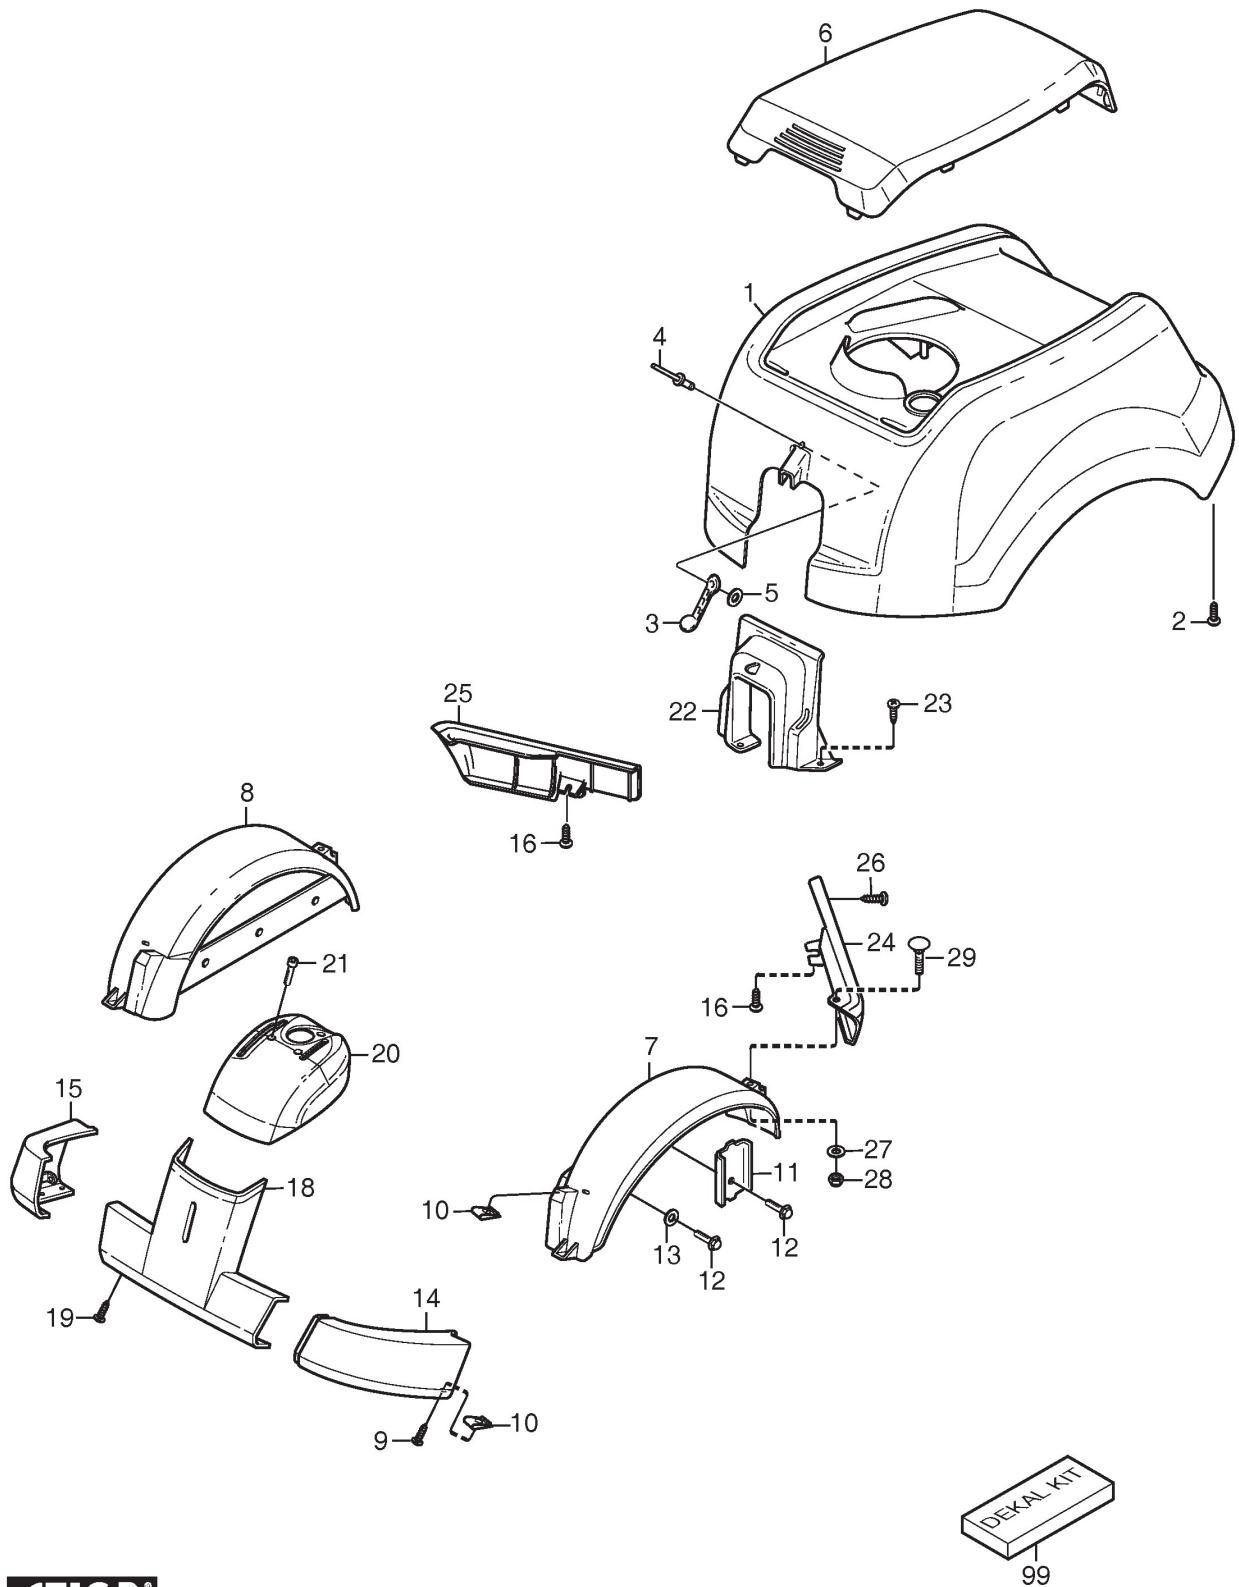 



Body work

Ref.nr.	Qty	Item number	Description	Notes	From	Up to
1	1	1134-5263-02	Engine Hood Yellow			
2	7	9838-9530-12	Screw			
3	1	1134-9028-01	Rubber Strap (3 Pcs)	Sats 3 st/kit of 3		
4	1	9632-0516-00	Pop Rivet			
5	1	9699-0120-02	Washer			
6	1	1134-5264-01	Engine Cover (Grey) 7-14			
7	1	1134-5308-01	Mudguard-Lh (Grey) 7-14			
8	1	1134-5308-02	Mudguard-Rh (Grey) 7-14			
9	4	9893-0616-16	Screw			
10	4	1134-4176-01	Clips			
11	2	1134-0225-00	Support Plate			
12	6	9945-0816-16	Screw			
13	4	9699-0056-02	Washer			
14	1	1134-5306-01	Bumper Front-Lh (Grey)			
15	1	1134-5306-02	Bumper Front-Rh (Grey)			
16	2	9893-0616-16	Screw			
18	1	1134-5305-01	Lower Hood Yellow			
19	2	9893-0616-16	Screw			
20	1	1134-5320-02	Front Cover Yellow			
21	2	9946-0525-16	Screw			
22	1	1134-6241-01	Hood Support			
23	3	9893-0616-16	Screw			
24	1	1134-3970-05	Moulding-Left (Grey)			
25	1	1134-3970-02	Moulding Right-Grey			
26	2	9893-0616-16	Screw			
27	2	9699-0060-02	Washer			
28	2	9747-0631-02	Lock Nut			
29	2	9897-0616-16	Screw			
99	1	1134-6440-03	Label			

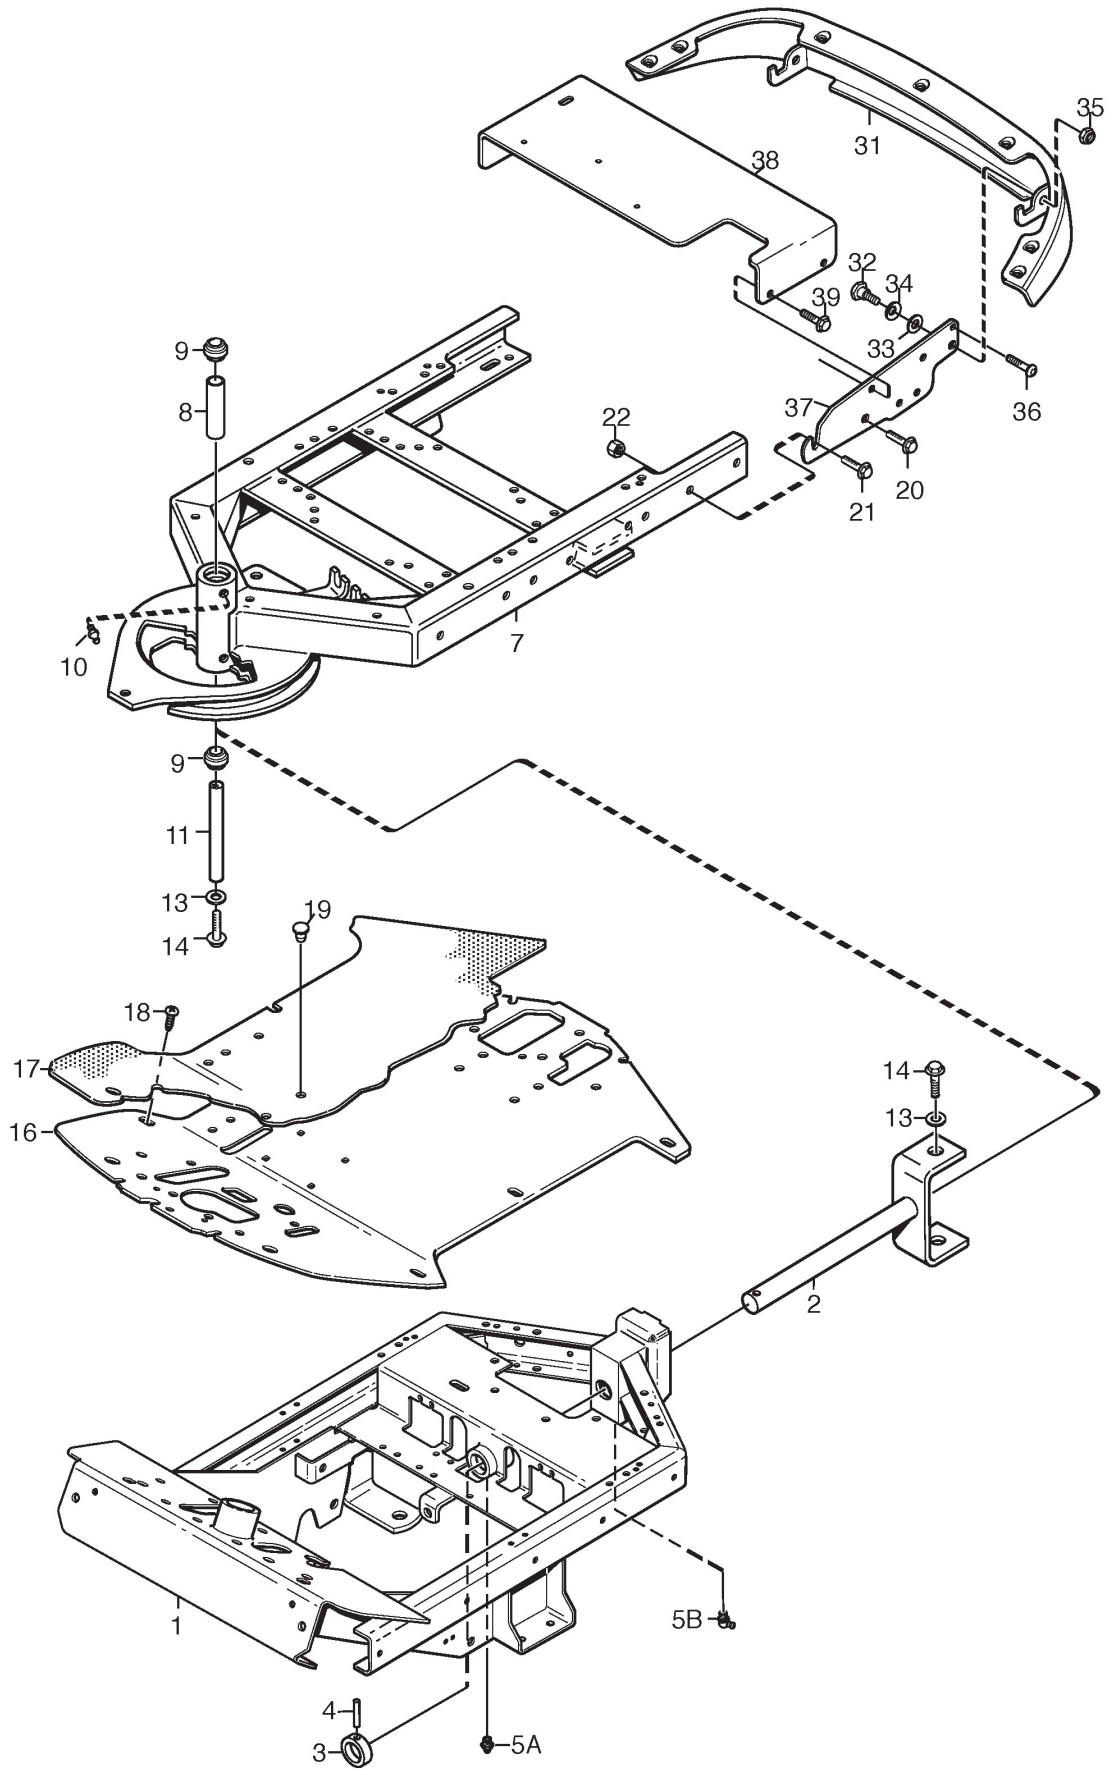 


Frame

Ref.nr.	Qty	Item number	Description	Notes	From	Up to
1	1	1137-0100-01	Frame-Front	From 01-September-2009 To 31-August-2010		
2	1	1134-3963-02	Fork	From 01-September-2009 To 31-August-2010		
3	1	1134-0031-00	Pivot Shaft Stop	From 01-September-2009 To 31-August-2010		
4	1	9595-0262-00	Locating Pin	From 01-September-2009 To 31-August-2010		
5	1	9501-0500-00	Grease Dispenser	Rak/straight;From 01-September-2009 To 31-August-2010		
7	1	1134-6466-01	Frame-Rear Assy	From 01-September-2009 To 31-August-2010		
8	1	1134-5705-01	Spacer	From 01-September-2009 To 31-August-2010		
9	2	9547-0001-00	Bearing	From 01-September-2009 To 31-August-2010		
10	2	9501-0500-00	Grease Dispenser	From 01-September-2009 To 31-August-2010		
11	1	1134-5988-01	Centre Shaft	From 01-September-2009 To 31-August-2010		
13	2	9699-0035-02	Washer	From 01-September-2009 To 31-August-2010		
14	2	9959-1025-16	Screw	From 01-September-2009 To 31-August-2010		
16	1	1134-6586-01	Floor Plate	From 01-September-2009 To 31-August-2010		
17	1	1134-6372-04	Floor Mat Hst	From 01-September-2009 To 31-August-2010		
18	2	9893-0616-16	Screw	From 01-September-2009 To 31-August-2010		
19	2	9403-0048-70	Cover Plug	From 01-September-2009 To 31-August-2010		
20	2	9945-0816-16	Screw	From 01-September-2009 To 31-August-2010		
21	2	9959-0820-16	Screw	From 01-September-2009 To 31-August-2010		
22	2	9739-0831-22	Nut	From 01-September-2009 To 31-August-2010		
31	1	1134-5337-02	Bumper Assy-Rear Grey	From 01-September-2009 To 31-August-2010		
32	2	1134-0240-00	Screw	From 01-September-2009 To 31-August-2010		
33	2	1134-4242-01	Washer	From 01-September-2009 To 31-August-2010		
34	2	9665-0002-00	Washer	From 01-September-2009 To 31-August-2010		
35	2	9747-0831-02	Lock Nut	From 01-September-2009 To 31-August-2010		
36	2	9943-0516-16	Screw	From 01-September-2009 To 31-August-2010		
37	2	1134-5345-01	Battery Holder	From 01-September-2009 To 31-August-2010		
38	1	1134-5344-01	Battery Shelf	From 01-September-2009 To 31-August-2010		
39	4	9945-0816-16	Screw	From 01-September-2009 To 31-August-2010		

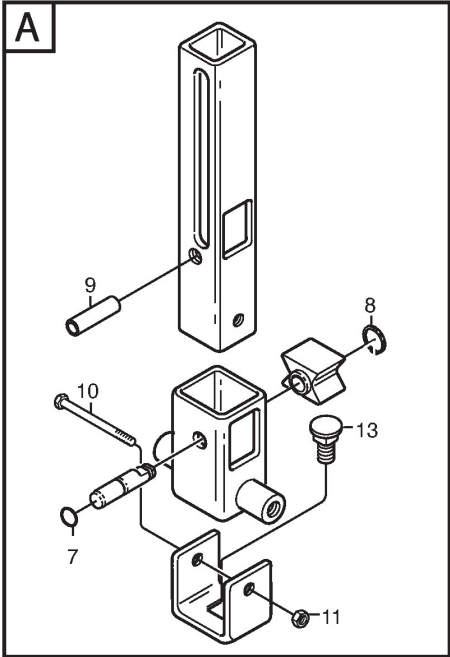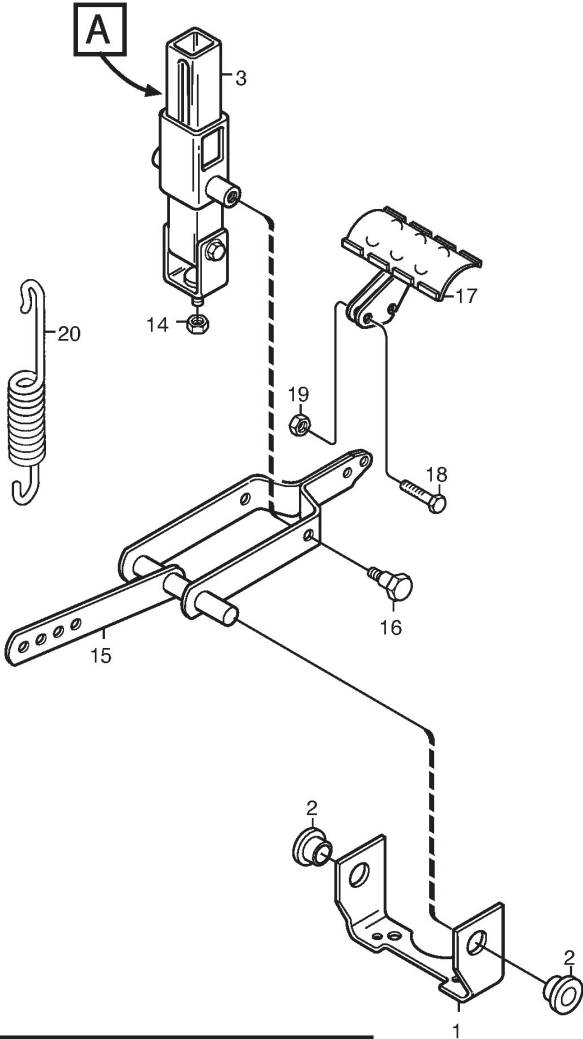  

Pedal lift

Ref.nr.	Qty	Item number	Description	Notes	From	Up to
1	1	1134-4117-01	Bracket			
2	2	1134-2684-01	Bearing			
3	1	1134-4945-01	Lift Catch Assy			
7	1	9404-0027-01	O-ring			
8	1	9650-0039-04	Lock Ring			
9	1	9595-0276-01	Locating Pin			
10	1	9997-0640-12	Screw			
11	1	9747-0631-02	Lock Nut			
13	1	9897-0820-16	Screw			
14	1	9747-0831-02	Lock Nut			
15	1	1134-4860-01	Lift Fork			
16	2	1134-0240-00	Screw			
17	1	1134-4938-01	Lift Pedal			
18	2	9997-0625-16	Screw			
19	2	9739-0631-22	Nut			
20	1	4231-0013-00	Spring			


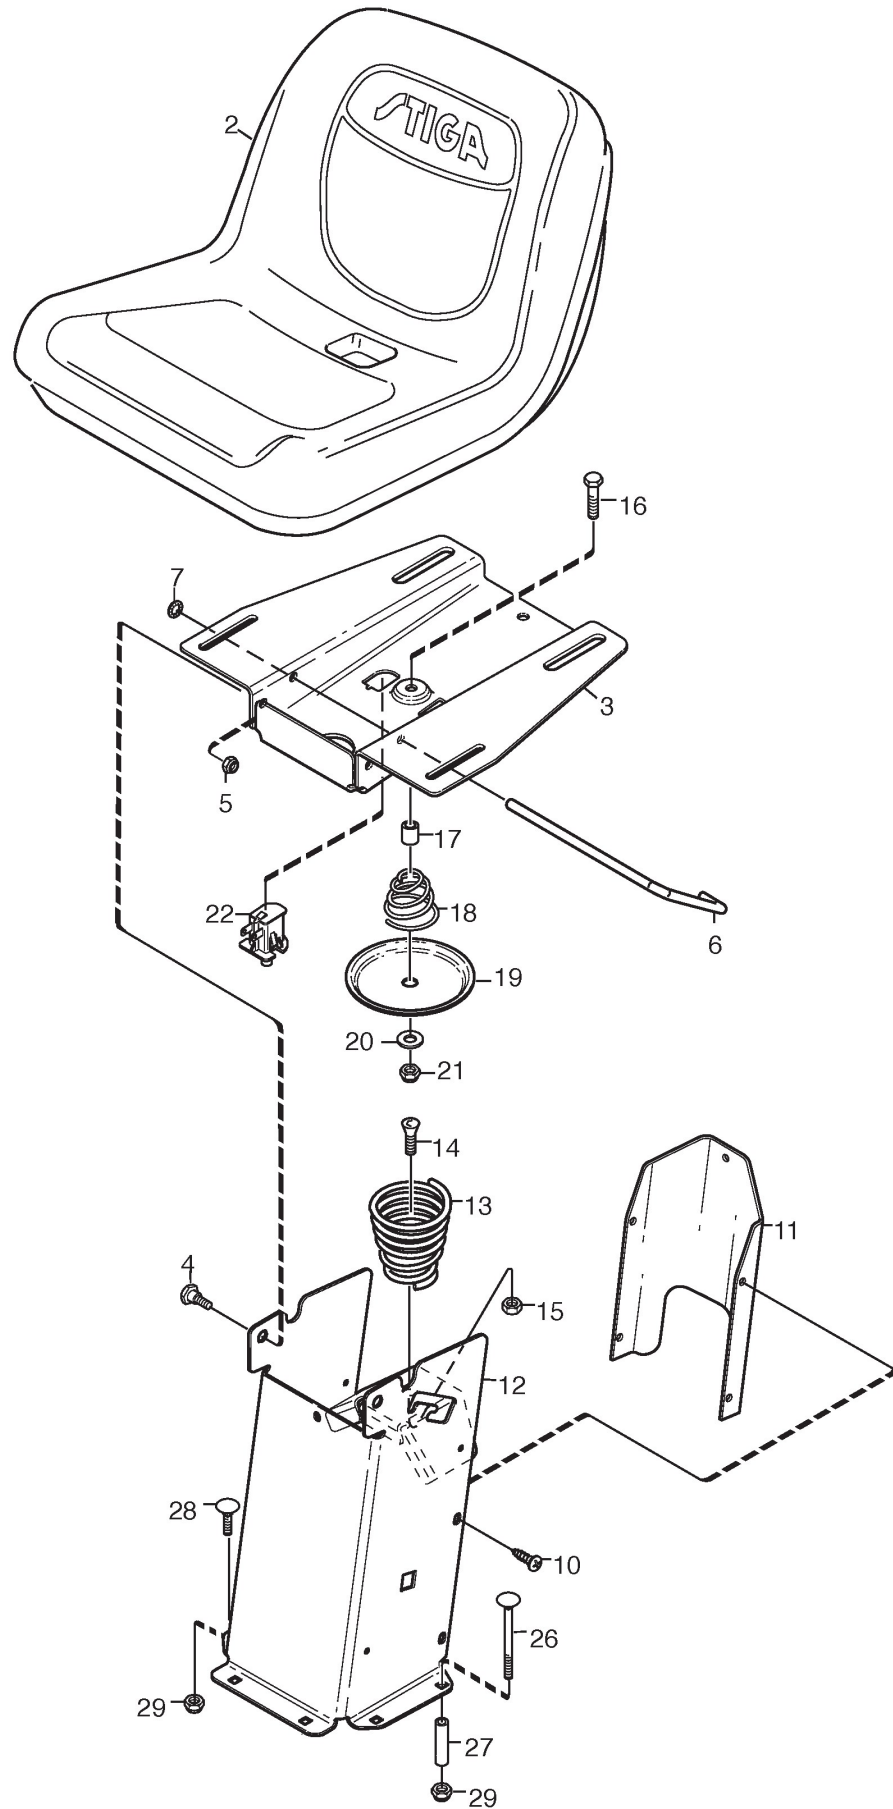 


Seat

Ref.nr.	Qty	Item number	Description	Notes	From	Up to
2	1	1134-6444-01	Seat			
3	1	1134-5301-01	Upper Seat Bracket			
4	2	1134-0240-00	Screw			
5	2	9747-0831-02	Lock Nut			
6	1	1134-5454-01	Catch			
7	1	9675-0012-02	Locking washer			
10	4	9893-0616-16	Screw			
11	1	1134-5300-01	Rear Plate, Yellow			
12	1	1134-5296-04	Seat Bracket (Yellow)			
13	1	1134-4256-01	Spring			
14	1	9924-1235-19	Screw			
15	1	9747-1231-02	Nut			
16	1	9997-0840-16	Screw			
17	1	1134-1565-06	Spacer			
18	1	1134-5302-01	Spring			
19	1	1134-5299-01	Push Plate			
20	1	9699-0090-02	Washer			
21	1	9747-0831-02	Lock Nut			
22	1	1134-3156-02	Switch			
26	2	9897-0880-12	Screw	L = 80 mm		
27	2	1134-1565-08	Spacer			
28	4	9897-0820-16	Screw	L = 20 mm		
29	6	9747-0831-02	Lock Nut			


Steering

Ref.nr.	Qty	Item number	Description	Notes	From	Up to
1	1	1134-6374-10	Chain			
3	1	1134-9099-01	Steering Wire			
7	4	1134-2824-02	Chain Lock			
8	2	1134-5652-01	Attachment			
9	4	1134-5651-01	Bracket			
10	2	1134-2816-01	Sprocket			
11	2	1134-0041-02	Bushing			
12	2	1134-4817-01	Pin			
13	2	9699-0035-02	Washer			
14	2	9599-0054-02	Split Pin			
15	2	1134-3817-01	Spring			
16	2	9699-0090-02	Washer			
17	2	9747-0831-02	Lock Nut			
18	4	1134-2816-01	Sprocket			
19	4	1134-5653-01	Spacer			
20	2	9699-0035-02	Washer			
21	2	9997-1060-12	Screw			
22	2	9739-1031-22	Nut			
23	2	9897-1060-12	Screw			
24	2	9731-1031-22	Nut			
25	2	1134-9025-01	Steering Pulley			
26	2	1134-0041-01	Bushing			
27	2	1134-0046-00	Wire Clamp			
28	2	9997-1040-16	Screw			
29	2	9699-0035-02	Washer			
30	2	9739-1031-22	Nut			
31	1	1134-5349-01	Steering Console (Yellow) 1-00			
32	4	9897-0820-16	Screw			
33	4	9739-0831-22	Nut			
34	1	1134-1305-05	Steering Column,Lower			
35	2	1134-1901-01	Bearing			
36	1	1134-2821-05	Steering Rod			
41	2	9893-0616-16	Screw			
42	1	1134-2837-03	Spacer			
52	1	1134-5496-01	Steering Wheel			

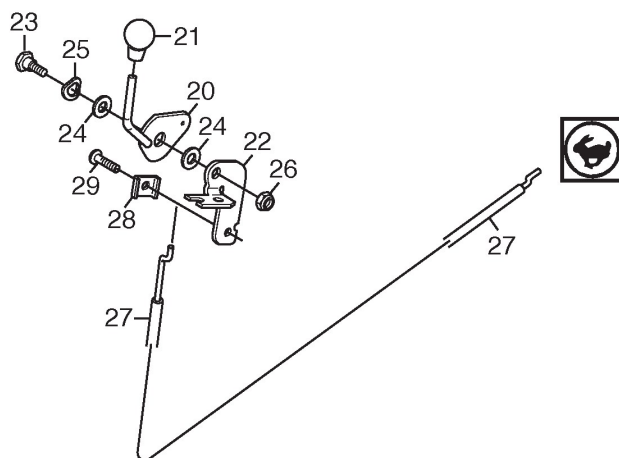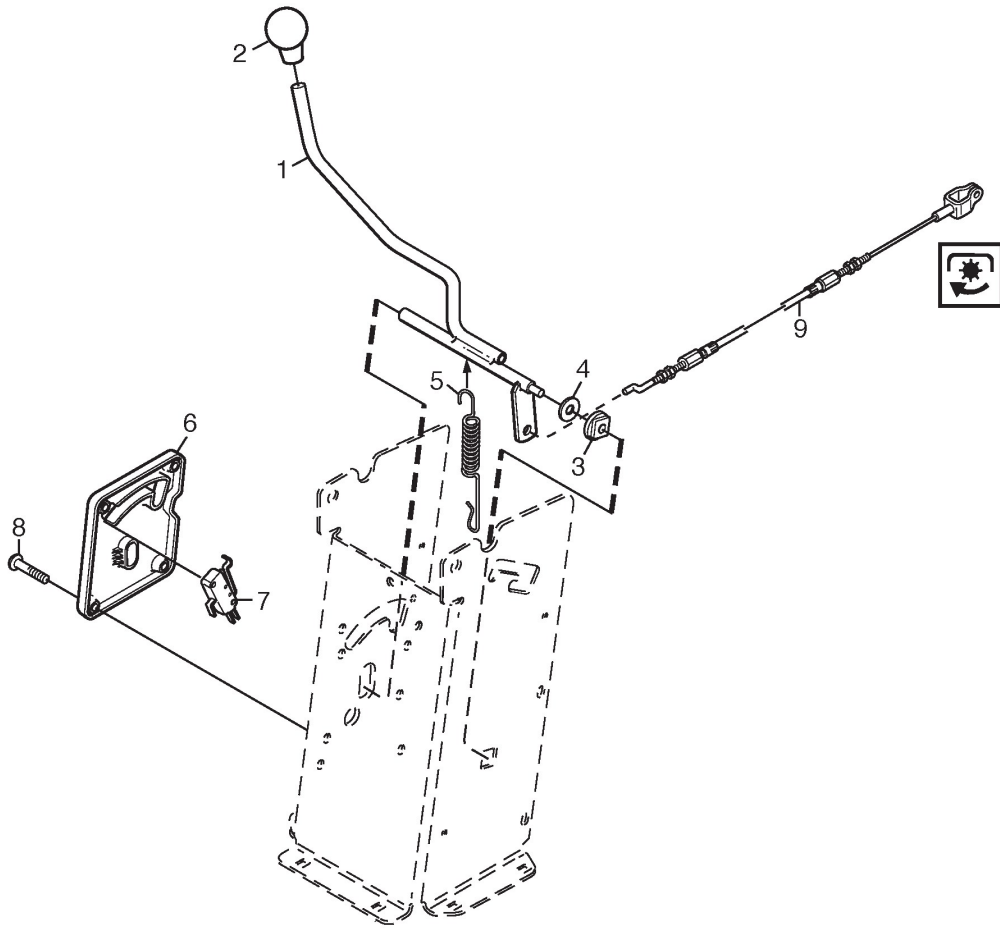  


Hand controls

Ref.nr.	Qty	Item number	Description	Notes	From	Up to
1	1	1134-6301-01	Engage Lever			
2	1	1134-2551-01	Knob			
3	1	1134-3790-02	Bearing			
4	1	9699-0090-02	Washer			
5	1	4231-0013-00	Spring			
6	1	1134-5368-01	Dashboard			
7	1	9400-0312-01	Microswitch			
8	4	9946-0525-16	Screw			
9	1	1134-3573-05	Control Cable			
20	1	1134-5465-01	Throttle Control Lever			
21	1	1134-4078-01	Knob			
22	1	1134-5464-01	Bracket			
23	1	1134-0240-00	Screw			
24	2	1134-4242-01	Washer			
25	1	9694-0001-00	Washer			
26	1	9747-0831-02	Lock Nut			
27	1	1134-4197-03	Throttle Cable			
28	1	9500-9991-00	Wire Clamp			
29	1	9943-0516-16	Screw			

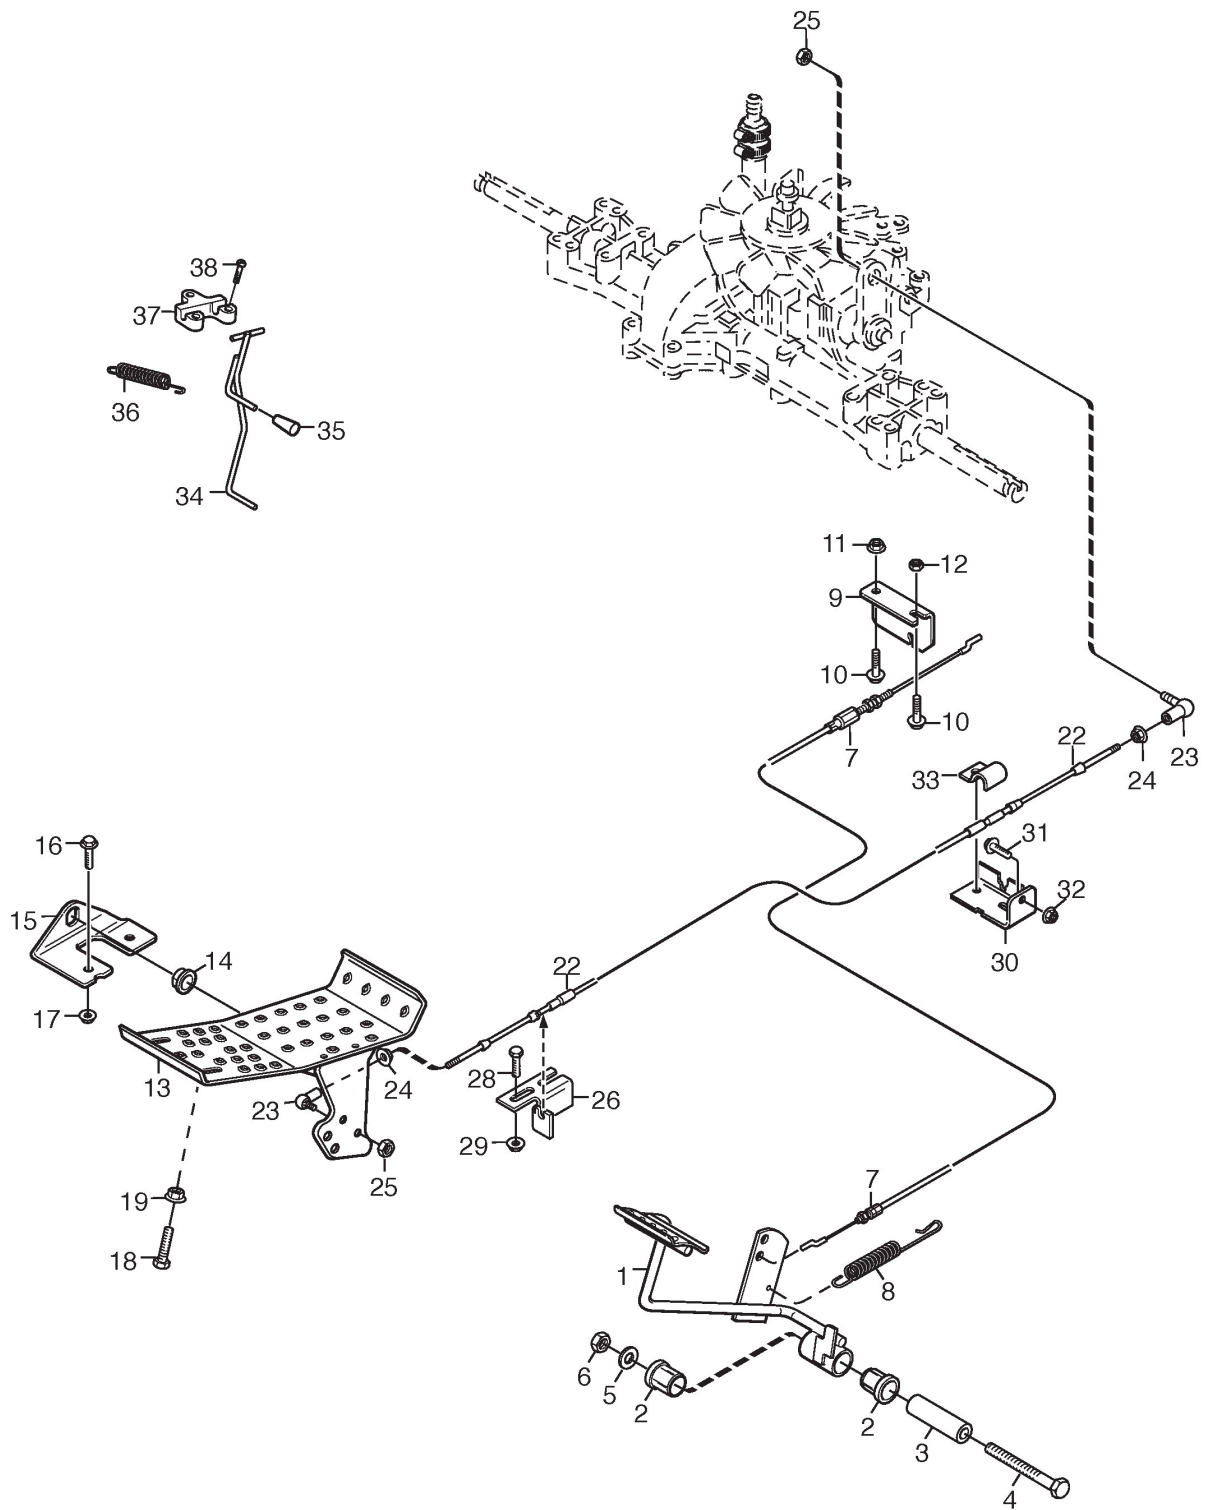 


Foot controls

Ref.nr.	Qty	Item number	Description	Notes	From	Up to
1	1	1134-5655-01	Clutch Pedal			
2	1	1134-9024-01	Bearing	Sats 4 st/kit of 4		
3	1	1134-5677-02	Spacer			
4	1	9997-1070-12	Screw			
5	1	9699-0030-02	Washer			
6	1	9739-1031-22	Nut			
7	1	1134-6005-01	Control Cable			
8	1	4231-0013-00	Spring			
9	1	1134-3906-01	Cabel Holder			
9	1	1134-6467-01	Cable Holder			
10	2	9959-0820-16	Screw			
11	1	9739-0831-22	Nut			
12	1	9747-0831-02	Lock Nut			
13	1	1134-6353-01	Drive Pedal			
14	2	1134-6313-01	Bearing			
15	2	1134-2700-01	Bracket			
16	2	9959-0820-16	Screw			
17	2	9739-0831-22	Nut			
18	1	9997-0835-16	Screw			
19	1	9739-0831-22	Nut			
22	1	1134-2766-05	Speed Control Cable			
23	2	9570-0001-00	Elbow Link			
24	2	9739-0531-22	Nut			
25	2	9747-0531-02	Nut			
26	1	1134-6317-01	Wire Bracket			
28	2	9959-0620-16	Screw			
29	2	9739-0631-22	Nut			
30	1	1134-3395-01	Attachment			
31	2	9959-0820-16	Screw			
32	2	9739-0831-22	Nut			
33	1	1134-2021-01	Clamp			
34	1	1134-5353-01	Brake Rod			
35	1	1134-2786-01	Knob			
36	1	1131-1497-01	Brake Spring			
37	1	1134-4002-01	Brake Rod Attachment			
38	3	9838-9516-12	Screw			

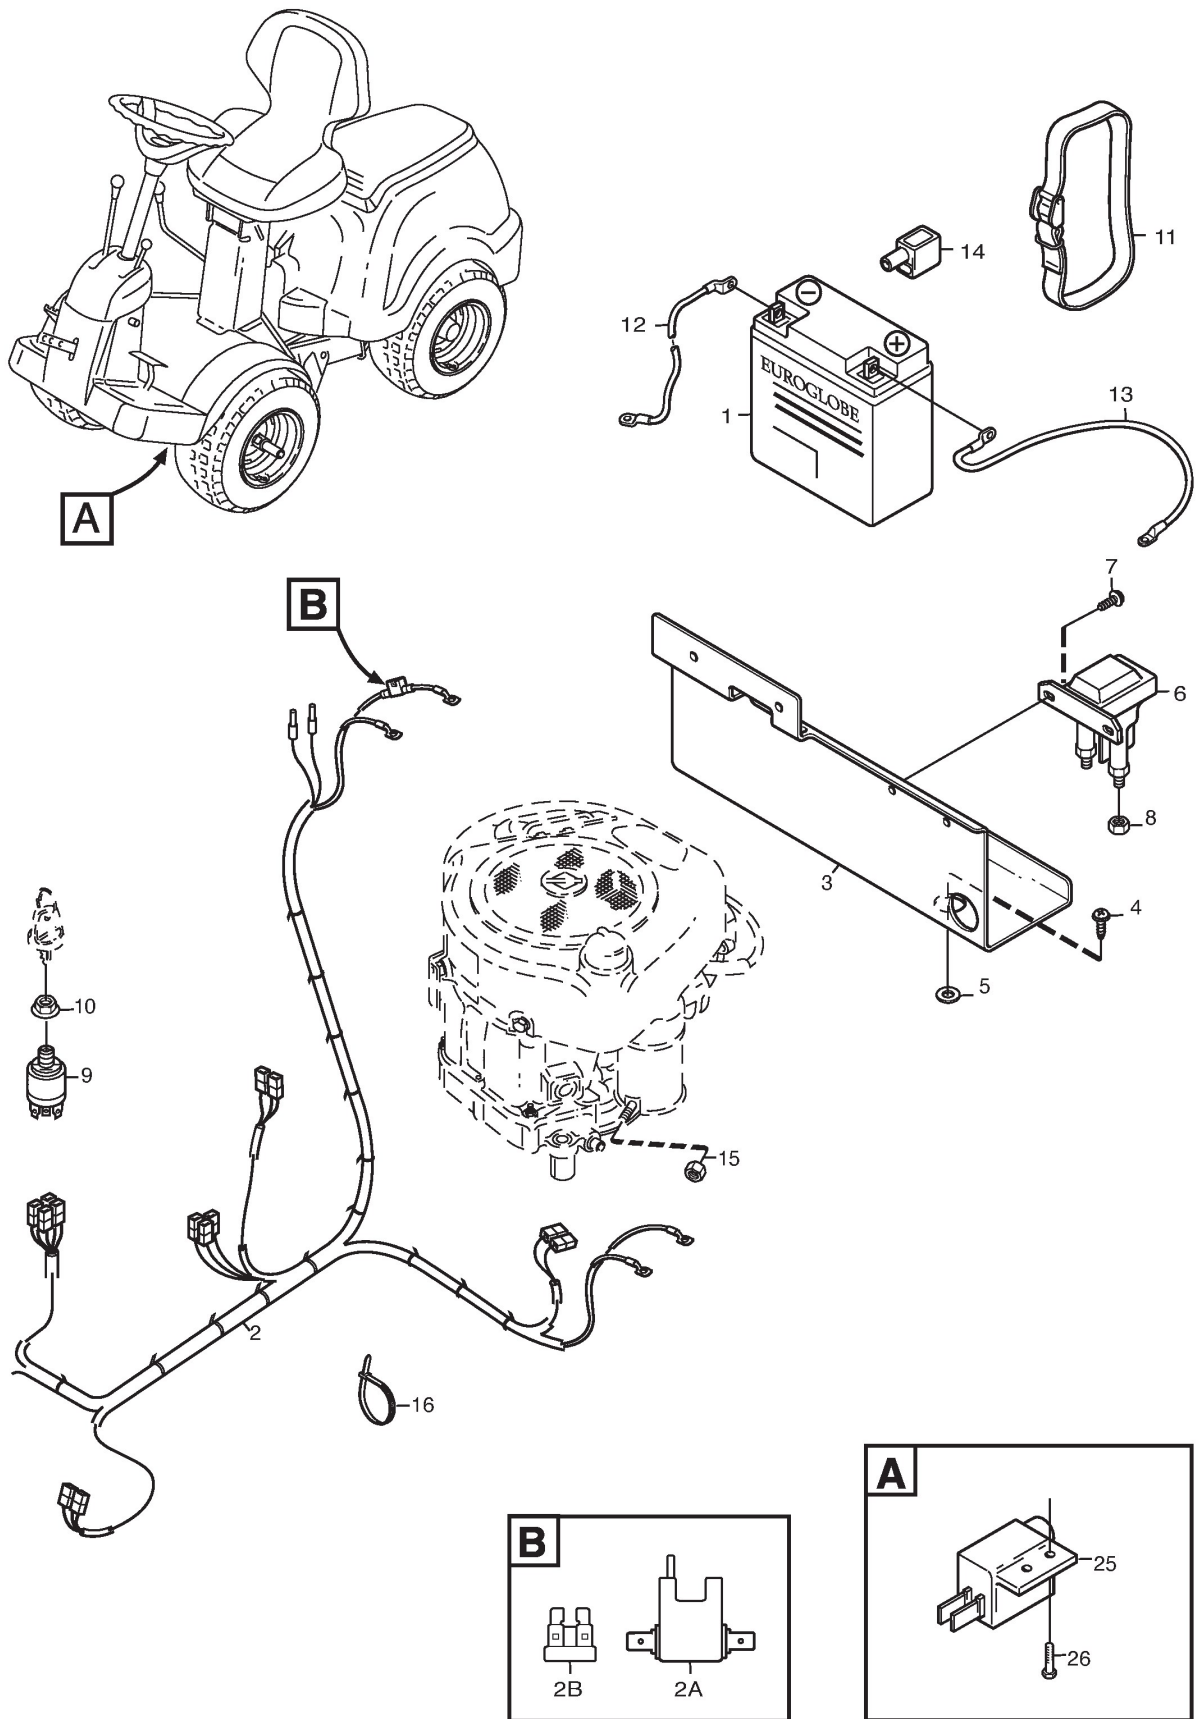 


Electric system

Ref.nr.	Qty	Item number	Description	Notes	From	Up to
1	1	1134-4804-01	Battery			
2	1	1134-3496-06	Fuse (20A) Yellow	20A		
2	1	1134-5769-01	Harness (Park Compact Hst)	Inkl. pos 2A		
2	1	9400-0327-01	Fuse Holder Incl Fuse	Inkl. pos 2B		
3	1	1134-5343-01	Battery Bracket			
4	3	9852-8013-16	Screw			
5	2	9699-0060-02	Washer			
6	1	1134-2962-01	Solenoid			
7	2	9852-8013-16	Screw			
8	2	9794-5131-02	Nut			
9	1	1134-4093-01	Ignition Switch			
10	1	1134-4749-01	Nut			
11	1	1134-5245-01	Battery Strap			
12	1	1134-2167-01	Cable			
13	1	1134-0234-02	Battery Cable (+)			
14	1	1134-2310-01	Guard Cap (+)			
15	1	9795-3531-02	Nut			
16	15	9579-0003-00	Cable Holder			
25	1	1134-3399-02	Switch			
26	2	9943-0516-16	Screw			

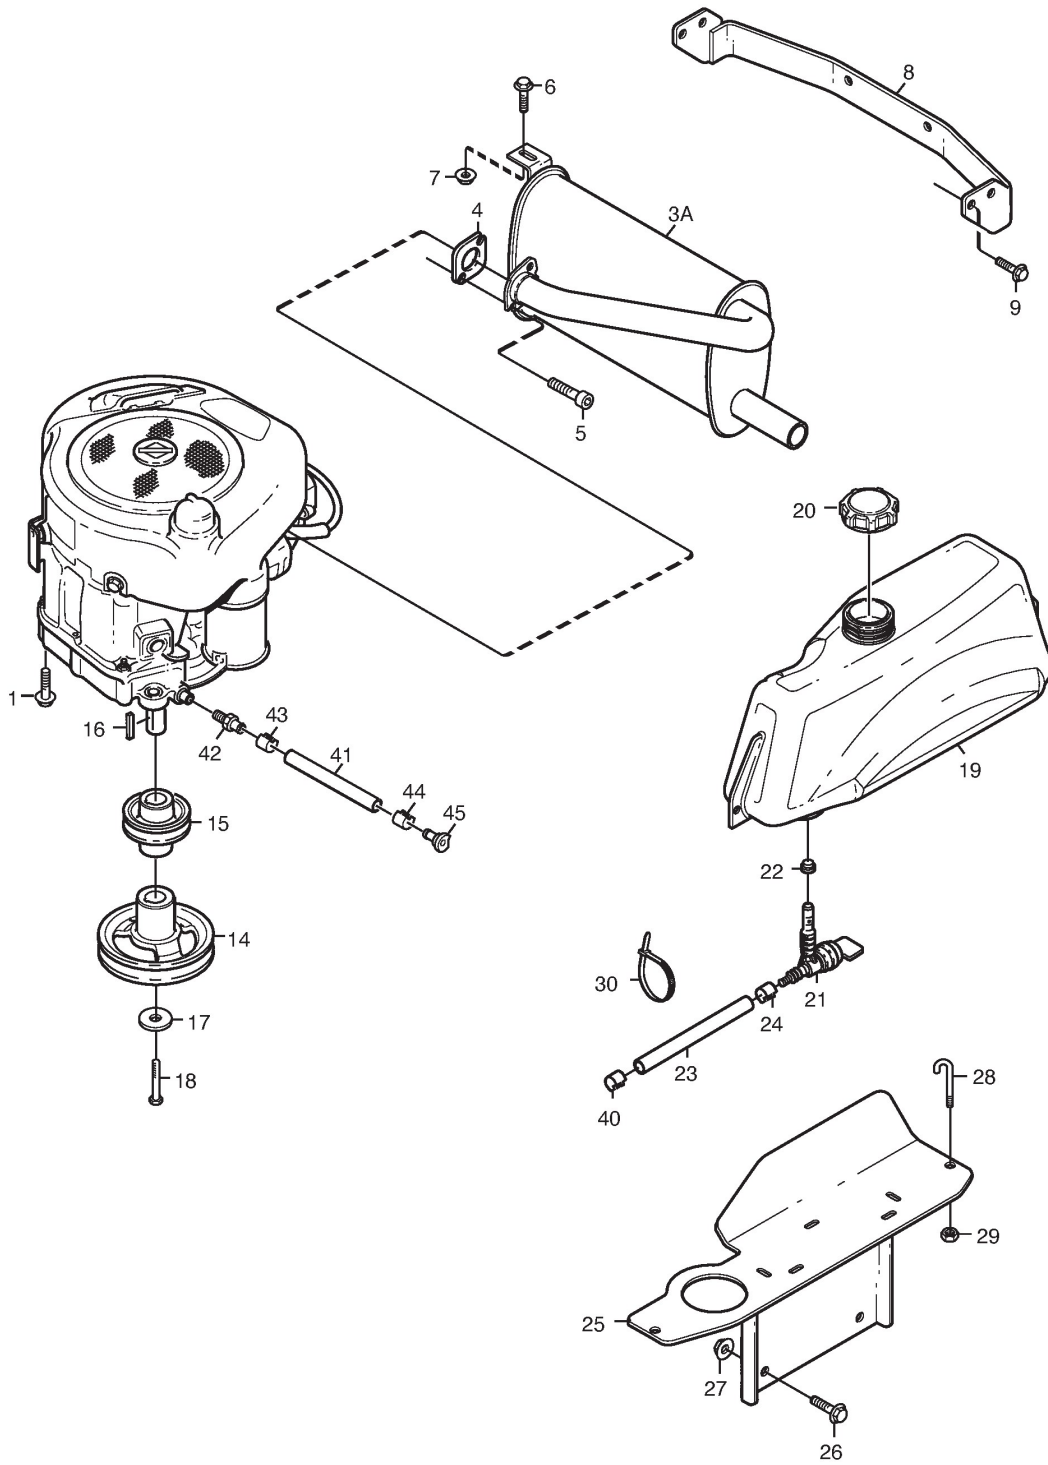 


Engine

Ref.nr.	Qty	Item number	Description	Notes	From	Up to
1	4	9955-3725-16	Screw	3/8" UNC x 25 mm		
3A	1	1134-7784-01	Muffler Assy			
4	1	1134-0433-00	Gasket			
5	2	1134-4930-01	Screw			
6	1	9959-0820-16	Screw			
7	1	9739-0831-22	Nut			
8	1	1134-5390-01	Tow Bar Bracket			
9	4	9945-0816-16	Screw			
14	1	1134-6419-01	Engine Pulley			
15	1	1134-6137-01	Engine Belt Pulley			
16	1	9600-0251-01	Key	L = 2 1/2"		
17	1	1134-5017-01	Washer			
18	1	9987-5332-16	Screw			
19	1	1134-6618-01	Fuel Tank			
20	1	1134-5532-01	Fuel Tank Cap			
21	1	1134-3224-01	Fuel Shut-Off Valve			
22	1	1134-3225-01	Grommet			
24	1	9578-0023-02	Hose Clamp			
25	1	1134-6627-01	Fuel Tank Bracket			
26	2	9959-0820-16	Screw			
27	2	9739-0831-22	Nut			
28	2	1134-5346-01	Fuel Tank Loop			
29	2	9747-0631-02	Lock Nut			
30	1	9579-0003-00	Cable Holder			
40	1	9578-0023-02	Hose Clamp			
41	1	1134-5827-01	Oil Drain Assy	Pos 42-45 incl.		
42	1	1134-5825-01	Nipple			
43	1	9578-0023-04	Hose Clamp			
44	1	1134-3499-02	Hose Clamp			
45	1	1134-5826-01	Plug			

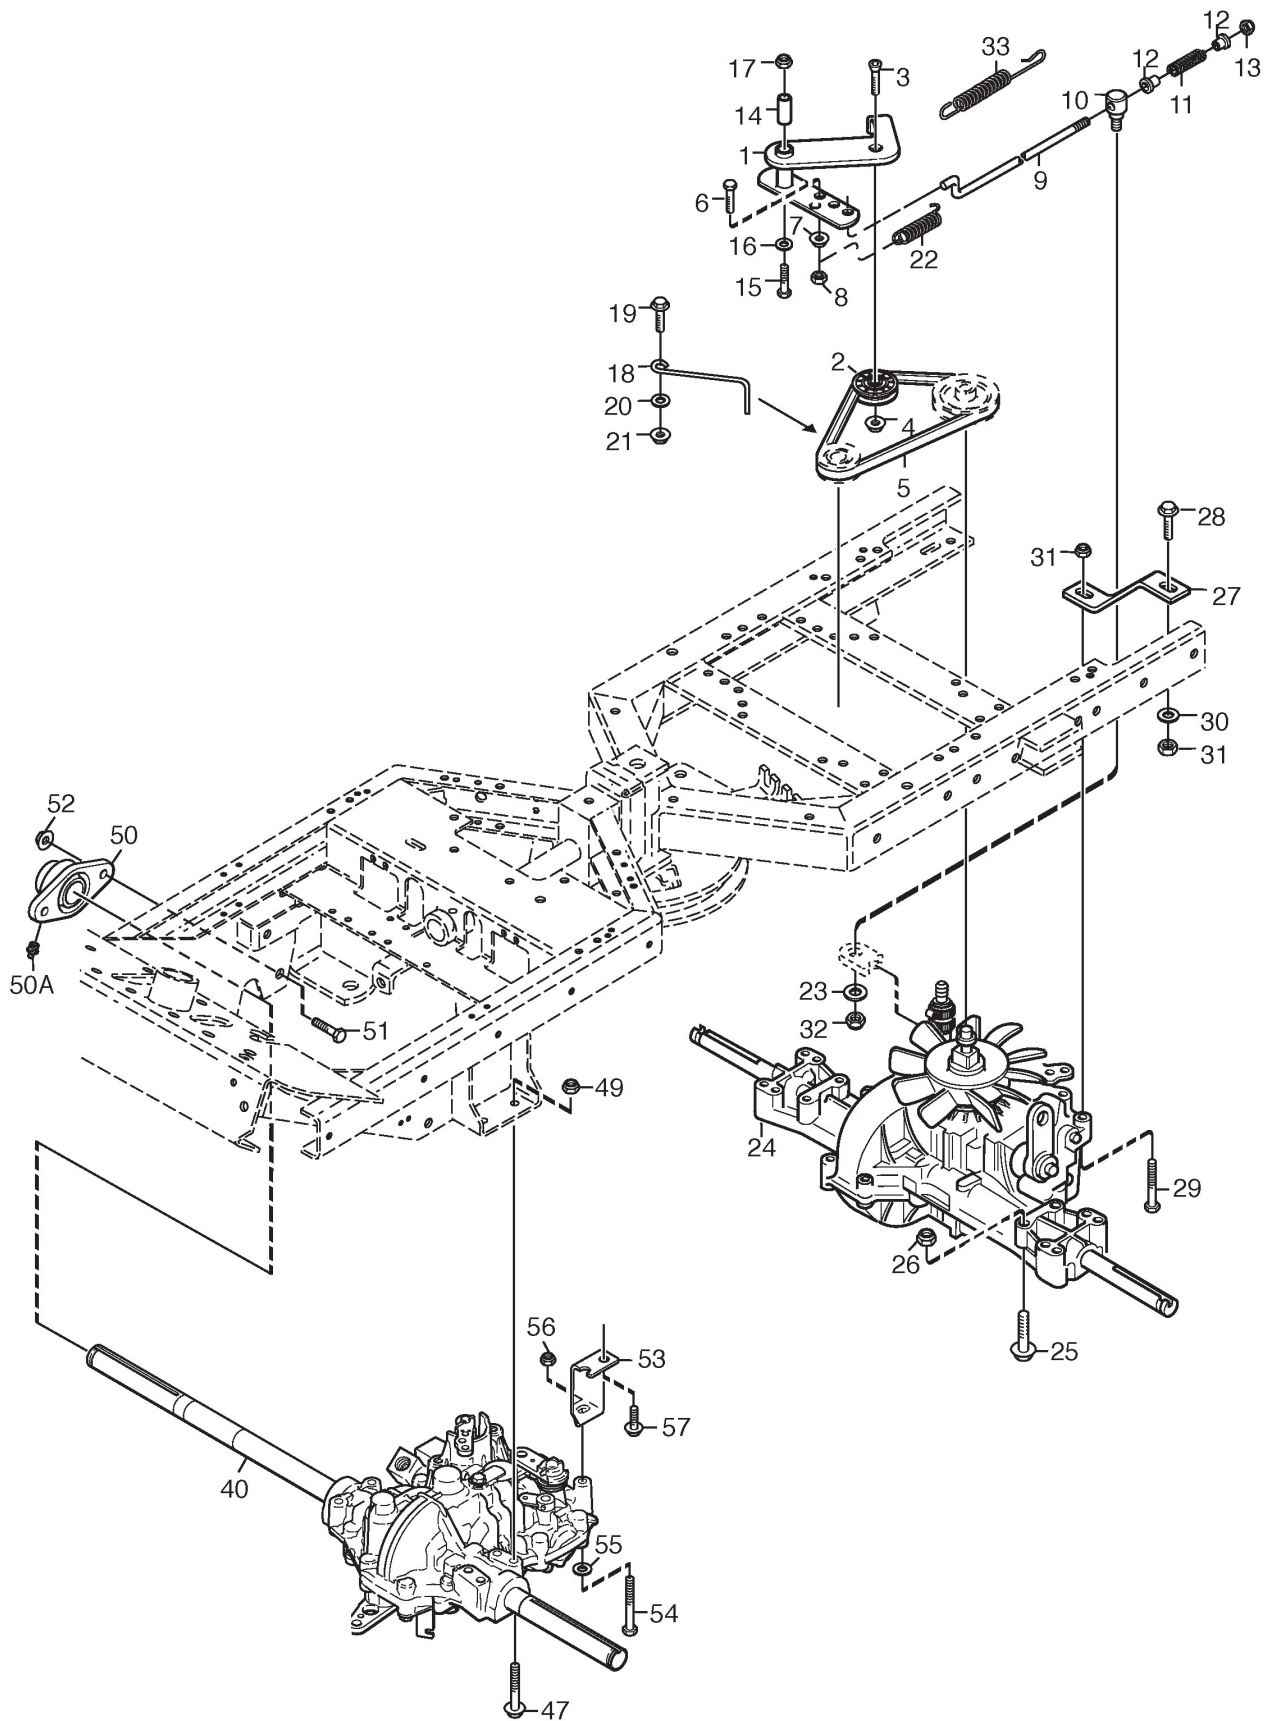 




Transmission

Ref.nr.	Qty	Item number	Description	Notes	From	Up to
1	1	1134-4000-02	Tension Arm			
2	1	1134-3459-01	Tension Roller			
3	1	9924-1035-16	Screw			
4	1	9799-1031-02	Nut			
5	1	1134-9058-01	V-Belt	= 9585-0091-01		
6	1	9997-0625-16	Screw			
7	1	9739-0631-22	Nut			
8	1	9747-0631-02	Lock Nut			
9	1	1134-3377-02	Control Rod			
10	1	1134-4171-01	Pivot Pin			
11	1	1134-4183-01	Spring			
12	2	1134-3456-01	Bushing			
13	1	9747-0631-02	Lock Nut			
14	1	1134-1565-08	Spacer			
15	1	9997-0870-16	Screw			
16	1	9699-0056-02	Washer			
17	1	9747-0831-02	Lock Nut			
18	1	1134-3289-02	Belt Guide			
19	1	9959-0820-16	Screw			
20	1	9699-0056-02	Washer			
21	1	9739-0831-22	Nut			
22	1	1134-6414-01	Spring			
23	1	9699-0060-02	Washer			
24	1	1134-6394-01	Transaxle (Kanzaki K574G)	Kanzaki K574G		
25	4	9960-0860-12	Screw			
26	4	9747-0831-02	Lock Nut			
27	1	1134-3913-01	Strut			
28	1	9959-0825-16	Screw			
29	1	9997-0845-12	Screw			
30	1	9699-0090-02	Washer			
31	2	9747-0831-02	Lock Nut			
32	1	9747-0631-02	Lock Nut			
33	1	4231-0013-00	Spring			
40	1	1134-6029-01	Front Motor Unit (Ktm10M)	Kanzaki KTM 10M		
47	2	9960-0860-12	Screw			
49	2	9747-0831-02	Lock Nut			
50	1	1134-5703-01	Flange Bearing Unit			
50A	1	9501-0500-00	Grease Dispenser			
51	2	9997-1040-16	Screw			
52	2	9731-1031-22	Nut			
53	1	1134-5670-01	Strut			
54	1	9997-0880-16	Screw			
55	1	9699-0090-02	Washer			
56	1	9747-0831-02	Lock Nut			
57	2	9945-0816-16	Screw			

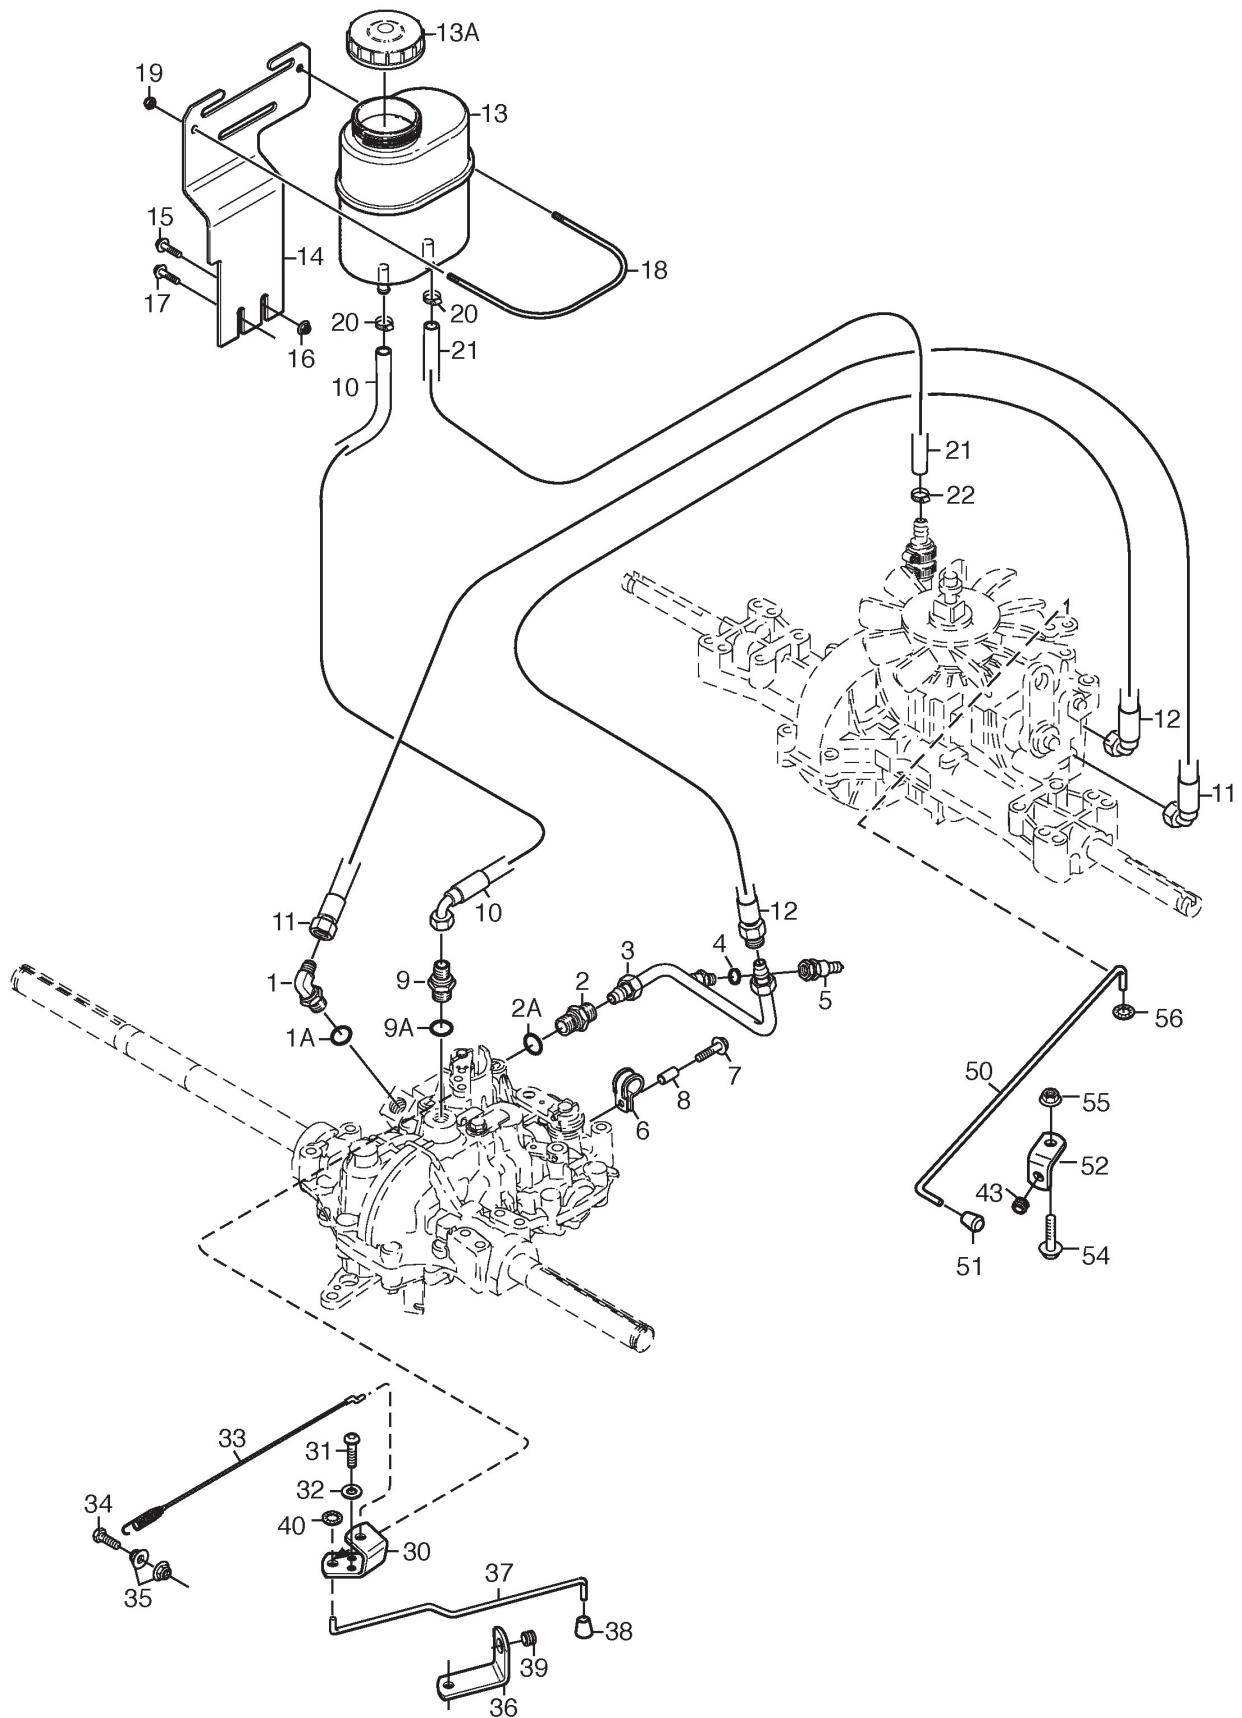 



Transmission

Ref.nr.	Qty	Item number	Description	Notes	From	Up to
1	1	1134-6044-01	Hydraulic Angle Coupling	"3/4" x 9/16" "		
1	1	9404-0029-01	O-ring			
2	1	1134-5875-01	Hydraulic Coupling	"3/4" "		
2	1	9404-0029-01	O-ring			
3	1	1134-6039-01	Hydraulic Pipe Assy			
4	1	1134-4948-01	Washer	"1/4" "		
5	1	1134-6042-01	Quick Coupling-Male			
6	1	9578-0028-01	Tube Clamp			
7	1	9959-0825-16	Screw			
8	1	1134-1565-09	Spacer			
9	1	1134-5809-01	Hydraulic Coupling	"3/4" x 9/16" "		
9	1	9404-0029-01	O-ring			
10	1	1137-0215-01	Hydraulic Hose	L = 1200		
11	1	1137-0195-01	Hydraulic Hose	L = 1275		
12	1	1137-0212-01	Hydraulic Hose	L = 1210		
13	1	1134-6011-01	Hydraulic Oil Tank Assy			
13	1	1137-0272-01	Tank Cap			
14	1	1134-6009-01	Tank Bracket			
15	1	9959-0820-16	Screw			
16	1	9739-0831-22	Nut			
17	1	9945-0816-16	Screw			
18	1	1134-6030-01	Tank Loop			
19	2	9747-0631-02	Lock Nut			
21	1	1134-2779-08	Tube	L = 165 mm		
22	1	9578-0023-04	Hose Clamp	15x8		
30	1	1134-6162-01	Bracket			
31	2	9939-0612-16	Screw			
32	2	9699-0025-02	Washer			
33	1	1134-6163-01	Wire			
34	1	9997-0835-12	Screw			
35	2	9739-0831-22	Nut			
36	1	1134-6084-01	Control Bracket			
37	1	1134-6083-01	Control Rod			
38	1	1134-4014-01	Knob			
39	1	1134-2790-01	Cable Protection			
40	1	9675-0009-02	Starlock			
50	1	1134-4015-01	Pull Rod			
51	1	1134-4014-01	Knob			
52	1	1134-4713-01	Angle Bracket			
53	1	1134-2790-01	Cable Protection			
54	1	9959-0820-16	Screw			
55	1	9739-0831-22	Nut			
56	1	9675-0009-02	Starlock			

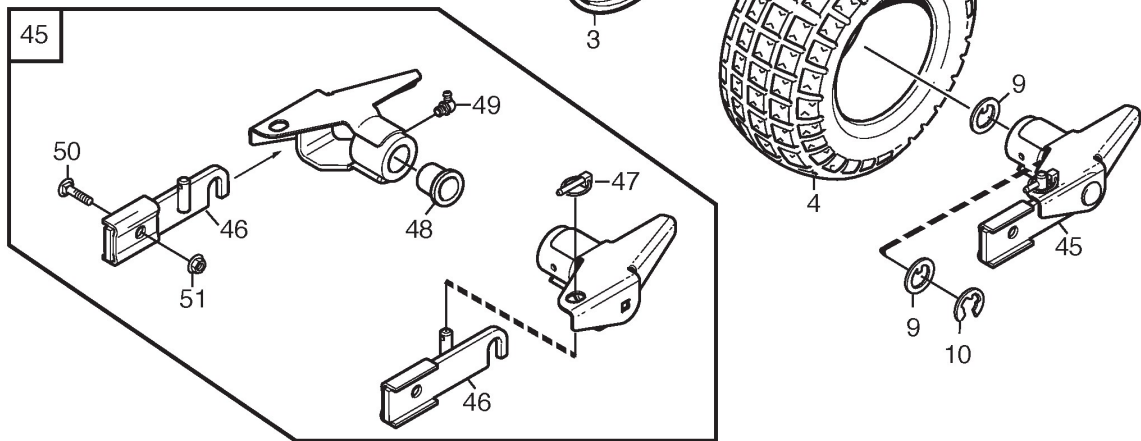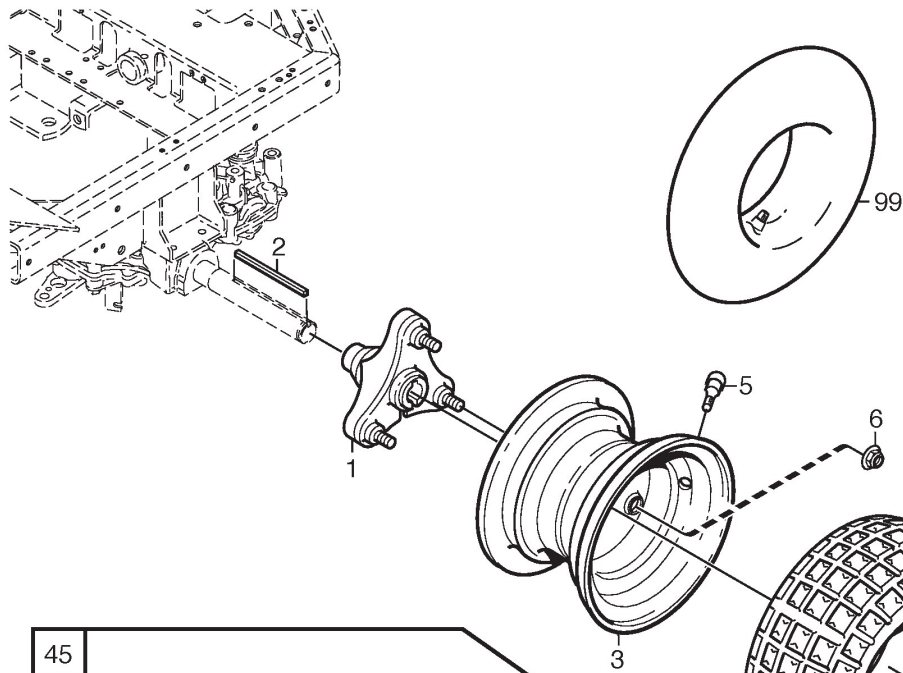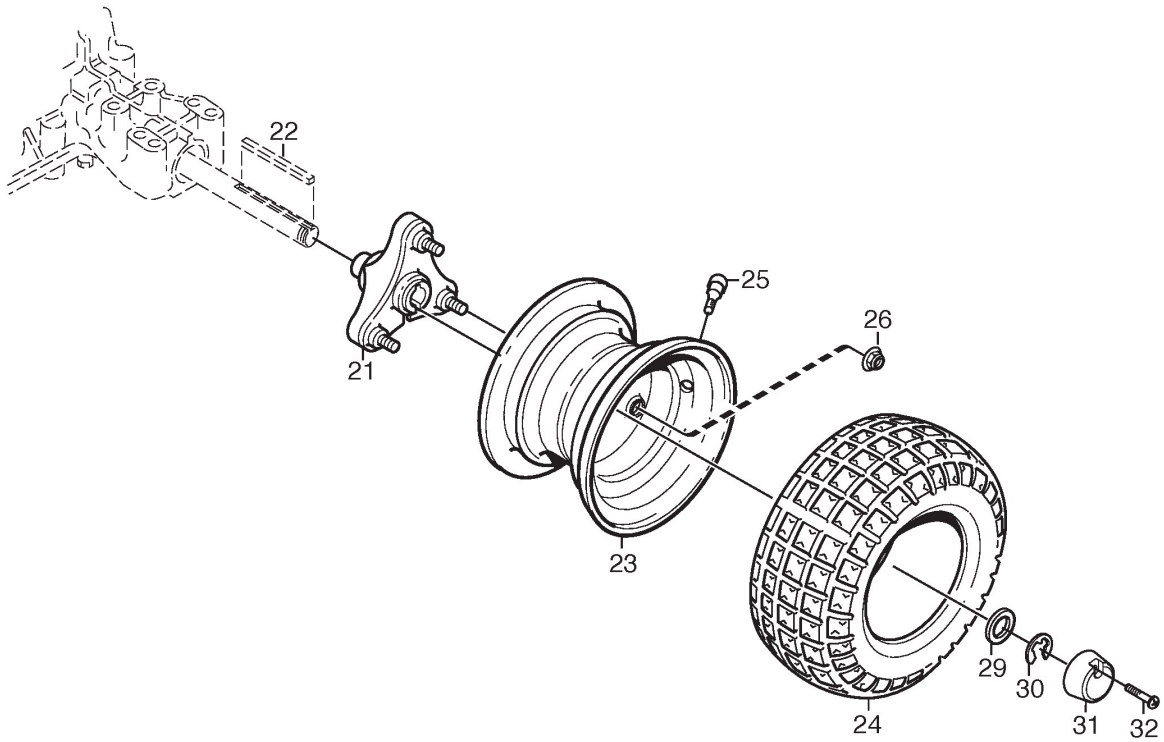   


Wheels

Ref.nr.	Qty	Item number	Description	Notes	From	Up to
1	2	1134-4844-03	Wheel Hub Assy			
2	2	1134-3383-02	Key			
3	2	1134-4558-01	Rim			
4	2	9545-0116-00	Tyre	16 x 7.50 - 8		
5	2	9545-0500-00	Valve Assy.			
6	6	9731-1031-22	Nut			
9	4	1134-5797-01	Washer			
10	2	9653-0002-04	Lock Ring			
21	2	1134-4844-02	Wheel Hub Assy			
22	2	1134-2471-01	Key			
23	2	1134-4558-01	Rim			
24	2	9545-0116-00	Tyre	16 x 7.50 - 8		
25	2	9545-0500-00	Valve Assy.			
26	6	9731-1031-22	Nut			
29	2	9699-0042-02	Washer			
30	2	9653-0001-04	Lock Ring			
31	2	1134-4796-01	Hub Cap			
32	2	9947-0540-19	Screw			
45	1	13-0993-61	Rac Quick Connection 4Wd	Inkl. pos 9,10,46-51		
46	1	1134-7465-01	Attachment Kit	Inkl. pos 51-51		
47	2	1137-0077-01	Locking Pin			
48	4	1134-5686-01	Bearing			
49	2	9501-0502-00	Grease Joint			
50	2	9898-1035-16	Screw			
51	2	9739-1031-22	Nut			
99	1	9545-0203-00	Inner Tube	Reservdel/spare part		

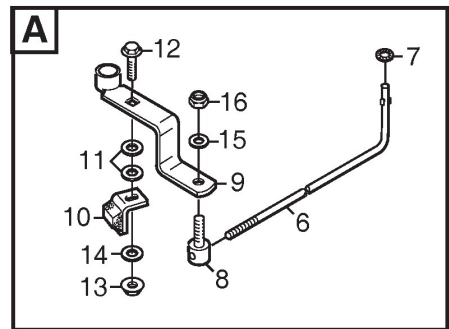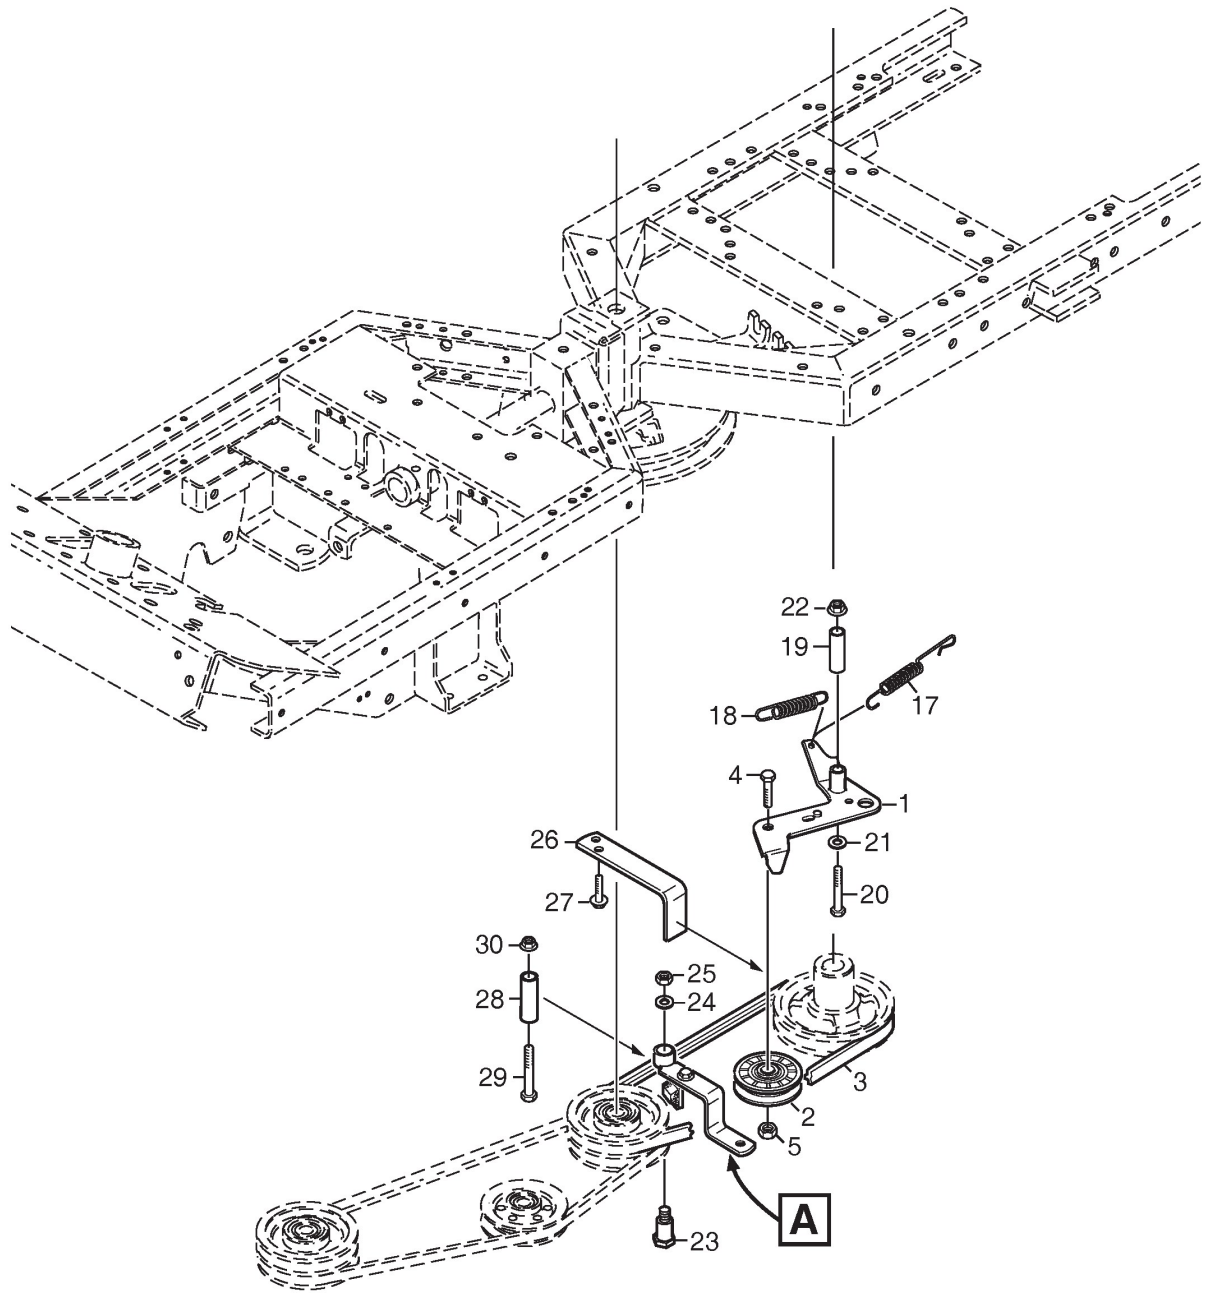  

Power take-off

Ref.nr.	Qty	Item number	Description	Notes	From	Up to
1	1	1134-2018-02	Tension Arm			
2	1	1134-9027-01	Tension Roller (Black)			
2	1	1134-9027-02	Tension Roller (Grey)			
3	1	1134-9071-01	Belt	= 9585-0129-01		
4	1	9997-1030-16	Screw			
5	1	9799-1031-02	Nut			
6	1	1134-4162-01	Brake Rod			
7	1	9675-0008-02	Starlock			
8	1	1134-4170-01	Nippel			
9	1	1134-4111-01	Brake Arm			
10	1	1134-4164-03	Brake Pad			
11	2	9699-0035-02	Washer			
12	1	9897-0825-16	Screw			
13	1	9747-0831-02	Lock Nut			
14	1	9699-0090-02	Washer			
15	1	9699-0025-02	Washer			
16	1	9747-0631-02	Lock Nut			
17	1	4231-0013-00	Spring			
18	1	1134-4231-01	Brake Spring			
19	1	1134-1565-10	Spacer			
20	1	9997-0860-16	Screw			
20	1	9997-0865-12	Screw			
21	1	9699-0056-02	Washer			
22	1	9739-0831-22	Nut			
23	1	1134-4163-01	Shoulder Bolt			
24	1	9699-0035-02	Washer			
25	1	9739-1031-22	Nut			
26	1	1134-3958-01	Belt Guide			
27	2	9893-0616-16	Screw			
28	1	1134-0041-03	Bushing			
29	1	9997-1070-12	Screw			
30	1	9739-1031-22	Nut			

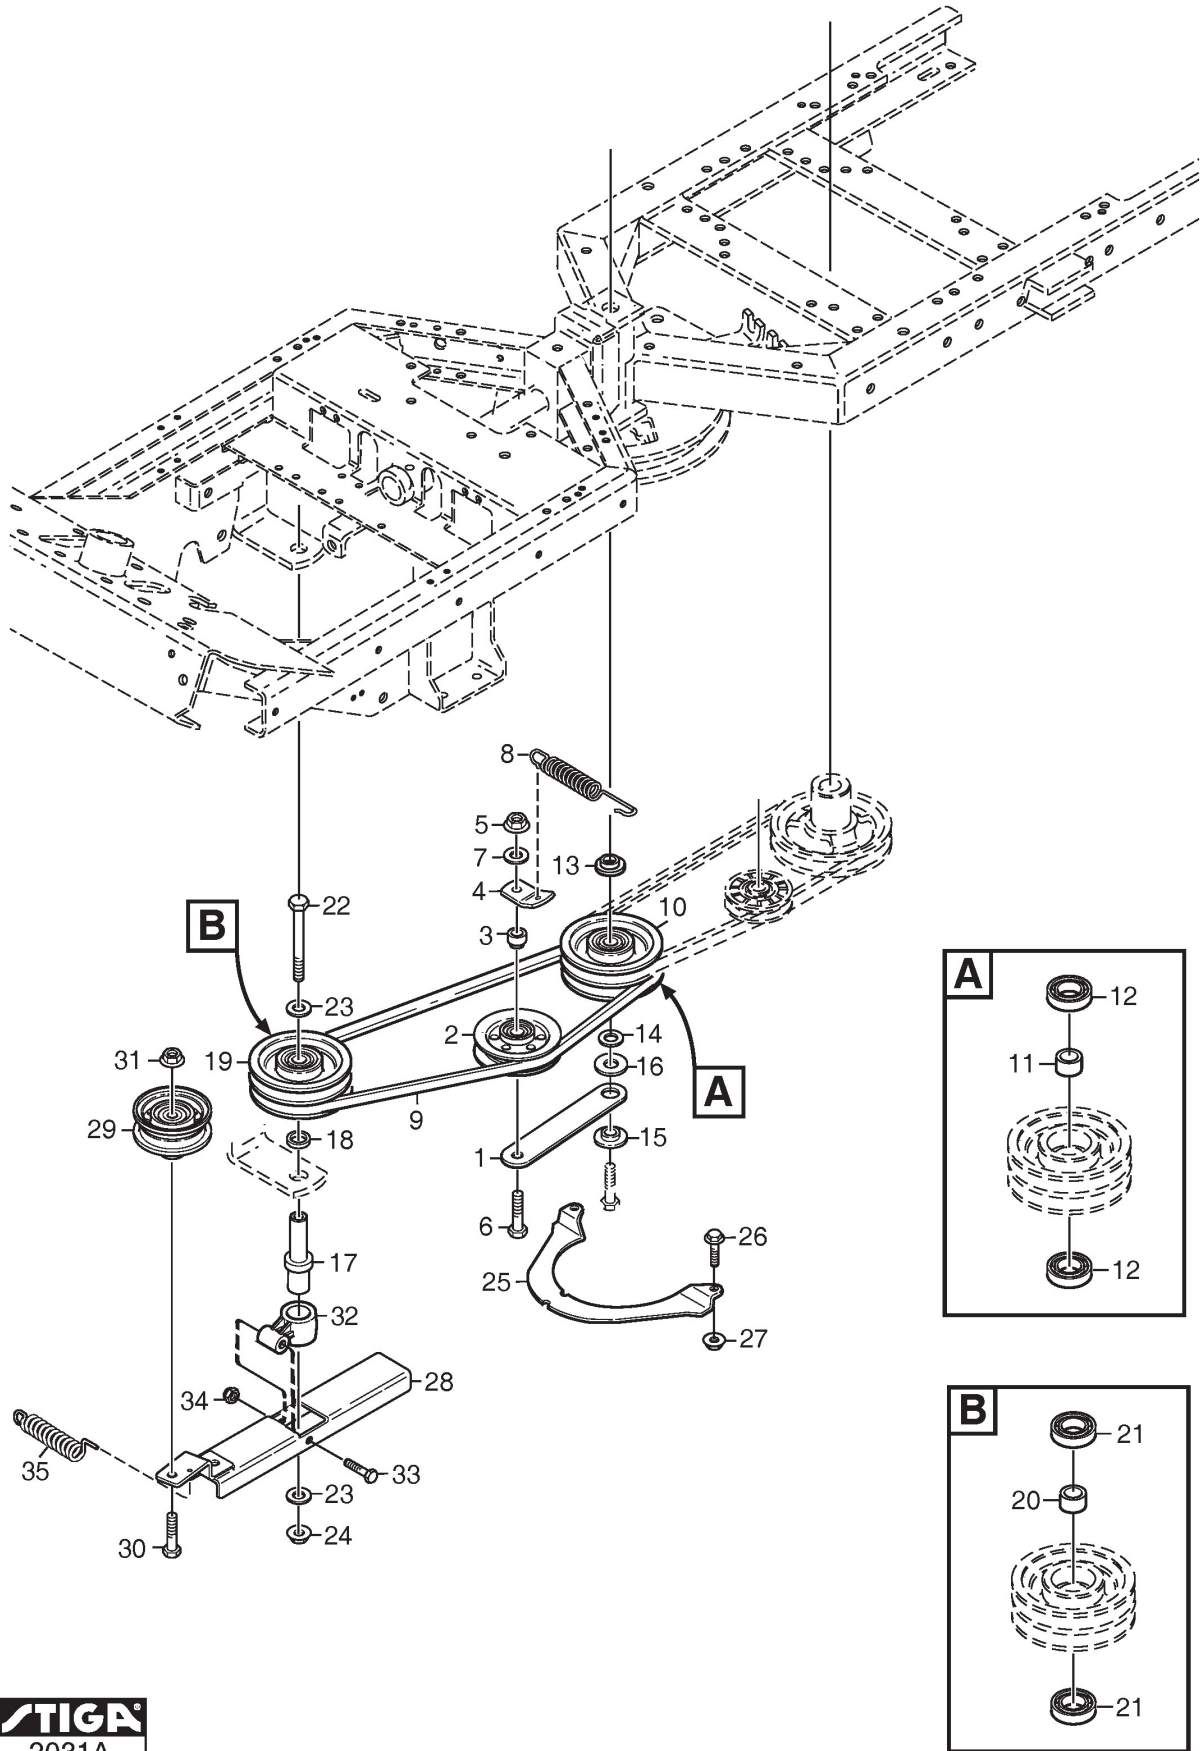 

Power take-off

Ref.nr.	Qty	Item number	Description	Notes	From	Up to
1	1	1134-1730-01	Tensioning Wheel Arm			
2	1	1134-3663-01	Tension Wheel			
3	1	1134-1888-05	Spacer			
4	1	1134-1893-01	Spring			
5	1	9739-1031-22	Nut			
6	1	9997-1060-12	Screw			
7	1	9699-0035-02	Washer			
8	1	1134-5713-01	Spring			
9	1	1134-9098-01	Drive Belt	= 9585-0148-01		
10	1	1134-1769-03	Centre Belt Pulley			
11	1	1134-0051-09	Spacer			
12	2	9549-0019-00	Ball Bearing			
13	1	1134-5548-01	Spacer			
14	1	9699-0035-02	Washer			
15	1	1134-0222-00	Washer			
16	1	9699-0109-02	Washer			
17	1	1134-5663-01	Shaft			
18	1	1134-0052-00	Spacer			
19	1	1134-1769-03	Centre Belt Pulley			
20	1	1134-0051-09	Spacer			
21	2	9549-0019-00	Ball Bearing			
22	1	9997-1011-06	Screw			
23	2	9699-0030-02	Washer			
24	1	9739-1031-22	Nut			
25	1	1134-3654-01	Guard			
26	2	9959-0612-16	Screw			
27	2	9739-0631-22	Nut			
28	1	1134-5660-01	Tension Arm Assy			
29	1	1134-5823-01	Tension Roller Assy			
30	1	9997-1050-16	Screw			
31	1	9739-1031-22	Nut			
32	1	1134-6314-01	Tension Arm Attachment			
33	1	9997-0645-12	Screw			
34	1	9747-0631-02	Lock Nut			
35	1	1134-5824-01	Spring			